

**ISUZU Diagnostics List**  
(Note:For reference only)

| model   | year      | department | system                          | subitem | function            | subfunction                                   |
|---------|-----------|------------|---------------------------------|---------|---------------------|-----------------------------------------------|
| Transit | 1996-2018 | Engine     | Delphi Euro II                  |         | Version Information |                                               |
| Transit | 1996-2018 | Engine     | Delphi Euro II                  |         | Read DTCs           |                                               |
| Transit | 1996-2018 | Engine     | Delphi Euro II                  |         | Clear DTCs          |                                               |
| Transit | 1996-2018 | Engine     | Delphi Euro II                  |         | Read data streams   |                                               |
| Transit | 1996-2018 | Engine     | Delphi Euro II                  |         | Actuation test      |                                               |
| Transit | 1996-2018 | Engine     | BOSCH diesel Engine Euro IV     |         | Version Information |                                               |
| Transit | 1996-2018 | Engine     | BOSCH diesel Engine Euro IV     |         | Read DTCs           |                                               |
| Transit | 1996-2018 | Engine     | BOSCH diesel Engine Euro IV     |         | Clear DTCs          |                                               |
| Transit | 1996-2018 | Engine     | BOSCH diesel Engine Euro IV     |         | Read data streams   |                                               |
| Transit | 1996-2018 | Engine     | BOSCH diesel Engine Euro IV     |         | Actuation test      |                                               |
| Transit | 1996-2018 | Engine     | BOSCH diesel Engine Euro IV     |         | Special functions   | Injector match                                |
| Transit | 1996-2018 | Engine     | BOSCH diesel Engine Euro IV     |         | Special functions   | VDS Information                               |
| Transit | 1996-2018 | Engine     | BOSCH diesel Engine Euro IV     |         | Special functions   | Function test                                 |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.2  |         | Version Information |                                               |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.2  |         | Read DTCs           |                                               |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.2  |         | Clear DTCs          |                                               |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.2  |         | Read data streams   |                                               |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.2  |         | Actuation test      |                                               |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.2  |         | Special functions   | Injector match                                |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.2  |         | Special functions   | Write VIN                                     |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.2  |         | Special functions   | Leak test                                     |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.2  |         | Version Information |                                               |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.2  |         | Read DTCs           |                                               |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.2  |         | Clear DTCs          |                                               |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.2  |         | Read data streams   |                                               |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.2  |         | Actuation test      |                                               |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.2  |         | Special functions   | Injector match                                |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.2  |         | Special functions   | Write VIN                                     |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.2  |         | Special functions   | Leak test                                     |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.1  |         | Version Information |                                               |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.1  |         | Read DTCs           |                                               |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.1  |         | Clear DTCs          |                                               |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.1  |         | Read data streams   |                                               |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.1  |         | Actuation test      |                                               |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.1  |         | Special functions   | Injector match                                |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.1  |         | Special functions   | Write VIN                                     |
| Transit | 1996-2018 | Engine     | ECU Delphi Euro III Diesel 3.1  |         | Special functions   | Leak test                                     |
| Transit | 1996-2018 | Engine     | EGR system                      |         | Read DTCs           |                                               |
| Transit | 1996-2018 | Engine     | EGR system                      |         | Clear DTCs          |                                               |
| Transit | 1996-2018 | Engine     | EGR system                      |         | Read data streams   |                                               |
| Transit | 1996-2018 | Engine     | ECU Euro 3 gasoline with EOBD   |         | Version Information |                                               |
| Transit | 1996-2018 | Engine     | ECU Euro 3 gasoline with EOBD   |         | Read DTCs           |                                               |
| Transit | 1996-2018 | Engine     | ECU Euro 3 gasoline with EOBD   |         | Clear DTCs          |                                               |
| Transit | 1996-2018 | Engine     | ECU Euro 3 gasoline with EOBD   |         | Read data streams   |                                               |
| Transit | 1996-2018 | Engine     | ECU Euro 3 gasoline with EOBD   |         | Actuation test      |                                               |
| Transit | 1996-2018 | Engine     | ECU Euro 3 gasoline with EOBD   |         | Special functions   | Gear learning                                 |
| Transit | 1996-2018 | Engine     | ECU Euro 3 gasoline with EOBD   |         | Special functions   | Program refresh date                          |
| Transit | 1996-2018 | Engine     | ECU Euro 3 gasoline with EOBD   |         | Special functions   | Write diagnostic tool S/N or repair shop code |
| Transit | 1996-2018 | Engine     | ECU Euro 3 gasoline with EOBD   |         | Special functions   | Refresh VIN                                   |
| Transit | 1996-2018 | Engine     | ECU Euro 2 gasoline             |         | Read DTCs           |                                               |
| Transit | 1996-2018 | Engine     | ECU Euro 2 gasoline             |         | Clear DTCs          |                                               |
| Transit | 1996-2018 | Engine     | ECU Euro 2 gasoline             |         | Read data streams   |                                               |
| Transit | 1996-2018 | Engine     | ECU Euro 2 gasoline             |         | Actuation test      |                                               |
| Transit | 1996-2018 | Engine     | Delphi gasoline engine (Euro V) |         | Version Information |                                               |
| Transit | 1996-2018 | Engine     | Delphi gasoline engine (Euro V) |         | Read DTCs           |                                               |
| Transit | 1996-2018 | Engine     | Delphi gasoline engine (Euro V) |         | Clear DTCs          |                                               |
| Transit | 1996-2018 | Engine     | Delphi gasoline engine (Euro V) |         | Read data streams   |                                               |
| Transit | 1996-2018 | Engine     | Delphi gasoline engine (Euro V) |         | Actuation test      |                                               |
| Transit | 1996-2018 | Engine     | ECU Euro 3 gasoline             |         | Read DTCs           |                                               |
| Transit | 1996-2018 | Engine     | ECU Euro 3 gasoline             |         | Clear DTCs          |                                               |
| Transit | 1996-2018 | Engine     | ECU Euro 3 gasoline             |         | Read data streams   |                                               |

| model   | year      | department         | system              | subitem | function            | subfunction                                                                 |
|---------|-----------|--------------------|---------------------|---------|---------------------|-----------------------------------------------------------------------------|
| Transit | 1996-2018 | Engine             | ECU Euro 3 gasoline |         | Actuation test      |                                                                             |
| Transit | 1996-2018 | Engine             | ECU Euro 3 gasoline |         | Special functions   | ECU reset                                                                   |
| Transit | 1996-2018 | Engine             | ECU Euro 3 gasoline |         | Special functions   | Refresh VIN                                                                 |
| Transit | 1996-2018 | Engine             | Siemens ECU         |         | Read DTCs           |                                                                             |
| Transit | 1996-2018 | Engine             | Siemens ECU         |         | Clear DTCs          |                                                                             |
| Transit | 1996-2018 | Engine             | Siemens ECU         |         | Read data streams   |                                                                             |
| Transit | 1996-2018 | Engine             | Siemens ECU         |         | Actuation test      |                                                                             |
| Transit | 1996-2018 | Engine             | Ford Transit 2.4L   |         | Read DTCs           |                                                                             |
| Transit | 1996-2018 | Engine             | Ford Transit 2.4L   |         | Clear DTCs          |                                                                             |
| Transit | 1996-2018 | Engine             | Ford Transit 2.4L   |         | Read data streams   |                                                                             |
| Transit | 1996-2018 | Engine             | Ford Transit 2.4L   |         | Special functions   | Refresh injector code                                                       |
| Transit | 1996-2018 | Engine             | Ford Transit 2.4L   |         | Special functions   | Reset diesel particulate filter pressure differential sensor learning value |
| Transit | 1996-2018 | Engine             | Ford Transit 2.4L   |         | Special functions   | Reset diesel particulate filter learning value                              |
| Transit | 1996-2018 | Engine             | Ford Transit 2.4L   |         | Special functions   | Reset water-in-fuel warning indicator                                       |
| Transit | 1996-2018 | Engine             | Ford Transit 2.4L   |         | Special functions   | Reset exhaust gas temperature value                                         |
| Transit | 1996-2018 | Engine             | Ford Transit 2.4L   |         | Special functions   | Reset fuel relief valve open counter learning value                         |
| Transit | 1996-2018 | Engine             | Ford Transit 2.4L   |         | Special functions   | Reset fuel relief valve open duration learning value                        |
| Transit | 1996-2018 | Engine             | Ford Transit 2.4L   |         | Special functions   | Fuel injection pump learning                                                |
| Transit | 1996-2018 | Engine             | Ford Transit 2.4L   |         | Special functions   | Diesel particulate filter static regeneration                               |
| Transit | 1996-2018 | ABS                | ABS(ABS)            |         | Version Information |                                                                             |
| Transit | 1996-2018 | ABS                | ABS(ABS)            |         | Read DTCs           |                                                                             |
| Transit | 1996-2018 | ABS                | ABS(ABS)            |         | Clear DTCs          |                                                                             |
| Transit | 1996-2018 | ABS                | ABS(ABS)            |         | Read data streams   |                                                                             |
| Transit | 1996-2018 | ABS                | Ford Transit 2.4L   |         | Read DTCs           |                                                                             |
| Transit | 1996-2018 | ABS                | Ford Transit 2.4L   |         | Clear DTCs          |                                                                             |
| Transit | 1996-2018 | ABS                | Ford Transit 2.4L   |         | Read data streams   |                                                                             |
| Transit | 1996-2018 | Body               | Ford Transit 2.4L   |         | Read DTCs           |                                                                             |
| Transit | 1996-2018 | Body               | Ford Transit 2.4L   |         | Clear DTCs          |                                                                             |
| Transit | 1996-2018 | Body               | Ford Transit 2.4L   |         | Read data streams   |                                                                             |
| Transit | 1996-2018 | Instrument cluster | Ford Transit 2.4L   |         | Read DTCs           |                                                                             |
| Transit | 1996-2018 | Instrument cluster | Ford Transit 2.4L   |         | Clear DTCs          |                                                                             |
| Transit | 1996-2018 | Instrument cluster | Ford Transit 2.4L   |         | Read data streams   |                                                                             |
| Transit | 1996-2018 | Airbag             | Ford Transit 2.4L   |         | Read DTCs           |                                                                             |
| Transit | 1996-2018 | Airbag             | Ford Transit 2.4L   |         | Clear DTCs          |                                                                             |
| Transit | 1996-2018 | Airbag             | Ford Transit 2.4L   |         | Read data streams   |                                                                             |
| Transit | 1996-2018 | parking brake      | Ford Transit 2.4L   |         | Read DTCs           |                                                                             |
| Transit | 1996-2018 | parking brake      | Ford Transit 2.4L   |         | Clear DTCs          |                                                                             |
| Transit | 1996-2018 | parking brake      | Ford Transit 2.4L   |         | Read data streams   |                                                                             |
| Transit | 1996-2018 | Parking Assist     | Ford Transit 2.4L   |         | Read DTCs           |                                                                             |
| Transit | 1996-2018 | Parking Assist     | Ford Transit 2.4L   |         | Clear DTCs          |                                                                             |
| Transit | 1996-2018 | Parking Assist     | Ford Transit 2.4L   |         | Read data streams   |                                                                             |
| MU-X    | 1996-2018 | Diesel Engine      | 4JJ1-TC             |         | Version Information |                                                                             |
| MU-X    | 1996-2018 | Diesel Engine      | 4JJ1-TC             |         | Read DTCs           |                                                                             |
| MU-X    | 1996-2018 | Diesel Engine      | 4JJ1-TC             |         | Clear DTCs          |                                                                             |
| MU-X    | 1996-2018 | Diesel Engine      | 4JJ1-TC             |         | Read data streams   |                                                                             |
| MU-X    | 1996-2018 | Diesel Engine      | 4JJ1-TC             |         | Actuation test      |                                                                             |
| MU-X    | 1996-2018 | Diesel Engine      | 4JJ1-TC             |         | Special functions   | Diesel particulate trap normal regeneration control                         |
| MU-X    | 1996-2018 | Diesel Engine      | 4JJ1-TC             |         | Special functions   | Diesel particulate trap slow regeneration control                           |

| model   | year      | department    | system                                | subitem | function            | subfunction                                 |
|---------|-----------|---------------|---------------------------------------|---------|---------------------|---------------------------------------------|
| MU-X    | 1996-2018 | Diesel Engine | 4JJ1-TC                               |         | Special functions   | Oil change reset (only for Euro 5)          |
| MU-X    | 1996-2018 | Diesel Engine | 4JJ1-TC                               |         | Special functions   | Injector ID reading                         |
| MU-X    | 1996-2018 | Diesel Engine | 4JJ1-TC                               |         | Special functions   | Fuel pump initialization                    |
| MU-X    | 1996-2018 | Transmission  | AT                                    |         | Read DTCs           |                                             |
| MU-X    | 1996-2018 | Transmission  | AT                                    |         | Clear DTCs          |                                             |
| MU-X    | 1996-2018 | Transmission  | AT                                    |         | Read data streams   |                                             |
| MU-X    | 1996-2018 | Transmission  | AT                                    |         | Actuation test      |                                             |
| MU-X    | 1996-2018 | Transmission  | AT                                    |         | Special functions   | Clear learning value                        |
| MU-X    | 1996-2018 | Chassis       | ABS system                            |         | Read DTCs           |                                             |
| MU-X    | 1996-2018 | Chassis       | ABS system                            |         | Clear DTCs          |                                             |
| MU-X    | 1996-2018 | Chassis       | ABS system                            |         | Read data streams   |                                             |
| MU-X    | 1996-2018 | Chassis       | ABS system                            |         | Actuation test      |                                             |
| MU-X    | 1996-2018 | Chassis       | ABS system                            |         | Special functions   | Clear centered position                     |
| MU-X    | 1996-2018 | Chassis       | ABS system                            |         | Special functions   | Register centered position                  |
| MU-X    | 1996-2018 | Chassis       | Transfer case module                  |         | Version Information |                                             |
| MU-X    | 1996-2018 | Chassis       | Transfer case module                  |         | Read DTCs           |                                             |
| MU-X    | 1996-2018 | Chassis       | Transfer case module                  |         | Clear DTCs          |                                             |
| MU-X    | 1996-2018 | Chassis       | Transfer case module                  |         | Read data streams   |                                             |
| MU-X    | 1996-2018 | Chassis       | Transfer case module                  |         | Actuation test      |                                             |
| MU-X    | 1996-2018 | Body          | Immobilizer (BETA)                    |         | Version Information |                                             |
| MU-X    | 1996-2018 | Body          | Immobilizer (BETA)                    |         | Read DTCs           |                                             |
| MU-X    | 1996-2018 | Body          | Immobilizer (BETA)                    |         | Clear DTCs          |                                             |
| MU-X    | 1996-2018 | Body          | Immobilizer (BETA)                    |         | Read data streams   |                                             |
| MU-X    | 1996-2018 | Body          | Immobilizer (BETA)                    |         | Special functions   | Program response key                        |
| MU-X    | 1996-2018 | Body          | Immobilizer (BETA)                    |         | Special functions   | Clear response key                          |
| MU-X    | 1996-2018 | Body          | PESS (Passive Entry and Start System) |         | Version Information |                                             |
| MU-X    | 1996-2018 | Body          | PESS (Passive Entry and Start System) |         | Read DTCs           |                                             |
| MU-X    | 1996-2018 | Body          | PESS (Passive Entry and Start System) |         | Clear DTCs          |                                             |
| MU-X    | 1996-2018 | Body          | PESS (Passive Entry and Start System) |         | Actuation test      |                                             |
| MU-X    | 1996-2018 | Body          | Body Control Module                   |         | Version Information |                                             |
| MU-X    | 1996-2018 | Body          | Body Control Module                   |         | Read DTCs           |                                             |
| MU-X    | 1996-2018 | Body          | Body Control Module                   |         | Clear DTCs          |                                             |
| MU-X    | 1996-2018 | Body          | Instrument cluster                    |         | Version Information |                                             |
| MU-X    | 1996-2018 | Body          | SRSAirbag                             |         | Version Information |                                             |
| MU-X    | 1996-2018 | Body          | SRSAirbag                             |         | Read DTCs           |                                             |
| MU-X    | 1996-2018 | Body          | SRSAirbag                             |         | Clear DTCs          |                                             |
| Baodian | 1996-2018 | --            | Delphi Euro II                        |         | Version Information |                                             |
| Baodian | 1996-2018 | --            | Delphi Euro II                        |         | Read DTCs           |                                             |
| Baodian | 1996-2018 | --            | Delphi Euro II                        |         | Clear DTCs          |                                             |
| Baodian | 1996-2018 | --            | Delphi Euro II                        |         | Read data streams   |                                             |
| Baodian | 1996-2018 | --            | Delphi Euro II                        |         | Actuation test      |                                             |
| Baodian | 1996-2018 | --            | Siemens ECU                           |         | Read DTCs           |                                             |
| Baodian | 1996-2018 | --            | Siemens ECU                           |         | Clear DTCs          |                                             |
| Baodian | 1996-2018 | --            | Siemens ECU                           |         | Read data streams   |                                             |
| Baodian | 1996-2018 | --            | Siemens ECU                           |         | Actuation test      |                                             |
| Baodian | 1996-2018 | --            | Delphi Euro III ECU                   |         | Version Information |                                             |
| Baodian | 1996-2018 | --            | Delphi Euro III ECU                   |         | Read DTCs           |                                             |
| Baodian | 1996-2018 | --            | Delphi Euro III ECU                   |         | Clear DTCs          |                                             |
| Baodian | 1996-2018 | --            | Delphi Euro III ECU                   |         | Read data streams   |                                             |
| Baodian | 1996-2018 | --            | Delphi Euro III ECU                   |         | Actuation test      |                                             |
| Baodian | 1996-2018 | --            | Delphi Euro III ECU                   |         | Special functions   | Gear learning                               |
| Baodian | 1996-2018 | --            | Delphi Euro III ECU                   |         | Special functions   | Refresh VIN                                 |
| Baodian | 1996-2018 | --            | Delphi Euro III ECU                   |         | Special functions   | Write workshop code or tester serial number |
| Baodian | 1996-2018 | --            | Delphi Euro III ECU                   |         | Special functions   | Program refresh date                        |
| Baodian | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU)    |         | Version Information |                                             |
| Baodian | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU)    |         | Read DTCs           |                                             |
| Baodian | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU)    |         | Clear DTCs          |                                             |
| Baodian | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU)    |         | Read data streams   |                                             |
| Baodian | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU)    |         | Actuation test      |                                             |

| model   | year      | department    | system                             | subitem | function            | subfunction                              |
|---------|-----------|---------------|------------------------------------|---------|---------------------|------------------------------------------|
| Baodian | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU) |         | Special functions   | Engine test                              |
| Baodian | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU) |         | Special functions   | Read vehicle Information                 |
| Baodian | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU) |         | Special functions   | Write vehicle Information                |
| Baodian | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU) |         | Special functions   | Injector data                            |
| Baodian | 1996-2018 | --            | Bosch diesel (Euro IV)             |         | Version Information |                                          |
| Baodian | 1996-2018 | --            | Bosch diesel (Euro IV)             |         | Read DTCs           |                                          |
| Baodian | 1996-2018 | --            | Bosch diesel (Euro IV)             |         | Clear DTCs          |                                          |
| Baodian | 1996-2018 | --            | Bosch diesel (Euro IV)             |         | Read data streams   |                                          |
| Baodian | 1996-2018 | --            | Delphi gasoline engine (Euro V)    |         | Version Information |                                          |
| Baodian | 1996-2018 | --            | Delphi gasoline engine (Euro V)    |         | Read DTCs           |                                          |
| Baodian | 1996-2018 | --            | Delphi gasoline engine (Euro V)    |         | Clear DTCs          |                                          |
| Baodian | 1996-2018 | --            | Delphi gasoline engine (Euro V)    |         | Read data streams   |                                          |
| Baodian | 1996-2018 | --            | BOSCH EDC16C39 system              |         | Version Information |                                          |
| Baodian | 1996-2018 | --            | BOSCH EDC16C39 system              |         | Read DTCs           |                                          |
| Baodian | 1996-2018 | --            | BOSCH EDC16C39 system              |         | Clear DTCs          |                                          |
| Baodian | 1996-2018 | --            | BOSCH EDC16C39 system              |         | Read data streams   |                                          |
| Baodian | 1996-2018 | --            | BOSCH EDC16C39 system              |         | Special functions   | Read freeze frame date                   |
| Baodian | 1996-2018 | --            | BOSCH EDC16C39 system              |         | Special functions   | Read Injector data                       |
| Baodian | 1996-2018 | --            | Baowei ABS                         |         | Read DTCs           |                                          |
| Baodian | 1996-2018 | --            | Baowei ABS                         |         | Clear DTCs          |                                          |
| Baodian | 1996-2018 | --            | Baowei ABS                         |         | Read data streams   |                                          |
| Baodian | 1996-2018 | --            | Baowei ABS                         |         | Actuation test      |                                          |
| Baodian | 1996-2018 | Airbag        | EAST JOY LONG Airbag (AB10)        |         | Version Information |                                          |
| Baodian | 1996-2018 | Airbag        | EAST JOY LONG Airbag (AB10)        |         | Read DTCs           |                                          |
| Baodian | 1996-2018 | Airbag        | EAST JOY LONG Airbag (AB10)        |         | Clear DTCs          |                                          |
| Baodian | 1996-2018 | Airbag        | EAST JOY LONG Airbag (AB10)        |         | Read data streams   |                                          |
| Baodian | 1996-2018 | Airbag        | EAST JOY LONG Airbag (AB10)        |         | Special functions   | Refresh VIN                              |
| Baodian | 1996-2018 | Airbag        | EAST JOY LONG Airbag               |         | Version Information |                                          |
| Baodian | 1996-2018 | Airbag        | EAST JOY LONG Airbag               |         | Read DTCs           |                                          |
| Baodian | 1996-2018 | Airbag        | EAST JOY LONG Airbag               |         | Clear DTCs          |                                          |
| Baodian | 1996-2018 | Airbag        | EAST JOY LONG Airbag               |         | Special functions   | Crash Information                        |
| Baodian | 1996-2018 | Airbag        | EAST JOY LONG Airbag               |         | Special functions   | Set ECU                                  |
| Baodian | 1996-2018 | Airbag        | EAST JOY LONG Airbag               |         | Special functions   | Modify date                              |
| Baodian | 1996-2018 | Airbag        | EAST JOY LONG Airbag               |         | Special functions   | Modify the service date                  |
| Baodian | 1996-2018 | Airbag        | EAST JOY LONG Airbag               |         | Special functions   | Modify the vehicle identification number |
| Baodian | 1996-2018 | --            | Delphi Euro III_EOBD               |         | Version Information |                                          |
| Baodian | 1996-2018 | --            | Delphi Euro III_EOBD               |         | Read DTCs           |                                          |
| Baodian | 1996-2018 | --            | Delphi Euro III_EOBD               |         | Clear DTCs          |                                          |
| Baodian | 1996-2018 | --            | Delphi Euro III_EOBD               |         | Read data streams   |                                          |
| Baodian | 1996-2018 | --            | Delphi Euro III_EOBD               |         | Actuation test      |                                          |
| Baodian | 1996-2018 | --            | Delphi Euro III_EOBD               |         | Special functions   | Read freeze frame date                   |
| Baodian | 1996-2018 | --            | Delphi Euro III_EOBD               |         | Special functions   | Gear learning                            |
| Baodian | 1996-2018 | --            | Delphi Euro III_EOBD               |         | Special functions   | Oxygen sensor line diagnosis             |
| Baodian | 1996-2018 | --            | Delphi Euro III_EOBD               |         | Special functions   | Oxygen catalyst line diagnosis           |
| Baodian | 1996-2018 | --            | Asia-Pacific ABS system            |         | Version Information |                                          |
| Baodian | 1996-2018 | --            | Asia-Pacific ABS system            |         | Read DTCs           |                                          |
| Baodian | 1996-2018 | --            | Asia-Pacific ABS system            |         | Clear DTCs          |                                          |
| Baodian | 1996-2018 | --            | Asia-Pacific ABS system            |         | Read data streams   |                                          |
| Baodian | 1996-2018 | --            | Asia-Pacific ABS system            |         | Actuation test      |                                          |
| Baowei  | 1996-2018 | --            | Delphi Euro II                     |         | Version Information |                                          |
| Baowei  | 1996-2018 | --            | Delphi Euro II                     |         | Read DTCs           |                                          |
| Baowei  | 1996-2018 | --            | Delphi Euro II                     |         | Clear DTCs          |                                          |
| Baowei  | 1996-2018 | --            | Delphi Euro II                     |         | Read data streams   |                                          |
| Baowei  | 1996-2018 | --            | Delphi Euro II                     |         | Actuation test      |                                          |
| Baowei  | 1996-2018 | --            | Siemens ECU                        |         | Read DTCs           |                                          |
| Baowei  | 1996-2018 | --            | Siemens ECU                        |         | Clear DTCs          |                                          |
| Baowei  | 1996-2018 | --            | Siemens ECU                        |         | Read data streams   |                                          |

| model  | year      | department    | system                             | subitem | function            | subfunction                                 |
|--------|-----------|---------------|------------------------------------|---------|---------------------|---------------------------------------------|
| Baowei | 1996-2018 | --            | Siemens ECU                        |         | Actuation test      |                                             |
| Baowei | 1996-2018 | --            | Delphi Euro III ECU                |         | Version Information |                                             |
| Baowei | 1996-2018 | --            | Delphi Euro III ECU                |         | Read DTCs           |                                             |
| Baowei | 1996-2018 | --            | Delphi Euro III ECU                |         | Clear DTCs          |                                             |
| Baowei | 1996-2018 | --            | Delphi Euro III ECU                |         | Read data streams   |                                             |
| Baowei | 1996-2018 | --            | Delphi Euro III ECU                |         | Actuation test      |                                             |
| Baowei | 1996-2018 | --            | Delphi Euro III ECU                |         | Special functions   | Gear learning                               |
| Baowei | 1996-2018 | --            | Delphi Euro III ECU                |         | Special functions   | Refresh VIN                                 |
| Baowei | 1996-2018 | --            | Delphi Euro III ECU                |         | Special functions   | Write workshop code or tester serial number |
| Baowei | 1996-2018 | --            | Delphi Euro III ECU                |         | Special functions   | Program refresh date                        |
| Baowei | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU) |         | Version Information |                                             |
| Baowei | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU) |         | Read DTCs           |                                             |
| Baowei | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU) |         | Clear DTCs          |                                             |
| Baowei | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU) |         | Read data streams   |                                             |
| Baowei | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU) |         | Actuation test      |                                             |
| Baowei | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU) |         | Special functions   | Engine test                                 |
| Baowei | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU) |         | Special functions   | Read vehicle Information                    |
| Baowei | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU) |         | Special functions   | Write vehicle Information                   |
| Baowei | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU) |         | Special functions   | Injector data                               |
| Baowei | 1996-2018 | --            | Bosch diesel (Euro IV)             |         | Version Information |                                             |
| Baowei | 1996-2018 | --            | Bosch diesel (Euro IV)             |         | Read DTCs           |                                             |
| Baowei | 1996-2018 | --            | Bosch diesel (Euro IV)             |         | Clear DTCs          |                                             |
| Baowei | 1996-2018 | --            | Bosch diesel (Euro IV)             |         | Read data streams   |                                             |
| Baowei | 1996-2018 | --            | Delphi gasoline engine (Euro V)    |         | Version Information |                                             |
| Baowei | 1996-2018 | --            | Delphi gasoline engine (Euro V)    |         | Read DTCs           |                                             |
| Baowei | 1996-2018 | --            | Delphi gasoline engine (Euro V)    |         | Clear DTCs          |                                             |
| Baowei | 1996-2018 | --            | Delphi gasoline engine (Euro V)    |         | Read data streams   |                                             |
| Baowei | 1996-2018 | --            | BOSCH EDC16C39 system              |         | Version Information |                                             |
| Baowei | 1996-2018 | --            | BOSCH EDC16C39 system              |         | Read DTCs           |                                             |
| Baowei | 1996-2018 | --            | BOSCH EDC16C39 system              |         | Clear DTCs          |                                             |
| Baowei | 1996-2018 | --            | BOSCH EDC16C39 system              |         | Read data streams   |                                             |
| Baowei | 1996-2018 | --            | BOSCH EDC16C39 system              |         | Special functions   | Read freeze frame date                      |
| Baowei | 1996-2018 | --            | BOSCH EDC16C39 system              |         | Special functions   | Read Injector data                          |
| Baowei | 1996-2018 | --            | Baowei ABS                         |         | Read DTCs           |                                             |
| Baowei | 1996-2018 | --            | Baowei ABS                         |         | Clear DTCs          |                                             |
| Baowei | 1996-2018 | --            | Baowei ABS                         |         | Read data streams   |                                             |
| Baowei | 1996-2018 | --            | Baowei ABS                         |         | Actuation test      |                                             |
| Baowei | 1996-2018 | Airbag        | EAST JOY LONG Airbag (AB10)        |         | Version Information |                                             |
| Baowei | 1996-2018 | Airbag        | EAST JOY LONG Airbag (AB10)        |         | Read DTCs           |                                             |
| Baowei | 1996-2018 | Airbag        | EAST JOY LONG Airbag (AB10)        |         | Clear DTCs          |                                             |
| Baowei | 1996-2018 | Airbag        | EAST JOY LONG Airbag (AB10)        |         | Read data streams   |                                             |
| Baowei | 1996-2018 | Airbag        | EAST JOY LONG Airbag (AB10)        |         | Special functions   | Refresh VIN                                 |
| Baowei | 1996-2018 | Airbag        | EAST JOY LONG Airbag               |         | Version Information |                                             |
| Baowei | 1996-2018 | Airbag        | EAST JOY LONG Airbag               |         | Read DTCs           |                                             |
| Baowei | 1996-2018 | Airbag        | EAST JOY LONG Airbag               |         | Clear DTCs          |                                             |
| Baowei | 1996-2018 | Airbag        | EAST JOY LONG Airbag               |         | Special functions   | Crash Information                           |
| Baowei | 1996-2018 | Airbag        | EAST JOY LONG Airbag               |         | Special functions   | Set ECU                                     |
| Baowei | 1996-2018 | Airbag        | EAST JOY LONG Airbag               |         | Special functions   | Modify date                                 |
| Baowei | 1996-2018 | Airbag        | EAST JOY LONG Airbag               |         | Special functions   | Modify the service date                     |
| Baowei | 1996-2018 | Airbag        | EAST JOY LONG Airbag               |         | Special functions   | Modify the vehicle identification number    |
| Baowei | 1996-2018 | --            | Delphi Euro III_EOBD               |         | Version Information |                                             |
| Baowei | 1996-2018 | --            | Delphi Euro III_EOBD               |         | Read DTCs           |                                             |

| model       | year      | department | system                                 | subitem                 | function            | subfunction                    |
|-------------|-----------|------------|----------------------------------------|-------------------------|---------------------|--------------------------------|
| Baowei      | 1996-2018 | --         | Delphi Euro III_EOBD                   |                         | Clear DTCs          |                                |
| Baowei      | 1996-2018 | --         | Delphi Euro III_EOBD                   |                         | Read data streams   |                                |
| Baowei      | 1996-2018 | --         | Delphi Euro III_EOBD                   |                         | Actuation test      |                                |
| Baowei      | 1996-2018 | --         | Delphi Euro III_EOBD                   |                         | Special functions   | Read freeze frame date         |
| Baowei      | 1996-2018 | --         | Delphi Euro III_EOBD                   |                         | Special functions   | Gear learning                  |
| Baowei      | 1996-2018 | --         | Delphi Euro III_EOBD                   |                         | Special functions   | Oxygen sensor line diagnosis   |
| Baowei      | 1996-2018 | --         | Delphi Euro III_EOBD                   |                         | Special functions   | Oxygen catalyst line diagnosis |
| Baowei      | 1996-2018 | --         | Asia-Pacific ABS system                |                         | Version Information |                                |
| Baowei      | 1996-2018 | --         | Asia-Pacific ABS system                |                         | Read DTCs           |                                |
| Baowei      | 1996-2018 | --         | Asia-Pacific ABS system                |                         | Clear DTCs          |                                |
| Baowei      | 1996-2018 | --         | Asia-Pacific ABS system                |                         | Read data streams   |                                |
| Baowei      | 1996-2018 | --         | Asia-Pacific ABS system                |                         | Actuation test      |                                |
| Light truck | 1996-2018 | N800       | N800Kairui with Bosch system (4D30 IV) |                         | Version Information |                                |
| Light truck | 1996-2018 | N800       | N800Kairui with Bosch system (4D30 IV) |                         | Read DTCs           |                                |
| Light truck | 1996-2018 | N800       | N800Kairui with Bosch system (4D30 IV) |                         | Clear DTCs          |                                |
| Light truck | 1996-2018 | N800       | N800Kairui with Bosch system (4D30 IV) |                         | Read data streams   |                                |
| Light truck | 1996-2018 | N800       | N800Kairui with Bosch system (PUMA IV) |                         | Version Information |                                |
| Light truck | 1996-2018 | N800       | N800Kairui with Bosch system (PUMA IV) |                         | Read DTCs           |                                |
| Light truck | 1996-2018 | N800       | N800Kairui with Bosch system (PUMA IV) |                         | Clear DTCs          |                                |
| Light truck | 1996-2018 | N800       | N800Kairui with Bosch system (PUMA IV) |                         | Read data streams   |                                |
| Light truck | 1996-2018 | N800       | N800Kairui with Bosch system (PUMA V)  |                         | Version Information |                                |
| Light truck | 1996-2018 | N800       | N800Kairui with Bosch system (PUMA V)  |                         | Read DTCs           |                                |
| Light truck | 1996-2018 | N800       | N800Kairui with Bosch system (PUMA V)  |                         | Clear DTCs          |                                |
| Light truck | 1996-2018 | N800       | N800Kairui with Bosch system (PUMA V)  |                         | Read data streams   |                                |
| Light truck | 1996-2018 | N800       | Asia-Pacific ABS system                |                         | Version Information |                                |
| Light truck | 1996-2018 | N800       | Asia-Pacific ABS system                |                         | Read DTCs           |                                |
| Light truck | 1996-2018 | N800       | Asia-Pacific ABS system                |                         | Clear DTCs          |                                |
| Light truck | 1996-2018 | N800       | Asia-Pacific ABS system                |                         | Read data streams   |                                |
| Light truck | 1996-2018 | N800       | Vie air brake ABS                      |                         | Version Information |                                |
| Light truck | 1996-2018 | N800       | Vie air brake ABS                      |                         | Read DTCs           |                                |
| Light truck | 1996-2018 | N800       | Vie air brake ABS                      |                         | Clear DTCs          |                                |
| Light truck | 1996-2018 | N800       | Vie air brake ABS                      |                         | Read data streams   |                                |
| Light truck | 1996-2018 | N900       | N900Kaiwei (CHAOCHAI engine)           | Static diagnosis data   | Version Information |                                |
| Light truck | 1996-2018 | N900       | N900Kaiwei (CHAOCHAI engine)           | Static diagnosis data   | Read DTCs           |                                |
| Light truck | 1996-2018 | N900       | N900Kaiwei (CHAOCHAI engine)           | Static diagnosis data   | Clear DTCs          |                                |
| Light truck | 1996-2018 | N900       | N900Kaiwei (CHAOCHAI engine)           | Dynamic diagnostic data | Read data streams   |                                |
| Light truck | 1996-2018 | N900       | N900Kaiwei (YUCHAI engine)             | Static diagnosis data   | Version Information |                                |
| Light truck | 1996-2018 | N900       | N900Kaiwei (YUCHAI engine)             | Static diagnosis data   | Read DTCs           |                                |
| Light truck | 1996-2018 | N900       | N900Kaiwei (YUCHAI engine)             | Static diagnosis data   | Clear DTCs          |                                |

| model       | year      | department    | system                                         | subitem                 | function            | subfunction               |
|-------------|-----------|---------------|------------------------------------------------|-------------------------|---------------------|---------------------------|
| Light truck | 1996-2018 | N900          | N900Kaiwei (YUCHAI engine)                     | Dynamic diagnostic data | Read data streams   |                           |
| Light truck | 1996-2018 | --            | 493 engine Euro IV                             |                         | Version Information |                           |
| Light truck | 1996-2018 | --            | 493 engine Euro IV                             |                         | Read DTCs           |                           |
| Light truck | 1996-2018 | --            | 493 engine Euro IV                             |                         | Clear DTCs          |                           |
| Light truck | 1996-2018 | --            | 493 engine Euro IV                             |                         | Read data streams   |                           |
| Light truck | 1996-2018 | --            | 493 engine Euro IV                             |                         | Actuation test      |                           |
| Light truck | 1996-2018 | --            | Delphi Euro II                                 |                         | Version Information |                           |
| Light truck | 1996-2018 | --            | Delphi Euro II                                 |                         | Read DTCs           |                           |
| Light truck | 1996-2018 | --            | Delphi Euro II                                 |                         | Clear DTCs          |                           |
| Light truck | 1996-2018 | --            | Delphi Euro II                                 |                         | Read data streams   |                           |
| Light truck | 1996-2018 | --            | Delphi Euro II                                 |                         | Actuation test      |                           |
| Light truck | 1996-2018 | --            | Siemens ECU                                    |                         | Read DTCs           |                           |
| Light truck | 1996-2018 | --            | Siemens ECU                                    |                         | Clear DTCs          |                           |
| Light truck | 1996-2018 | --            | Siemens ECU                                    |                         | Read data streams   |                           |
| Light truck | 1996-2018 | --            | Siemens ECU                                    |                         | Actuation test      |                           |
| Light truck | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU)             |                         | Version Information |                           |
| Light truck | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU)             |                         | Read DTCs           |                           |
| Light truck | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU)             |                         | Clear DTCs          |                           |
| Light truck | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU)             |                         | Read data streams   |                           |
| Light truck | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU)             |                         | Actuation test      |                           |
| Light truck | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU)             |                         | Special functions   | Engine test               |
| Light truck | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU)             |                         | Special functions   | Read vehicle Information  |
| Light truck | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU)             |                         | Special functions   | Write vehicle Information |
| Light truck | 1996-2018 | Diesel Engine | Diesel engine (BOSCH Euro III ECU)             |                         | Special functions   | Injector data             |
| Light truck | 1996-2018 | --            | Yuchai BOSCH Diesel EDC7 Engine                |                         | Version Information |                           |
| Light truck | 1996-2018 | --            | Yuchai BOSCH Diesel EDC7 Engine                |                         | Read DTCs           |                           |
| Light truck | 1996-2018 | --            | Yuchai BOSCH Diesel EDC7 Engine                |                         | Clear DTCs          |                           |
| Light truck | 1996-2018 | --            | Yuchai BOSCH Diesel EDC7 Engine                |                         | Read data streams   |                           |
| Light truck | 1996-2018 | --            | Yuchai BOSCH Diesel EDC7 Engine                |                         | Actuation test      |                           |
| Light truck | 1996-2018 | --            | Delphi diesel EURO 3 electrical control system |                         | Version Information |                           |
| Light truck | 1996-2018 | --            | Delphi diesel EURO 3 electrical control system |                         | Read DTCs           |                           |
| Light truck | 1996-2018 | --            | Delphi diesel EURO 3 electrical control system |                         | Clear DTCs          |                           |
| Light truck | 1996-2018 | --            | Delphi diesel EURO 3 electrical control system |                         | Read data streams   |                           |
| Light truck | 1996-2018 | --            | Delphi diesel EURO 3 electrical control system |                         | Actuation test      |                           |
| Light truck | 1996-2018 | --            | Delphi diesel EURO 3 electrical control system |                         | Special functions   | Injector data             |
| Light truck | 1996-2018 | --            | Delphi diesel EURO 3 electrical control system |                         | Special functions   | Write VIN                 |
| Light truck | 1996-2018 | --            | Delphi diesel EURO 3 electrical control system |                         | Special functions   | Leak test                 |
| Light truck | 1996-2018 | --            | N900 Bosch diesel EURO 3 system (24V)          |                         | Version Information |                           |

| model       | year      | department             | system                                | subitem                | function            | subfunction                                       |
|-------------|-----------|------------------------|---------------------------------------|------------------------|---------------------|---------------------------------------------------|
| Light truck | 1996-2018 | --                     | N900 Bosch diesel EURO 3 system (24V) |                        | Read DTCs           |                                                   |
| Light truck | 1996-2018 | --                     | N900 Bosch diesel EURO 3 system (24V) |                        | Clear DTCs          |                                                   |
| Light truck | 1996-2018 | --                     | N900 Bosch diesel EURO 3 system (24V) |                        | Read data streams   |                                                   |
| Light truck | 1996-2018 | --                     | N900 Bosch diesel EURO 3 system (24V) |                        | Actuation test      |                                                   |
| Light truck | 1996-2018 | --                     | N605Light truck(Kai Rui)ABS           |                        | Read DTCs           |                                                   |
| Light truck | 1996-2018 | --                     | N605Light truck(Kai Rui)ABS           |                        | Clear DTCs          |                                                   |
| Light truck | 1996-2018 | --                     | N605Light truck(Kai Rui)ABS           |                        | Read data streams   |                                                   |
| Light truck | 1996-2018 | --                     | N605Light truck(Kai Rui)ABS           |                        | Actuation test      |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | Engine Management system              | Bosch Diesel Engine    | Version Information |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | Engine Management system              | Bosch Diesel Engine    | Read DTCs           |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | Engine Management system              | Bosch Diesel Engine    | Clear DTCs          |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | Engine Management system              | Bosch Diesel Engine    | Read data streams   |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | Engine Management system              | Delphi gasoline engine | Version Information |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | Engine Management system              | Delphi gasoline engine | Read DTCs           |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | Engine Management system              | Delphi gasoline engine | Clear DTCs          |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | Engine Management system              | Delphi gasoline engine | Read data streams   |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | Engine Management system              | Delphi gasoline engine | Actuation test      |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | Engine Management system              | Delphi gasoline engine | Special functions   | Gear learning                                     |
| Yusheng     | 1996-2018 | New Yusheng manua gear | Engine Management system              | Delphi gasoline engine | Special functions   | Refresh VIN                                       |
| Yusheng     | 1996-2018 | New Yusheng manua gear | ABS9                                  |                        | Version Information |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | ABS9                                  |                        | Read DTCs           |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | ABS9                                  |                        | Clear DTCs          |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | ABS9                                  |                        | Read data streams   |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | Airbag                                | Mainland airbag        | Version Information |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | Airbag                                | Mainland airbag        | Read DTCs           |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | Airbag                                | Mainland airbag        | Clear DTCs          |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | Airbag                                | Mainland airbag        | Read data streams   |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | IMMO (Exported to Chile)              |                        | Version Information |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | IMMO (Exported to Chile)              |                        | Read DTCs           |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | IMMO (Exported to Chile)              |                        | Clear DTCs          |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | IMMO (Exported to Chile)              |                        | Read data streams   |                                                   |
| Yusheng     | 1996-2018 | New Yusheng manua gear | IMMO (Exported to Chile)              |                        | Special functions   | Replace IMMO after sales                          |
| Yusheng     | 1996-2018 | New Yusheng manua gear | IMMO (Exported to Chile)              |                        | Special functions   | Replace ECM after sales                           |
| Yusheng     | 1996-2018 | New Yusheng manua gear | IMMO (Exported to Chile)              |                        | Special functions   | Replace ECM and IMMO at the same time after sales |

| model   | year      | department                 | system                    | subitem                  | function            | subfunction                     |
|---------|-----------|----------------------------|---------------------------|--------------------------|---------------------|---------------------------------|
| Yusheng | 1996-2018 | New Yusheng manua gear     | IMMO (Exported to Chile)  |                          | Special functions   | Replace key after sales         |
| Yusheng | 1996-2018 | New Yusheng manua gear     | IMMO (Exported to Chile)  |                          | Special functions   | Reset ECM                       |
| Yusheng | 1996-2018 | New Yusheng manua gear     | IMMO (Exported to Chile)  |                          | Special functions   | Reset IMMO                      |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Engine System             |                          | Version Information |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Engine System             |                          | Read DTCs           |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Engine System             |                          | Clear DTCs          |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Engine System             |                          | Read data streams   |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Engine System             |                          | Actuation test      |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Engine System             |                          | Special functions   | EGR zero point trigger learning |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Engine System             |                          | Special functions   | Clear ZFC learning value        |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Engine System             |                          | Special functions   | Refresh VIN                     |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Engine System             |                          | Special functions   | Injector data                   |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Engine System             |                          | Special functions   | Function test                   |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Engine System             |                          | Special functions   | VDS Information                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Transmission system       |                          | Version Information |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Transmission system       |                          | Read DTCs           |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Transmission system       |                          | Clear DTCs          |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Transmission system       |                          | Read data streams   |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Transmission system       |                          | Actuation test      |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Transmission system       |                          | Special functions   | Since the value was reset       |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Transmission system       |                          | Special functions   | Refresh Data                    |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Instrument cluster system |                          | Version Information |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Instrument cluster system |                          | Read DTCs           |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Instrument cluster system |                          | Clear DTCs          |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Instrument cluster system |                          | Read data streams   |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Instrument cluster system |                          | Actuation test      |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Instrument cluster system |                          | Special functions   | Refresh ECU                     |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Transfer case system      | BorgWarner transfer case | Version Information |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Transfer case system      | BorgWarner transfer case | Read DTCs           |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Transfer case system      | BorgWarner transfer case | Clear DTCs          |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Transfer case system      | BorgWarner transfer case | Read data streams   |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | ESP                       | Bosch ESP                | Version Information |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | ESP                       | Bosch ESP                | Read DTCs           |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | ESP                       | Bosch ESP                | Clear DTCs          |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | ESP                       | Bosch ESP                | Read data streams   |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Gateway                   |                          | Version Information |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Gateway                   |                          | Read DTCs           |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Gateway                   |                          | Clear DTCs          |                                 |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Gateway                   |                          | Read data streams   |                                 |

| model   | year      | department                 | system                    | subitem         | function            | subfunction                                   |
|---------|-----------|----------------------------|---------------------------|-----------------|---------------------|-----------------------------------------------|
| Yusheng | 1996-2018 | New Yusheng automatic gear | Body controller           |                 | Version Information |                                               |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Body controller           |                 | Read DTCs           |                                               |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Body controller           |                 | Clear DTCs          |                                               |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Body controller           |                 | Read data streams   |                                               |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Airbag                    | Mainland airbag | Version Information |                                               |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Airbag                    | Mainland airbag | Read DTCs           |                                               |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Airbag                    | Mainland airbag | Clear DTCs          |                                               |
| Yusheng | 1996-2018 | New Yusheng automatic gear | Airbag                    | Mainland airbag | Read data streams   |                                               |
| Yusheng | 1996-2018 | New Yusheng automatic gear | PEPS                      |                 | Version Information |                                               |
| Yusheng | 1996-2018 | New Yusheng automatic gear | PEPS                      |                 | Read DTCs           |                                               |
| Yusheng | 1996-2018 | New Yusheng automatic gear | PEPS                      |                 | Clear DTCs          |                                               |
| Yusheng | 1996-2018 | New Yusheng automatic gear | PEPS                      |                 | Read data streams   |                                               |
| Yusheng | 1996-2018 | New Yusheng automatic gear | PEPS                      |                 | Actuation test      |                                               |
| Yusheng | 1996-2018 | Yusheng manua gear         | Bosch dieselEngine System |                 | Version Information |                                               |
| Yusheng | 1996-2018 | Yusheng manua gear         | Bosch dieselEngine System |                 | Read DTCs           |                                               |
| Yusheng | 1996-2018 | Yusheng manua gear         | Bosch dieselEngine System |                 | Clear DTCs          |                                               |
| Yusheng | 1996-2018 | Yusheng manua gear         | Bosch dieselEngine System |                 | Read data streams   |                                               |
| Yusheng | 1996-2018 | Yusheng manua gear         | Bosch dieselEngine System |                 | Actuation test      |                                               |
| Yusheng | 1996-2018 | Yusheng manua gear         | Bosch dieselEngine System |                 | Special functions   | Read Injector data                            |
| Yusheng | 1996-2018 | Yusheng manua gear         | Bosch dieselEngine System |                 | Special functions   | EGR zero point trigger learning               |
| Yusheng | 1996-2018 | Yusheng manua gear         | Bosch dieselEngine System |                 | Special functions   | Clear ZFC learning value                      |
| Yusheng | 1996-2018 | Yusheng manua gear         | Bosch dieselEngine System |                 | Special functions   | Refresh VIN                                   |
| Yusheng | 1996-2018 | Yusheng manua gear         | Delphi Euro IV gasoline   |                 | Version Information |                                               |
| Yusheng | 1996-2018 | Yusheng manua gear         | Delphi Euro IV gasoline   |                 | Read DTCs           |                                               |
| Yusheng | 1996-2018 | Yusheng manua gear         | Delphi Euro IV gasoline   |                 | Clear DTCs          |                                               |
| Yusheng | 1996-2018 | Yusheng manua gear         | Delphi Euro IV gasoline   |                 | Read data streams   |                                               |
| Yusheng | 1996-2018 | Yusheng manua gear         | Delphi Euro IV gasoline   |                 | Actuation test      |                                               |
| Yusheng | 1996-2018 | Yusheng manua gear         | Delphi Euro IV gasoline   |                 | Special functions   | Gear learning                                 |
| Yusheng | 1996-2018 | Yusheng manua gear         | Delphi Euro IV gasoline   |                 | Special functions   | Program refresh date                          |
| Yusheng | 1996-2018 | Yusheng manua gear         | Delphi Euro IV gasoline   |                 | Special functions   | Write diagnostic tool S/N or repair shop code |
| Yusheng | 1996-2018 | Yusheng manua gear         | Delphi Euro IV gasoline   |                 | Special functions   | Refresh VIN                                   |
| Yusheng | 1996-2018 | Yusheng manua gear         | ABS                       | BOSCH ABS       | Version Information |                                               |
| Yusheng | 1996-2018 | Yusheng manua gear         | ABS                       | BOSCH ABS       | Read DTCs           |                                               |
| Yusheng | 1996-2018 | Yusheng manua gear         | ABS                       | BOSCH ABS       | Clear DTCs          |                                               |
| Yusheng | 1996-2018 | Yusheng manua gear         | ABS                       | BOSCH ABS       | Read data streams   |                                               |
| Yusheng | 1996-2018 | Yusheng manua gear         | ABS                       | BOSCH ABS       | Actuation test      |                                               |
| Yusheng | 1996-2018 | Yusheng manua gear         | ABS                       | BOSCH ABS       | Special functions   | Bleeding function                             |
| Yusheng | 1996-2018 | Yusheng manua gear         | ABS                       | BOSCH ABS       | Special functions   | Hydraulic pressure filling status             |

| model                    | year      | department         | system                                        | subitem   | function            | subfunction                              |
|--------------------------|-----------|--------------------|-----------------------------------------------|-----------|---------------------|------------------------------------------|
| Yusheng                  | 1996-2018 | Yusheng manua gear | ABS                                           | BOSCH ABS | Special functions   | EOL (End of Line) status                 |
| Yusheng                  | 1996-2018 | Yusheng manua gear | ABS                                           | ABS9      | Version Information |                                          |
| Yusheng                  | 1996-2018 | Yusheng manua gear | ABS                                           | ABS9      | Read DTCs           |                                          |
| Yusheng                  | 1996-2018 | Yusheng manua gear | ABS                                           | ABS9      | Clear DTCs          |                                          |
| Yusheng                  | 1996-2018 | Yusheng manua gear | ABS                                           | ABS9      | Read data streams   |                                          |
| Yusheng                  | 1996-2018 | Yusheng manua gear | ABS                                           | ABS9      | Actuation test      |                                          |
| Yusheng                  | 1996-2018 | Yusheng manua gear | ABS                                           | ABS9      | Special functions   | Manual exhaust                           |
| Yusheng                  | 1996-2018 | Yusheng manua gear | ABS                                           | ABS9      | Special functions   | Refresh VIN                              |
| Yusheng                  | 1996-2018 | Yusheng manua gear | ABS                                           | ABS9      | Special functions   | Steering angle sensor calibration        |
| Yusheng                  | 1996-2018 | Yusheng manua gear | ABS                                           | ABS9      | Special functions   | Yaw rate acceleration sensor calibration |
| Yusheng                  | 1996-2018 | Yusheng manua gear | ABS                                           | ABS9      | Special functions   | Modify filling status                    |
| Yusheng                  | 1996-2018 | Yusheng manua gear | ABS                                           | ABS9      | Special functions   | Modify EOL test status                   |
| Yusheng                  | 1996-2018 | Yusheng manua gear | ABS                                           | ABS9      | Special functions   | 2WD model configuration                  |
| Yusheng                  | 1996-2018 | Yusheng manua gear | ABS                                           | ABS9      | Special functions   | 4WD model configuration                  |
| Yusheng                  | 1996-2018 | Yusheng manua gear | Airbag system                                 |           | Version Information |                                          |
| Yusheng                  | 1996-2018 | Yusheng manua gear | Airbag system                                 |           | Read DTCs           |                                          |
| Yusheng                  | 1996-2018 | Yusheng manua gear | Airbag system                                 |           | Clear DTCs          |                                          |
| Yusheng                  | 1996-2018 | Yusheng manua gear | Airbag system                                 |           | Read data streams   |                                          |
| Yusheng                  | 1996-2018 | Yusheng manua gear | Airbag system                                 |           | Actuation test      |                                          |
| Jiangling light gasoline | 1996-2018 | QiLing series      | Wolff EDC17CV54_CAN system (493 light trucks) |           | Version Information |                                          |
| Jiangling light gasoline | 1996-2018 | QiLing series      | Wolff EDC17CV54_CAN system (493 light trucks) |           | Read DTCs           |                                          |
| Jiangling light gasoline | 1996-2018 | QiLing series      | Wolff EDC17CV54_CAN system (493 light trucks) |           | Clear DTCs          |                                          |
| Jiangling light gasoline | 1996-2018 | QiLing series      | Wolff EDC17CV54_CAN system (493 light trucks) |           | Read data streams   |                                          |
| Jiangling light gasoline | 1996-2018 | QiLing series      | Delphi gasoline engine(4G22B)                 |           | Version Information |                                          |
| Jiangling light gasoline | 1996-2018 | QiLing series      | Delphi gasoline engine(4G22B)                 |           | Read DTCs           |                                          |
| Jiangling light gasoline | 1996-2018 | QiLing series      | Delphi gasoline engine(4G22B)                 |           | Clear DTCs          |                                          |
| Jiangling light gasoline | 1996-2018 | QiLing series      | Delphi gasoline engine(4G22B)                 |           | Read data streams   |                                          |
| Jiangling light gasoline | 1996-2018 | QiLing series      | Bosch diesel (4JB1)                           |           | Version Information |                                          |
| Jiangling light gasoline | 1996-2018 | QiLing series      | Bosch diesel (4JB1)                           |           | Read DTCs           |                                          |
| Jiangling light gasoline | 1996-2018 | QiLing series      | Bosch diesel (4JB1)                           |           | Clear DTCs          |                                          |
| Jiangling light gasoline | 1996-2018 | QiLing series      | Bosch diesel (4JB1)                           |           | Read data streams   |                                          |
| Jiangling light gasoline | 1996-2018 | QiLing series      | JE493ZLQ4E                                    |           | Version Information |                                          |

| model                    | year      | department    | system            | subitem                          | function            | subfunction |
|--------------------------|-----------|---------------|-------------------|----------------------------------|---------------------|-------------|
| Jiangling light gasoline | 1996-2018 | QiLing series | JE493ZLQ4E        |                                  | Read DTCs           |             |
| Jiangling light gasoline | 1996-2018 | QiLing series | JE493ZLQ4E        |                                  | Clear DTCs          |             |
| Jiangling light gasoline | 1996-2018 | QiLing series | JE493ZLQ4E        |                                  | Read data streams   |             |
| Yuhu                     | 1996-2018 | --            | Engine System     | Bosch dieselEngine System        | Version Information |             |
| Yuhu                     | 1996-2018 | --            | Engine System     | Bosch dieselEngine System        | Read DTCs           |             |
| Yuhu                     | 1996-2018 | --            | Engine System     | Bosch dieselEngine System        | Clear DTCs          |             |
| Yuhu                     | 1996-2018 | --            | Engine System     | Bosch dieselEngine System        | Read data streams   |             |
| Yuhu                     | 1996-2018 | --            | Engine System     | Delphi gasoline engine (Euro IV) | Version Information |             |
| Yuhu                     | 1996-2018 | --            | Engine System     | Delphi gasoline engine (Euro IV) | Read DTCs           |             |
| Yuhu                     | 1996-2018 | --            | Engine System     | Delphi gasoline engine (Euro IV) | Clear DTCs          |             |
| Yuhu                     | 1996-2018 | --            | Engine System     | Delphi gasoline engine (Euro IV) | Read data streams   |             |
| Yuhu                     | 1996-2018 | --            | Anti-lock Brake   | BOSCH ABS                        | Version Information |             |
| Yuhu                     | 1996-2018 | --            | Anti-lock Brake   | BOSCH ABS                        | Read DTCs           |             |
| Yuhu                     | 1996-2018 | --            | Anti-lock Brake   | BOSCH ABS                        | Clear DTCs          |             |
| Yuhu                     | 1996-2018 | --            | Anti-lock Brake   | BOSCH ABS                        | Read data streams   |             |
| Yuhu                     | 1996-2018 | --            | Anti-lock Brake   | ASB9                             | Version Information |             |
| Yuhu                     | 1996-2018 | --            | Anti-lock Brake   | ASB9                             | Read DTCs           |             |
| Yuhu                     | 1996-2018 | --            | Anti-lock Brake   | ASB9                             | Clear DTCs          |             |
| Yuhu                     | 1996-2018 | --            | Anti-lock Brake   | ASB9                             | Read data streams   |             |
| Yuhu                     | 1996-2018 | --            | Airbag            | Mainland airbag                  | Version Information |             |
| Yuhu                     | 1996-2018 | --            | Airbag            | Mainland airbag                  | Read DTCs           |             |
| Yuhu                     | 1996-2018 | --            | Airbag            | Mainland airbag                  | Clear DTCs          |             |
| Yuhu                     | 1996-2018 | --            | Airbag            | Mainland airbag                  | Read data streams   |             |
| Puma                     | 1996-2018 | --            | Engine System     |                                  | Read DTCs           |             |
| Puma                     | 1996-2018 | --            | Engine System     |                                  | Clear DTCs          |             |
| Puma                     | 1996-2018 | --            | Engine System     |                                  | Read data streams   |             |
| Puma                     | 1996-2018 | --            | Body system       | Airbag                           | Read DTCs           |             |
| Puma                     | 1996-2018 | --            | Body system       | Airbag                           | Clear DTCs          |             |
| Puma                     | 1996-2018 | --            | Body system       | Instrument cluster               | Read DTCs           |             |
| Puma                     | 1996-2018 | --            | Body system       | Instrument cluster               | Clear DTCs          |             |
| Puma                     | 1996-2018 | --            | Body system       | Body Module                      | Read DTCs           |             |
| Puma                     | 1996-2018 | --            | Body system       | Body Module                      | Clear DTCs          |             |
| Puma                     | 1996-2018 | --            | Body system       | Body Module                      | Read data streams   |             |
| Puma                     | 1996-2018 | --            | ABS system        |                                  | Read DTCs           |             |
| Puma                     | 1996-2018 | --            | ABS system        |                                  | Clear DTCs          |             |
| Puma                     | 1996-2018 | --            | ABS system        |                                  | Read data streams   |             |
| Puma                     | 1996-2018 | --            | Electrical system | Charging system                  | Read DTCs           |             |
| Puma                     | 1996-2018 | --            | Electrical system | Charging system                  | Clear DTCs          |             |
| Puma                     | 1996-2018 | --            | Electrical system | Charging system                  | Read data streams   |             |
| Puma                     | 1996-2018 | --            | Electrical system | Auxiliary heater                 | Read DTCs           |             |
| Puma                     | 1996-2018 | --            | Electrical system | Auxiliary heater                 | Clear DTCs          |             |

| model    | year      | department | system                                         | subitem     | function            | subfunction   |
|----------|-----------|------------|------------------------------------------------|-------------|---------------------|---------------|
| Puma     | 1996-2018 | --         | Electrical system                              | Parking aid | Read DTCs           |               |
| Puma     | 1996-2018 | --         | Electrical system                              | Parking aid | Clear DTCs          |               |
| Puma     | 1996-2018 | --         | Electrical system                              | Parking aid | Read data streams   |               |
| Puma     | 1996-2018 | --         | module                                         | ABS system  | Read DTCs           |               |
| Puma     | 1996-2018 | --         | module                                         | ABS system  | Clear DTCs          |               |
| Puma     | 1996-2018 | --         | module                                         | ABS system  | Read data streams   |               |
| Puma     | 1996-2018 | --         | module                                         | BCMvii      | Read DTCs           |               |
| Puma     | 1996-2018 | --         | module                                         | BCMvii      | Clear DTCs          |               |
| Puma     | 1996-2018 | --         | module                                         | BCMvii      | Read data streams   |               |
| Puma     | 1996-2018 | --         | module                                         | PCM         | Read DTCs           |               |
| Puma     | 1996-2018 | --         | module                                         | PCM         | Clear DTCs          |               |
| Puma     | 1996-2018 | --         | module                                         | PCM         | Read data streams   |               |
| Puma     | 1996-2018 | --         | module                                         | RCM         | Read DTCs           |               |
| Puma     | 1996-2018 | --         | module                                         | RCM         | Clear DTCs          |               |
| --       | 1996-2018 | --         | Jiangling ECU distribution pump motor Euro III |             | Version Information |               |
| --       | 1996-2018 | --         | Jiangling ECU distribution pump motor Euro III |             | Read DTCs           |               |
| --       | 1996-2018 | --         | Jiangling ECU distribution pump motor Euro III |             | Clear DTCs          |               |
| --       | 1996-2018 | --         | BOSCH X6Engine System                          |             | Version Information |               |
| --       | 1996-2018 | --         | BOSCH X6Engine System                          |             | Read DTCs           |               |
| --       | 1996-2018 | --         | BOSCH X6Engine System                          |             | Clear DTCs          |               |
| --       | 1996-2018 | --         | BOSCH X6Engine System                          |             | Read data streams   |               |
| --       | 1996-2018 | --         | BOSCH X6Engine System                          |             | Actuation test      |               |
| --       | 1996-2018 | --         | BOSCH X6Engine System                          |             | Special functions   | Engine test   |
| --       | 1996-2018 | --         | BOSCH X6Engine System                          |             | Special functions   | Injector data |
| NEW YuHu | 1996-2018 | --         | UASE Engine                                    |             | Version Information |               |
| NEW YuHu | 1996-2018 | --         | UASE Engine                                    |             | Read DTCs           |               |
| NEW YuHu | 1996-2018 | --         | UASE Engine                                    |             | Clear DTCs          |               |
| NEW YuHu | 1996-2018 | --         | UASE Engine                                    |             | Read data streams   |               |
| NEW YuHu | 1996-2018 | --         | Diesel-Bosch-C63                               |             | Version Information |               |
| NEW YuHu | 1996-2018 | --         | Diesel-Bosch-C63                               |             | Read DTCs           |               |
| NEW YuHu | 1996-2018 | --         | Diesel-Bosch-C63                               |             | Clear DTCs          |               |
| NEW YuHu | 1996-2018 | --         | Diesel-Bosch-C63                               |             | Read data streams   |               |
| NEW YuHu | 1996-2018 | --         | ZF-Transmition-6AT                             |             | Version Information |               |
| NEW YuHu | 1996-2018 | --         | ZF-Transmition-6AT                             |             | Read DTCs           |               |
| NEW YuHu | 1996-2018 | --         | ZF-Transmition-6AT                             |             | Clear DTCs          |               |
| NEW YuHu | 1996-2018 | --         | ZF-Transmition-6AT                             |             | Read data streams   |               |
| NEW YuHu | 1996-2018 | --         | Bosch-ESP                                      |             | Version Information |               |
| NEW YuHu | 1996-2018 | --         | Bosch-ESP                                      |             | Read DTCs           |               |
| NEW YuHu | 1996-2018 | --         | Bosch-ESP                                      |             | Clear DTCs          |               |
| NEW YuHu | 1996-2018 | --         | Bosch-ESP                                      |             | Read data streams   |               |
| NEW YuHu | 1996-2018 | --         | Continental-SRS                                |             | Version Information |               |
| NEW YuHu | 1996-2018 | --         | Continental-SRS                                |             | Read DTCs           |               |
| NEW YuHu | 1996-2018 | --         | Continental-SRS                                |             | Clear DTCs          |               |
| NEW YuHu | 1996-2018 | --         | Continental-SRS                                |             | Read data streams   |               |
| NEW YuHu | 1996-2018 | --         | TongZhi-BCM                                    |             | Version Information |               |
| NEW YuHu | 1996-2018 | --         | TongZhi-BCM                                    |             | Read DTCs           |               |
| NEW YuHu | 1996-2018 | --         | TongZhi-BCM                                    |             | Clear DTCs          |               |
| NEW YuHu | 1996-2018 | --         | TongZhi-BCM                                    |             | Read data streams   |               |
| NEW YuHu | 1996-2018 | --         | Visteon-ICM                                    |             | Version Information |               |
| NEW YuHu | 1996-2018 | --         | Visteon-ICM                                    |             | Read DTCs           |               |

| model    | year      | department | system                  | subitem | function            | subfunction |
|----------|-----------|------------|-------------------------|---------|---------------------|-------------|
| NEW YuHu | 1996-2018 | --         | Visteon-ICM             |         | Clear DTCs          |             |
| NEW YuHu | 1996-2018 | --         | Visteon-ICM             |         | Read data streams   |             |
| NEW YuHu | 1996-2018 | --         | Visteon-AC              |         | Version Information |             |
| NEW YuHu | 1996-2018 | --         | Visteon-AC              |         | Read DTCs           |             |
| NEW YuHu | 1996-2018 | --         | Visteon-AC              |         | Clear DTCs          |             |
| NEW YuHu | 1996-2018 | --         | Visteon-AC              |         | Read data streams   |             |
| NEW YuHu | 1996-2018 | --         | Gasoline-LEAR-PEPS      |         | Version Information |             |
| NEW YuHu | 1996-2018 | --         | Gasoline-LEAR-PEPS      |         | Read DTCs           |             |
| NEW YuHu | 1996-2018 | --         | Gasoline-LEAR-PEPS      |         | Clear DTCs          |             |
| NEW YuHu | 1996-2018 | --         | Gasoline-LEAR-PEPS      |         | Read data streams   |             |
| NEW YuHu | 1996-2018 | --         | Diesel-LEAR-PEPS        |         | Version Information |             |
| NEW YuHu | 1996-2018 | --         | Diesel-LEAR-PEPS        |         | Read DTCs           |             |
| NEW YuHu | 1996-2018 | --         | Diesel-LEAR-PEPS        |         | Clear DTCs          |             |
| NEW YuHu | 1996-2018 | --         | Diesel-LEAR-PEPS        |         | Read data streams   |             |
| NEW YuHu | 1996-2018 | --         | Borgwaner-4WD-TCCU      |         | Version Information |             |
| NEW YuHu | 1996-2018 | --         | Borgwaner-4WD-TCCU      |         | Read DTCs           |             |
| NEW YuHu | 1996-2018 | --         | Borgwaner-4WD-TCCU      |         | Clear DTCs          |             |
| NEW YuHu | 1996-2018 | --         | Borgwaner-4WD-TCCU      |         | Read data streams   |             |
| NEW YuHu | 1996-2018 | --         | BaoLong-TMPS            |         | Version Information |             |
| NEW YuHu | 1996-2018 | --         | BaoLong-TMPS            |         | Read DTCs           |             |
| NEW YuHu | 1996-2018 | --         | BaoLong-TMPS            |         | Clear DTCs          |             |
| NEW YuHu | 1996-2018 | --         | BaoLong-TMPS            |         | Read data streams   |             |
| TeShun   | 1996-2018 | --         | BOSCH-RAIL-D5(EDC17C63) |         | Version Information |             |
| TeShun   | 1996-2018 | --         | BOSCH-RAIL-D5(EDC17C63) |         | Read DTCs           |             |
| TeShun   | 1996-2018 | --         | BOSCH-RAIL-D5(EDC17C63) |         | Clear DTCs          |             |
| TeShun   | 1996-2018 | --         | BOSCH-RAIL-D5(EDC17C63) |         | Read data streams   |             |
| TeShun   | 1996-2018 | --         | BOSCH-RAIL-D5(EDC17C63) |         | Actuation test      |             |
| TeShun   | 1996-2018 | --         | BOSCH-RAIL-D5(EDC17C63) |         | Special functions   |             |
| TeShun   | 1996-2018 | --         | Delphi gasoline(Euro V) |         | Version Information |             |
| TeShun   | 1996-2018 | --         | Delphi gasoline(Euro V) |         | Read DTCs           |             |
| TeShun   | 1996-2018 | --         | Delphi gasoline(Euro V) |         | Clear DTCs          |             |
| TeShun   | 1996-2018 | --         | Delphi gasoline(Euro V) |         | Read data streams   |             |
| TeShun   | 1996-2018 | --         | Delphi gasoline(Euro V) |         | Actuation test      |             |
| TeShun   | 1996-2018 | --         | Delphi gasoline(Euro V) |         | Special functions   |             |
| TeShun   | 1996-2018 | --         | yatai ABS               |         | Version Information |             |
| TeShun   | 1996-2018 | --         | yatai ABS               |         | Read DTCs           |             |
| TeShun   | 1996-2018 | --         | yatai ABS               |         | Clear DTCs          |             |
| TeShun   | 1996-2018 | --         | yatai ABS               |         | Read data streams   |             |
| TeShun   | 1996-2018 | --         | yatai ABS               |         | Actuation test      |             |
| TeShun   | 1996-2018 | --         | yatai ABS               |         | Special functions   |             |
| TeShun   | 1996-2018 | --         | Continental-SRS         |         | Version Information |             |
| TeShun   | 1996-2018 | --         | Continental-SRS         |         | Read DTCs           |             |
| TeShun   | 1996-2018 | --         | Continental-SRS         |         | Clear DTCs          |             |
| TeShun   | 1996-2018 | --         | Continental-SRS         |         | Read data streams   |             |
| TeShun   | 1996-2018 | --         | Continental-SRS         |         | Actuation test      |             |
| TeShun   | 1996-2018 | --         | Continental-SRS         |         | Special functions   |             |
| BaoDian  | 1996-2018 | --         | Diesel-Bosch-C63        |         | Version Information |             |
| BaoDian  | 1996-2018 | --         | Diesel-Bosch-C63        |         | Read DTCs           |             |
| BaoDian  | 1996-2018 | --         | Diesel-Bosch-C63        |         | Clear DTCs          |             |
| BaoDian  | 1996-2018 | --         | Diesel-Bosch-C63        |         | Read data streams   |             |
| BaoDian  | 1996-2018 | --         | Diesel-Bosch-C63        |         | Actuation test      |             |
| BaoWei   | 1996-2018 | --         | Diesel-Bosch-C63        |         | Version Information |             |
| BaoWei   | 1996-2018 | --         | Diesel-Bosch-C63        |         | Read DTCs           |             |
| BaoWei   | 1996-2018 | --         | Diesel-Bosch-C63        |         | Clear DTCs          |             |
| BaoWei   | 1996-2018 | --         | Diesel-Bosch-C63        |         | Read data streams   |             |
| BaoWei   | 1996-2018 | --         | Diesel-Bosch-C63        |         | Actuation test      |             |

| model                      | year      | department | system                  | subitem | function            | subfunction |
|----------------------------|-----------|------------|-------------------------|---------|---------------------|-------------|
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T               |         | Version Information |             |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T               |         | Read DTCs           |             |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T               |         | Clear DTCs          |             |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T               |         | Read data streams   |             |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | yatai ABS               |         | Version Information |             |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | yatai ABS               |         | Read DTCs           |             |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | yatai ABS               |         | Clear DTCs          |             |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | yatai ABS               |         | Read data streams   |             |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | DongFangJiuLe SRS(AB10) |         | Version Information |             |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | DongFangJiuLe SRS(AB10) |         | Read DTCs           |             |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | DongFangJiuLe SRS(AB10) |         | Clear DTCs          |             |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | DongFangJiuLe SRS(AB10) |         | Read data streams   |             |
| N601                       | 1996-2018 | --         | yatai ABS               |         | Version Information |             |
| N601                       | 1996-2018 | --         | yatai ABS               |         | Read DTCs           |             |
| N601                       | 1996-2018 | --         | yatai ABS               |         | Clear DTCs          |             |
| N601                       | 1996-2018 | --         | yatai ABS               |         | Read data streams   |             |
| N601                       | 1996-2018 | --         | JOY LONG airbag KD5.2   |         | Version Information |             |
| N601                       | 1996-2018 | --         | JOY LONG airbag KD5.2   |         | Read DTCs           |             |
| N601                       | 1996-2018 | --         | JOY LONG airbag KD5.2   |         | Clear DTCs          |             |
| N601                       | 1996-2018 | --         | JOY LONG airbag KD5.2   |         | Read data streams   |             |
| NEW<br>YuSheng(<br>S350)   | 1996-2018 | --         | UASE Engine             |         | Version Information |             |
| NEW<br>YuSheng(<br>S350)   | 1996-2018 | --         | UASE Engine             |         | Read DTCs           |             |
| NEW<br>YuSheng(<br>S350)   | 1996-2018 | --         | UASE Engine             |         | Clear DTCs          |             |
| NEW<br>YuSheng(<br>S350)   | 1996-2018 | --         | UASE Engine             |         | Read data streams   |             |
| NEW<br>YuSheng(<br>S350)   | 1996-2018 | --         | UASE Engine             |         | Version Information |             |
| NEW<br>YuSheng(<br>S350)   | 1996-2018 | --         | UASE Engine             |         | Read DTCs           |             |
| NEW<br>YuSheng(<br>S350)   | 1996-2018 | --         | UASE Engine             |         | Clear DTCs          |             |
| NEW<br>YuSheng(<br>S350)   | 1996-2018 | --         | UASE Engine             |         | Read data streams   |             |
| NEW<br>YuSheng(<br>S350)   | 1996-2018 | --         | ZF-Transmition-6AT      |         | Version Information |             |
| NEW<br>YuSheng(<br>S350)   | 1996-2018 | --         | ZF-Transmition-6AT      |         | Read DTCs           |             |
| NEW<br>YuSheng(<br>S350)   | 1996-2018 | --         | ZF-Transmition-6AT      |         | Clear DTCs          |             |

| model                    | year      | department | system             | subitem | function            | subfunction |
|--------------------------|-----------|------------|--------------------|---------|---------------------|-------------|
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | ZF-Transmition-6AT |         | Read data streams   |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Bosch-ESP          |         | Version Information |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Bosch-ESP          |         | Read DTCs           |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Bosch-ESP          |         | Clear DTCs          |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Bosch-ESP          |         | Read data streams   |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Continental-SRS    |         | Version Information |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Continental-SRS    |         | Read DTCs           |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Continental-SRS    |         | Clear DTCs          |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Continental-SRS    |         | Read data streams   |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | TongZhi-BCM        |         | Version Information |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | TongZhi-BCM        |         | Read DTCs           |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | TongZhi-BCM        |         | Clear DTCs          |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | TongZhi-BCM        |         | Read data streams   |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Visteon-ICM        |         | Version Information |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Visteon-ICM        |         | Read DTCs           |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Visteon-ICM        |         | Clear DTCs          |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Visteon-ICM        |         | Read data streams   |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Visteon-AC         |         | Version Information |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Visteon-AC         |         | Read DTCs           |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Visteon-AC         |         | Clear DTCs          |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Visteon-AC         |         | Read data streams   |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Gasoline-LEAR-PEPS |         | Version Information |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Gasoline-LEAR-PEPS |         | Read DTCs           |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Gasoline-LEAR-PEPS |         | Clear DTCs          |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Gasoline-LEAR-PEPS |         | Read data streams   |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Diesel-LEAR-PEPS   |         | Version Information |             |

| model                    | year      | department | system                 | subitem | function            | subfunction |
|--------------------------|-----------|------------|------------------------|---------|---------------------|-------------|
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Diesel-LEAR-PEPS       |         | Read DTCs           |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Diesel-LEAR-PEPS       |         | Clear DTCs          |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Diesel-LEAR-PEPS       |         | Read data streams   |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Borgwaner-4WD-TCCU     |         | Version Information |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Borgwaner-4WD-TCCU     |         | Read DTCs           |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Borgwaner-4WD-TCCU     |         | Clear DTCs          |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Borgwaner-4WD-TCCU     |         | Read data streams   |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Whetron-360° AVM       |         | Version Information |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Whetron-360° AVM       |         | Read DTCs           |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Whetron-360° AVM       |         | Clear DTCs          |             |
| NEW<br>YuSheng(<br>S350) | 1996-2018 | --         | Whetron-360° AVM       |         | Read data streams   |             |
| YuSheng<br>S330          | 1996-2018 | --         | Diesel-Continental-EMS |         | Version Information |             |
| YuSheng<br>S330          | 1996-2018 | --         | Diesel-Continental-EMS |         | Read DTCs           |             |
| YuSheng<br>S330          | 1996-2018 | --         | Diesel-Continental-EMS |         | Clear DTCs          |             |
| YuSheng<br>S330          | 1996-2018 | --         | Diesel-Continental-EMS |         | Read data streams   |             |
| YuSheng<br>S330          | 1996-2018 | --         | Bosch-ESP9             |         | Version Information |             |
| YuSheng<br>S330          | 1996-2018 | --         | Bosch-ESP9             |         | Read DTCs           |             |
| YuSheng<br>S330          | 1996-2018 | --         | Bosch-ESP9             |         | Clear DTCs          |             |
| YuSheng<br>S330          | 1996-2018 | --         | Bosch-ESP9             |         | Read data streams   |             |
| YuSheng<br>S330          | 1996-2018 | --         | Continental/AVL-TCU    |         | Version Information |             |
| YuSheng<br>S330          | 1996-2018 | --         | Continental/AVL-TCU    |         | Read DTCs           |             |
| YuSheng<br>S330          | 1996-2018 | --         | Continental/AVL-TCU    |         | Clear DTCs          |             |
| YuSheng<br>S330          | 1996-2018 | --         | Continental/AVL-TCU    |         | Read data streams   |             |
| YuSheng<br>S330          | 1996-2018 | --         | ZF-EPS                 |         | Version Information |             |
| YuSheng<br>S330          | 1996-2018 | --         | ZF-EPS                 |         | Read DTCs           |             |
| YuSheng<br>S330          | 1996-2018 | --         | ZF-EPS                 |         | Clear DTCs          |             |
| YuSheng<br>S330          | 1996-2018 | --         | ZF-EPS                 |         | Read data streams   |             |
| YuSheng<br>S330          | 1996-2018 | --         | Bosch-SRS              |         | Version Information |             |
| YuSheng<br>S330          | 1996-2018 | --         | Bosch-SRS              |         | Read DTCs           |             |
| YuSheng<br>S330          | 1996-2018 | --         | Bosch-SRS              |         | Clear DTCs          |             |
| YuSheng<br>S330          | 1996-2018 | --         | Bosch-SRS              |         | Read data streams   |             |
| YuSheng<br>S330          | 1996-2018 | --         | LEAR-PEPS              |         | Version Information |             |
| YuSheng<br>S330          | 1996-2018 | --         | LEAR-PEPS              |         | Read DTCs           |             |

| model        | year      | department | system                 | subitem | function            | subfunction                        |
|--------------|-----------|------------|------------------------|---------|---------------------|------------------------------------|
| YuSheng S330 | 1996-2018 | --         | LEAR-PEPS              |         | Clear DTCs          |                                    |
| YuSheng S330 | 1996-2018 | --         | LEAR-PEPS              |         | Read data streams   |                                    |
| YuSheng S330 | 1996-2018 | --         | TongZhi-BCM            |         | Version Information |                                    |
| YuSheng S330 | 1996-2018 | --         | TongZhi-BCM            |         | Read DTCs           |                                    |
| YuSheng S330 | 1996-2018 | --         | TongZhi-BCM            |         | Clear DTCs          |                                    |
| YuSheng S330 | 1996-2018 | --         | TongZhi-BCM            |         | Read data streams   |                                    |
| YuSheng S330 | 1996-2018 | --         | Visteon-ICM            |         | Version Information |                                    |
| YuSheng S330 | 1996-2018 | --         | Visteon-ICM            |         | Read DTCs           |                                    |
| YuSheng S330 | 1996-2018 | --         | Visteon-ICM            |         | Clear DTCs          |                                    |
| YuSheng S330 | 1996-2018 | --         | Visteon-ICM            |         | Read data streams   |                                    |
| YuSheng S330 | 1996-2018 | --         | Whetron-360° AVM       |         | Version Information |                                    |
| YuSheng S330 | 1996-2018 | --         | Whetron-360° AVM       |         | Read DTCs           |                                    |
| YuSheng S330 | 1996-2018 | --         | Whetron-360° AVM       |         | Clear DTCs          |                                    |
| YuSheng S330 | 1996-2018 | --         | Whetron-360° AVM       |         | Read data streams   |                                    |
| YuSheng S330 | 1996-2018 | --         | Whetron-IMMO           |         | Version Information |                                    |
| YuSheng S330 | 1996-2018 | --         | Whetron-IMMO           |         | Read DTCs           |                                    |
| YuSheng S330 | 1996-2018 | --         | Whetron-IMMO           |         | Clear DTCs          |                                    |
| YuSheng S330 | 1996-2018 | --         | Whetron-IMMO           |         | Read data streams   |                                    |
| YuSheng S330 | 1996-2018 | --         | BaoLong-TMPS           |         | Version Information |                                    |
| YuSheng S330 | 1996-2018 | --         | BaoLong-TMPS           |         | Read DTCs           |                                    |
| YuSheng S330 | 1996-2018 | --         | BaoLong-TMPS           |         | Clear DTCs          |                                    |
| YuSheng S330 | 1996-2018 | --         | BaoLong-TMPS           |         | Read data streams   |                                    |
| YuSheng S330 | 1996-2018 | --         | XinDian-AC             |         | Version Information |                                    |
| YuSheng S330 | 1996-2018 | --         | XinDian-AC             |         | Read DTCs           |                                    |
| YuSheng S330 | 1996-2018 | --         | XinDian-AC             |         | Clear DTCs          |                                    |
| YuSheng S330 | 1996-2018 | --         | XinDian-AC             |         | Read data streams   |                                    |
| YuSheng S330 | 1996-2018 | --         | HuaYang-MP5            |         | Version Information |                                    |
| YuSheng S330 | 1996-2018 | --         | HuaYang-MP5            |         | Read DTCs           |                                    |
| YuSheng S330 | 1996-2018 | --         | HuaYang-MP5            |         | Clear DTCs          |                                    |
| YuSheng S330 | 1996-2018 | --         | HuaYang-MP5            |         | Read data streams   |                                    |
| New YuHu     | 1996-2018 | --         | UASE Engine            |         | Actuation test      |                                    |
| New YuHu     | 1996-2018 | --         | UASE Engine            |         | Special functions   | Hardware reset                     |
| New YuHu     | 1996-2018 | --         | UASE Engine            |         | Special functions   | Write in VIN                       |
| New YuHu     | 1996-2018 | --         | UASE Engine            |         | Special functions   | Write programming date             |
| New YuHu     | 1996-2018 | --         | UASE Engine            |         | Special functions   | Write repair factory code          |
| New YuHu     | 1996-2018 | --         | Diesel-Continental-EMS |         | Actuation test      |                                    |
| New YuHu     | 1996-2018 | --         | Diesel-Continental-EMS |         | Special functions   | Write in VIN                       |
| New YuHu     | 1996-2018 | --         | Diesel-Continental-EMS |         | Special functions   | Write in IQA                       |
| New YuHu     | 1996-2018 | --         | Diesel-Continental-EMS |         | Special functions   | Cylinder cutoff test               |
| New YuHu     | 1996-2018 | --         | Diesel-Continental-EMS |         | Special functions   | After-sale forced DPF regeneration |
| New YuHu     | 1996-2018 | --         | Diesel-Continental-EMS |         | Special functions   | Garage MFMA                        |
| New YuHu     | 1996-2018 | --         | Diesel-Continental-EMS |         | Special functions   | Change oil                         |
| New YuHu     | 1996-2018 | --         | Diesel-Continental-EMS |         | Special functions   | EFP actuator test                  |

| model | year      | department | system                 | subitem | function          | subfunction                              |
|-------|-----------|------------|------------------------|---------|-------------------|------------------------------------------|
| New   | 1996-2018 | --         | Diesel-Continental-EMS |         | Special functions | Update DPF                               |
| New   | 1996-2018 | --         | Bosch-ESP              |         | Actuation test    |                                          |
| New   | 1996-2018 | --         | Bosch-ESP              |         | Special functions | Write in VIN                             |
| New   | 1996-2018 | --         | Bosch-ESP              |         | Special functions | Steering angle sensor calibration        |
| New   | 1996-2018 | --         | Bosch-ESP              |         | Special functions | Yaw rate acceleration sensor calibration |
| New   | 1996-2018 | --         | Bosch-ESP              |         | Special functions | Modify filling status                    |
| New   | 1996-2018 | --         | Bosch-ESP              |         | Special functions | Modify EOL test status                   |
| New   | 1996-2018 | --         | Continental-SRS        |         | Actuation test    |                                          |
| New   | 1996-2018 | --         | Continental-SRS        |         | Special functions | ECU reset                                |
| New   | 1996-2018 | --         | Continental-SRS        |         | Special functions | Write in EOL lock code                   |
| New   | 1996-2018 | --         | Continental-SRS        |         | Special functions | Write in VIN                             |
| New   | 1996-2018 | --         | Continental-SRS        |         | Special functions | Write in programming date                |
| New   | 1996-2018 | --         | TongZhi-BCM            |         | Actuation test    |                                          |
| New   | 1996-2018 | --         | TongZhi-BCM            |         | Special functions | Remote controller learning               |
| New   | 1996-2018 | --         | TongZhi-BCM            |         | Special functions | Read vehicle configuration information   |
| New   | 1996-2018 | --         | TongZhi-BCM            |         | Special functions | Write vehicle configuration information  |
| New   | 1996-2018 | --         | TongZhi-BCM            |         | Special functions | Write in VIN                             |
| New   | 1996-2018 | --         | TongZhi-BCM            |         | Special functions | Hardware reset                           |
| New   | 1996-2018 | --         | Visteon-ICM            |         | Actuation test    |                                          |
| New   | 1996-2018 | --         | Visteon-ICM            |         | Special functions | Refresh vehicle manufacturer part number |
| New   | 1996-2018 | --         | Visteon-ICM            |         | Special functions | Refresh system supplier ID               |
| New   | 1996-2018 | --         | Visteon-ICM            |         | Special functions | Refresh ECU serial number                |
| New   | 1996-2018 | --         | Visteon-ICM            |         | Special functions | Refresh VIN                              |
| New   | 1996-2018 | --         | Visteon-ICM            |         | Special functions | Refresh ECU hardware number              |
| New   | 1996-2018 | --         | Visteon-ICM            |         | Special functions | Refresh ECU hardware version number      |
| New   | 1996-2018 | --         | Visteon-ICM            |         | Special functions | Refresh ECU software number              |
| New   | 1996-2018 | --         | Visteon-ICM            |         | Special functions | Refresh ECU software version number      |
| New   | 1996-2018 | --         | Visteon-AC             |         | Special functions | Software Reset                           |
| New   | 1996-2018 | --         | LEAR-PEPS              |         | Special functions | Key matching                             |
| New   | 1996-2018 | --         | LEAR-PEPS              |         | Special functions | Replace ESCL                             |
| New   | 1996-2018 | --         | LEAR-PEPS              |         | Special functions | Replace EMS                              |
| New   | 1996-2018 | --         | LEAR-PEPS              |         | Special functions | Replace PEPS                             |
| New   | 1996-2018 | --         | Diesel-LEAR-PEPS       |         | Special functions | Key matching                             |
| New   | 1996-2018 | --         | Diesel-LEAR-PEPS       |         | Special functions | Replace ESCL                             |
| New   | 1996-2018 | --         | Diesel-LEAR-PEPS       |         | Special functions | Replace EMS                              |
| New   | 1996-2018 | --         | Diesel-LEAR-PEPS       |         | Special functions | Replace PEPS                             |
| New   | 1996-2018 | --         | Borgwaner-4WD-TCCU     |         | Actuation test    |                                          |
| New   | 1996-2018 | --         | Borgwaner-4WD-TCCU     |         | Special functions | Refresh VIN                              |
| New   | 1996-2018 | --         | Borgwaner-4WD-TCCU     |         | Special functions | Refresh programming position             |
| New   | 1996-2018 | --         | Borgwaner-4WD-TCCU     |         | Special functions | Refresh Programming Date                 |
| New   | 1996-2018 | --         | BaoLong-TMPS           |         | Special functions | front left Tire ID Learning              |
| New   | 1996-2018 | --         | BaoLong-TMPS           |         | Special functions | front right Tire ID Learning             |
| New   | 1996-2018 | --         | BaoLong-TMPS           |         | Special functions | rear left Tire ID Learning               |
| New   | 1996-2018 | --         | BaoLong-TMPS           |         | Special functions | rear right Tire ID Learning              |
| New   | 1996-2018 | --         | BaoLong-TMPS           |         | Special functions | All Tire ID Learning                     |

| model                | year      | department | system                              | subitem | function          | subfunction                                                       |
|----------------------|-----------|------------|-------------------------------------|---------|-------------------|-------------------------------------------------------------------|
| New YuHu             | 1996-2018 | --         | BaoLong-TMPS                        |         | Special functions | Tire Standard Pressure Value Configuration                        |
| New YuHu             | 1996-2018 | --         | BaoLong-TMPS                        |         | Special functions | Tire Standard Pressure Value Configuration                        |
| New YuHu             | 1996-2018 | --         | BaoLong-TMPS                        |         | Special functions | Tire Standard Pressure Value Configuration                        |
| New YuHu             | 1996-2018 | --         | BaoLong-TMPS                        |         | Special functions | Tire Standard Pressure Value Configuration                        |
| New YuHu             | 1996-2018 | --         | BaoLong-TMPS                        |         | Special functions | Hardware reset                                                    |
| New YuHu             | 1996-2018 | --         | BaoLong-TMPS                        |         | Special functions | Software Reset                                                    |
| JiangLing TeShun     | 1996-2018 | --         | BOSCH EDC17C81 National V           |         | Special functions | Temporary error prohibition function/engine factory configuration |
| JiangLing TeShun     | 1996-2018 | --         | BOSCH EDC17C81 National V           |         | Special functions | Un-clearable fault clearing function/manufacture r configuration  |
| JiangLing TeShun     | 1996-2018 | --         | Delphi gasoline engine (Euro V)     |         | Special functions | Tooth learning                                                    |
| JiangLing TeShun     | 1996-2018 | --         | YaTai ABS(Anti-lock Braking System) |         | Special functions | Hydraulic filling status                                          |
| JiangLing TeShun     | 1996-2018 | --         | YaTai ABS(Anti-lock Braking System) |         | Special functions | EOL test status                                                   |
| JiangLing TeShun     | 1996-2018 | --         | Continental-SRS                     |         | Special functions | Write in EOL lock code                                            |
| JiangLing TeShun     | 1996-2018 | --         | Continental-SRS                     |         | Special functions | Write in VIN                                                      |
| JiangLing TeShun     | 1996-2018 | --         | Continental-SRS                     |         | Special functions | Write in programming date                                         |
| Baodian              | 1996-2018 | --         | Diesel-Bosch-C63                    |         | Special functions | Write in VIN                                                      |
| Baodian              | 1996-2018 | --         | Diesel-Bosch-C63                    |         | Special functions | Injector data                                                     |
| Baodian              | 1996-2018 | --         | Diesel-Bosch-C63                    |         | Special functions | Diesel particulate filter (DPF) value reset                       |
| Baodian              | 1996-2018 | --         | Diesel-Bosch-C63                    |         | Special functions | Diesel particulate filter (DPF) value forced regeneration         |
| Baowei               | 1996-2018 | --         | Diesel-Bosch-C63                    |         | Special functions | Write in VIN                                                      |
| Baowei               | 1996-2018 | --         | Diesel-Bosch-C63                    |         | Special functions | Injector data                                                     |
| Baowei               | 1996-2018 | --         | Diesel-Bosch-C63                    |         | Special functions | Diesel particulate filter (DPF) value reset                       |
| Baowei               | 1996-2018 | --         | Diesel-Bosch-C63                    |         | Special functions | Diesel particulate filter (DPF) value forced regeneration         |
| N310 1.8GDI Gasoline | 1996-2018 | --         | N310 1.8T                           |         | Actuation test    |                                                                   |
| N310 1.8GDI Gasoline | 1996-2018 | --         | N310 1.8T                           |         | Special functions | Reset all self-learning value                                     |
| N310 1.8GDI Gasoline | 1996-2018 | --         | N310 1.8T                           |         | Special functions | Parallel test                                                     |
| N310 1.8GDI Gasoline | 1996-2018 | --         | N310 1.8T                           |         | Special functions | A/C compressor relay self-checking                                |
| N310 1.8GDI Gasoline | 1996-2018 | --         | N310 1.8T                           |         | Special functions | IVVT oil outlet/inlet solenoid 1 self-check                       |
| N310 1.8GDI Gasoline | 1996-2018 | --         | N310 1.8T                           |         | Special functions | Cylinder 1#Self test                                              |
| N310 1.8GDI Gasoline | 1996-2018 | --         | N310 1.8T                           |         | Special functions | Cylinder 2#Self test                                              |

| model                      | year      | department | system    | subitem | function          | subfunction                                       |
|----------------------------|-----------|------------|-----------|---------|-------------------|---------------------------------------------------|
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Cylinder 3#Self test                              |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Cylinder 4#Self test                              |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Air ventilation valve<br>self-check               |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Variable intake<br>manifold switch self-<br>check |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Turbocharger self-<br>check                       |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Injector 1#Self test                              |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Injector 2#Self test                              |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Injector 3#Self test                              |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Injector 4#Self test                              |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Electronic throttle<br>position                   |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Driver request                                    |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Catalytic efficiency<br>diagnosis                 |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Idle speed control                                |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Starter relay 1#                                  |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Starter relay 2#                                  |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Engine start for the<br>first time                |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Electronic cooling fan<br>PWM1                    |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Electronic cooling fan<br>PWM2                    |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Carbon canister purge<br>solenoid self-check      |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Fuel pump relay                                   |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Fuel pump PWM                                     |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Flow control valve                                |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Vacuum pump                                       |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Cooling pump 1#                                   |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T |         | Special functions | Cooling pump 2#                                   |

| model                      | year      | department | system                  | subitem | function          | subfunction                                    |
|----------------------------|-----------|------------|-------------------------|---------|-------------------|------------------------------------------------|
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T               |         | Special functions | IVVT oil outlet/inlet<br>solenoid 2 self-check |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T               |         | Special functions | Rear oxygen heater 1                           |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T               |         | Special functions | Front oxygen heater 1                          |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T               |         | Special functions | Rear oxygen heater 2                           |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T               |         | Special functions | Front oxygen heater 2                          |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T               |         | Special functions | Reset starter<br>circulation counter           |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | N310 1.8T               |         | Special functions | Hardware reset                                 |
| N310<br>1.8GDI<br>Gasoline | 1996-2018 | --         | DongFangJiuLe SRS(AB10) |         | Special functions | Write in VIN                                   |
| New<br>YuSheng(<br>S350)   | 1996-2018 | --         | UASE Engine             |         | Actuation test    |                                                |
| New<br>YuSheng(<br>S350)   | 1996-2018 | --         | UASE Engine             |         | Special functions | Hardware reset                                 |
| New<br>YuSheng(<br>S350)   | 1996-2018 | --         | UASE Engine             |         | Special functions | Write in VIN                                   |
| New<br>YuSheng(<br>S350)   | 1996-2018 | --         | UASE Engine             |         | Special functions | Write programming<br>date                      |
| New<br>YuSheng(<br>S350)   | 1996-2018 | --         | UASE Engine             |         | Special functions | Write repair factory<br>code                   |
| New<br>YuSheng(<br>S350)   | 1996-2018 | --         | Diesel-Continental-EMS  |         | Actuation test    |                                                |
| New<br>YuSheng(<br>S350)   | 1996-2018 | --         | Diesel-Continental-EMS  |         | Special functions | Write in VIN                                   |
| New<br>YuSheng(<br>S350)   | 1996-2018 | --         | Diesel-Continental-EMS  |         | Special functions | Write in IQA                                   |
| New<br>YuSheng(<br>S350)   | 1996-2018 | --         | Diesel-Continental-EMS  |         | Special functions | Cylinder cutoff test                           |
| New<br>YuSheng(<br>S350)   | 1996-2018 | --         | Diesel-Continental-EMS  |         | Special functions | After-sale forced DPF<br>regeneration          |
| New<br>YuSheng(<br>S350)   | 1996-2018 | --         | Diesel-Continental-EMS  |         | Special functions | Garage MFMA                                    |
| New<br>YuSheng(<br>S350)   | 1996-2018 | --         | Diesel-Continental-EMS  |         | Special functions | Change oil                                     |
| New<br>YuSheng(<br>S350)   | 1996-2018 | --         | Diesel-Continental-EMS  |         | Special functions | EFP actuator test                              |
| New<br>YuSheng(<br>S350)   | 1996-2018 | --         | Diesel-Continental-EMS  |         | Special functions | Update DPF                                     |
| New<br>YuSheng(<br>S350)   | 1996-2018 | --         | Bosch-ESP               |         | Actuation test    |                                                |
| New<br>YuSheng(<br>S350)   | 1996-2018 | --         | Bosch-ESP               |         | Special functions | Write in VIN                                   |
| New<br>YuSheng(<br>S350)   | 1996-2018 | --         | Bosch-ESP               |         | Special functions | Steering angle sensor<br>calibration           |

| model             | year      | department | system          | subitem | function          | subfunction                              |
|-------------------|-----------|------------|-----------------|---------|-------------------|------------------------------------------|
| New YuSheng(S350) | 1996-2018 | --         | Bosch-ESP       |         | Special functions | Yaw rate acceleration sensor calibration |
| New YuSheng(S350) | 1996-2018 | --         | Bosch-ESP       |         | Special functions | Modify filling status                    |
| New YuSheng(S350) | 1996-2018 | --         | Bosch-ESP       |         | Special functions | Modify EOL test status                   |
| New YuSheng(S350) | 1996-2018 | --         | Continental-SRS |         | Actuation test    |                                          |
| New YuSheng(S350) | 1996-2018 | --         | Continental-SRS |         | Special functions | ECU reset                                |
| New YuSheng(S350) | 1996-2018 | --         | Continental-SRS |         | Special functions | Write in EOL lock code                   |
| New YuSheng(S350) | 1996-2018 | --         | Continental-SRS |         | Special functions | Write in VIN                             |
| New YuSheng(S350) | 1996-2018 | --         | Continental-SRS |         | Special functions | Write in programming date                |
| New YuSheng(S350) | 1996-2018 | --         | TongZhi-BCM     |         | Actuation test    |                                          |
| New YuSheng(S350) | 1996-2018 | --         | TongZhi-BCM     |         | Special functions | Remote controller learning               |
| New YuSheng(S350) | 1996-2018 | --         | TongZhi-BCM     |         | Special functions | Read vehicle configuration information   |
| New YuSheng(S350) | 1996-2018 | --         | TongZhi-BCM     |         | Special functions | Write vehicle configuration information  |
| New YuSheng(S350) | 1996-2018 | --         | TongZhi-BCM     |         | Special functions | Write in VIN                             |
| New YuSheng(S350) | 1996-2018 | --         | TongZhi-BCM     |         | Special functions | Hardware reset                           |
| New YuSheng(S350) | 1996-2018 | --         | Visteon-ICM     |         | Actuation test    |                                          |
| New YuSheng(S350) | 1996-2018 | --         | Visteon-ICM     |         | Special functions | Refresh vehicle manufacturer part number |
| New YuSheng(S350) | 1996-2018 | --         | Visteon-ICM     |         | Special functions | Refresh system supplier ID               |
| New YuSheng(S350) | 1996-2018 | --         | Visteon-ICM     |         | Special functions | Refresh ECU serial number                |
| New YuSheng(S350) | 1996-2018 | --         | Visteon-ICM     |         | Special functions | Refresh VIN                              |
| New YuSheng(S350) | 1996-2018 | --         | Visteon-ICM     |         | Special functions | Refresh ECU hardware number              |
| New YuSheng(S350) | 1996-2018 | --         | Visteon-ICM     |         | Special functions | Refresh ECU hardware version number      |
| New YuSheng(S350) | 1996-2018 | --         | Visteon-ICM     |         | Special functions | Refresh ECU software number              |
| New YuSheng(S350) | 1996-2018 | --         | Visteon-AC      |         | Special functions | Refresh ECU software version number      |
| New YuSheng(S350) | 1996-2018 | --         | LEAR-PEPS       |         | Special functions | Key matching                             |
| New YuSheng(S350) | 1996-2018 | --         | LEAR-PEPS       |         | Special functions | Replace ESCL                             |
| New YuSheng(S350) | 1996-2018 | --         | LEAR-PEPS       |         | Special functions | Replace EMS                              |

| model             | year      | department | system             | subitem | function          | subfunction                                 |
|-------------------|-----------|------------|--------------------|---------|-------------------|---------------------------------------------|
| New YuSheng(S350) | 1996-2018 | --         | LEAR-PEPS          |         | Special functions | Replace PEPS                                |
| New YuSheng(S350) | 1996-2018 | --         | Diesel-LEAR-PEPS   |         | Special functions | Key matching                                |
| New YuSheng(S350) | 1996-2018 | --         | Diesel-LEAR-PEPS   |         | Special functions | Replace ESCL                                |
| New YuSheng(S350) | 1996-2018 | --         | Diesel-LEAR-PEPS   |         | Special functions | Replace EMS                                 |
| New YuSheng(S350) | 1996-2018 | --         | Diesel-LEAR-PEPS   |         | Special functions | Replace PEPS                                |
| New YuSheng(S350) | 1996-2018 | --         | Borgwaner-4WD-TCCU |         | Actuation test    |                                             |
| New YuSheng(S350) | 1996-2018 | --         | Borgwaner-4WD-TCCU |         | Special functions | Refresh VIN                                 |
| New YuSheng(S350) | 1996-2018 | --         | Borgwaner-4WD-TCCU |         | Special functions | Refresh programming position                |
| New YuSheng(S350) | 1996-2018 | --         | Borgwaner-4WD-TCCU |         | Special functions | Refresh Programming Date                    |
| New YuSheng(S350) | 1996-2018 | --         | Whetron-360° AVM   |         | Actuation test    |                                             |
| New YuSheng(S350) | 1996-2018 | --         | Whetron-360° AVM   |         | Special functions | Automatic splicing                          |
| New YuSheng(S350) | 1996-2018 | --         | Whetron-360° AVM   |         | Special functions | Manual splicing                             |
| New YuSheng(S350) | 1996-2018 | --         | Whetron-360° AVM   |         | Special functions | Splicing rejection matrix backup            |
| New YuSheng(S350) | 1996-2018 | --         | Whetron-360° AVM   |         | Special functions | Splicing finished                           |
| YuSheng(S330)     | 1996-2018 | --         | Continental-EMS    |         | Actuation test    |                                             |
| YuSheng(S330)     | 1996-2018 | --         | Continental-EMS    |         | Special functions | Reset all self-learning value               |
| YuSheng(S330)     | 1996-2018 | --         | Continental-EMS    |         | Special functions | Parallel test                               |
| YuSheng(S330)     | 1996-2018 | --         | Continental-EMS    |         | Special functions | A/C compressor relay self-checking          |
| YuSheng(S330)     | 1996-2018 | --         | Continental-EMS    |         | Special functions | IVVT oil outlet/inlet solenoid 1 self-check |
| YuSheng(S330)     | 1996-2018 | --         | Continental-EMS    |         | Special functions | Cylinder 1#Self test                        |
| YuSheng(S330)     | 1996-2018 | --         | Continental-EMS    |         | Special functions | Cylinder 2#Self test                        |
| YuSheng(S330)     | 1996-2018 | --         | Continental-EMS    |         | Special functions | Cylinder 3#Self test                        |
| YuSheng(S330)     | 1996-2018 | --         | Continental-EMS    |         | Special functions | Cylinder 4#Self test                        |
| YuSheng(S330)     | 1996-2018 | --         | Continental-EMS    |         | Special functions | Air ventilation valve self-check            |
| YuSheng(S330)     | 1996-2018 | --         | Continental-EMS    |         | Special functions | Variable intake manifold switch self-check  |
| YuSheng(S330)     | 1996-2018 | --         | Continental-EMS    |         | Special functions | Turbocharger self-check                     |
| YuSheng(S330)     | 1996-2018 | --         | Continental-EMS    |         | Special functions | Injector 1#Self test                        |
| YuSheng(S330)     | 1996-2018 | --         | Continental-EMS    |         | Special functions | Injector 2#Self test                        |
| YuSheng(S330)     | 1996-2018 | --         | Continental-EMS    |         | Special functions | Injector 3#Self test                        |
| YuSheng(S330)     | 1996-2018 | --         | Continental-EMS    |         | Special functions | Injector 4#Self test                        |

| model         | year      | department | system              | subitem | function          | subfunction                                 |
|---------------|-----------|------------|---------------------|---------|-------------------|---------------------------------------------|
| YuSheng(S330) | 1996-2018 | --         | Continental-EMS     |         | Special functions | Electronic throttle position                |
| YuSheng(S330) | 1996-2018 | --         | Continental-EMS     |         | Special functions | Driver request                              |
| YuSheng(S330) | 1996-2018 | --         | Continental-EMS     |         | Special functions | Catalytic efficiency diagnosis              |
| YuSheng(S330) | 1996-2018 | --         | Continental-EMS     |         | Special functions | Idle speed control                          |
| YuSheng(S330) | 1996-2018 | --         | Continental-EMS     |         | Special functions | Starter relay 1#                            |
| YuSheng(S330) | 1996-2018 | --         | Continental-EMS     |         | Special functions | Starter relay 2#                            |
| YuSheng(S330) | 1996-2018 | --         | Continental-EMS     |         | Special functions | Engine start for the first time             |
| YuSheng(S330) | 1996-2018 | --         | Continental-EMS     |         | Special functions | Electronic cooling fan PWM1                 |
| YuSheng(S330) | 1996-2018 | --         | Continental-EMS     |         | Special functions | Electronic cooling fan PWM2                 |
| YuSheng(S330) | 1996-2018 | --         | Continental-EMS     |         | Special functions | Carbon canister purge solenoid self-check   |
| YuSheng(S330) | 1996-2018 | --         | Continental-EMS     |         | Special functions | Fuel pump relay                             |
| YuSheng(S330) | 1996-2018 | --         | Continental-EMS     |         | Special functions | Fuel pump PWM                               |
| YuSheng(S330) | 1996-2018 | --         | Bosch-ESP9          |         | Actuation test    | Flow control valve                          |
| YuSheng(S330) | 1996-2018 | --         | Bosch-ESP9          |         | Special functions | Vacuum pump                                 |
| YuSheng(S330) | 1996-2018 | --         | Bosch-ESP9          |         | Special functions | Cooling pump 1#                             |
| YuSheng(S330) | 1996-2018 | --         | Bosch-ESP9          |         | Special functions | Cooling pump 2#                             |
| YuSheng(S330) | 1996-2018 | --         | Bosch-ESP9          |         | Special functions | IVVT oil outlet/inlet solenoid 2 self-check |
| YuSheng(S330) | 1996-2018 | --         | Bosch-ESP9          |         | Special functions | Rear oxygen heater 1                        |
| YuSheng(S330) | 1996-2018 | --         | Bosch-ESP9          |         | Special functions | Front oxygen heater 1                       |
| YuSheng(S330) | 1996-2018 | --         | Bosch-ESP9          |         | Special functions | Rear oxygen heater 2                        |
| YuSheng(S330) | 1996-2018 | --         | Bosch-ESP9          |         | Special functions | Front oxygen heater 2                       |
| YuSheng(S330) | 1996-2018 | --         | Bosch-ESP9          |         | Special functions | Reset starter circulation counter           |
| YuSheng(S330) | 1996-2018 | --         | Continental/AVL-TCU |         | Special functions | Hardware reset                              |
| YuSheng(S330) | 1996-2018 | --         | ZF-EPS              |         | Special functions | Steering angle calibration                  |
| YuSheng(S330) | 1996-2018 | --         | ZF-EPS              |         | Special functions | Hardware reset                              |
| YuSheng(S330) | 1996-2018 | --         | Bosch-SRS           |         | Actuation test    |                                             |
| YuSheng(S330) | 1996-2018 | --         | Bosch-SRS           |         | Special functions | Write in VIN                                |
| YuSheng(S330) | 1996-2018 | --         | Bosch-SRS           |         | Special functions | Hardware reset                              |
| YuSheng(S330) | 1996-2018 | --         | LEAR-PEPS           |         | Special functions | Key matching                                |
| YuSheng(S330) | 1996-2018 | --         | LEAR-PEPS           |         | Special functions | Replace ESCL                                |
| YuSheng(S330) | 1996-2018 | --         | LEAR-PEPS           |         | Special functions | Replace EMS                                 |
| YuSheng(S330) | 1996-2018 | --         | LEAR-PEPS           |         | Special functions | Replace PEPS                                |
| YuSheng(S330) | 1996-2018 | --         | LEAR-PEPS           |         | Special functions | Data write-in                               |
| YuSheng(S330) | 1996-2018 | --         | LEAR-PEPS           |         | Special functions | Hardware reset                              |
| YuSheng(S330) | 1996-2018 | --         | TongZhi-BCM         |         | Actuation test    |                                             |
| YuSheng(S330) | 1996-2018 | --         | TongZhi-BCM         |         | Special functions | Remote learning                             |

| model         | year      | department | system       | subitem | function            | subfunction                                |
|---------------|-----------|------------|--------------|---------|---------------------|--------------------------------------------|
| YuSheng(S330) | 1996-2018 | --         | TongZhi-BCM  |         | Special functions   | Hardware reset                             |
| YuSheng(S330) | 1996-2018 | --         | Visteon-ICM  |         | Actuation test      |                                            |
| YuSheng(S330) | 1996-2018 | --         | Visteon-ICM  |         | Special functions   | Hardware reset                             |
| YuSheng(S330) | 1996-2018 | --         | Whetron-IMMO |         | Special functions   | After-sale checking key number             |
| YuSheng(S330) | 1996-2018 | --         | Whetron-IMMO |         | Special functions   | Key matching                               |
| YuSheng(S330) | 1996-2018 | --         | Whetron-IMMO |         | Special functions   | Match EMS                                  |
| YuSheng(S330) | 1996-2018 | --         | Whetron-IMMO |         | Special functions   | Match IMMO                                 |
| YuSheng(S330) | 1996-2018 | --         | Whetron-IMMO |         | Special functions   | Write in VIN                               |
| YuSheng(S330) | 1996-2018 | --         | BaoLong-TMPS |         | Special functions   | Tire ID Learning                           |
| YuSheng(S330) | 1996-2018 | --         | BaoLong-TMPS |         | Special functions   | Tire ID Learning                           |
| YuSheng(S330) | 1996-2018 | --         | BaoLong-TMPS |         | Special functions   | Tire ID Learning                           |
| YuSheng(S330) | 1996-2018 | --         | BaoLong-TMPS |         | Special functions   | Tire ID Learning                           |
| YuSheng(S330) | 1996-2018 | --         | BaoLong-TMPS |         | Special functions   | Tire ID Learning                           |
| YuSheng(S330) | 1996-2018 | --         | BaoLong-TMPS |         | Special functions   | Tire Standard Pressure Value Configuration |
| YuSheng(S330) | 1996-2018 | --         | BaoLong-TMPS |         | Special functions   | Tire Standard Pressure Value Configuration |
| YuSheng(S330) | 1996-2018 | --         | BaoLong-TMPS |         | Special functions   | Tire Standard Pressure Value Configuration |
| YuSheng(S330) | 1996-2018 | --         | BaoLong-TMPS |         | Special functions   | Hardware reset                             |
| YuSheng(S330) | 1996-2018 | --         | BaoLong-TMPS |         | Special functions   | Software Reset                             |
| YuSheng(S330) | 1996-2018 | --         | XinDian-AC   |         | Special functions   | Software Reset                             |
| Light truck   | 1996-2018 | N800 BEV   | VCU          |         | Version Information |                                            |
| Light truck   | 1996-2018 | N800 BEV   | VCU          |         | Read DTCs           |                                            |
| Light truck   | 1996-2018 | N800 BEV   | VCU          |         | Clear DTCs          |                                            |
| Light truck   | 1996-2018 | N800 BEV   | VCU          |         | Read data streams   |                                            |
| Light truck   | 1996-2018 | N800 BEV   | VCU          |         | Actuation test      |                                            |
| Light truck   | 1996-2018 | N800 BEV   | VCU          |         | Special functions   | 1. Self-learning of brake pedal position   |
| Light truck   | 1996-2018 | N800 BEV   | VCU          |         | Special functions   | 2. Write VIN                               |
| Light truck   | 1996-2018 | N800 BEV   | VCU          |         | Special functions   | 3. The TBOX configuration                  |
| Light truck   | 1996-2018 | N800 BEV   | MCU          |         | Version Information |                                            |
| Light truck   | 1996-2018 | N800 BEV   | MCU          |         | Read DTCs           |                                            |
| Light truck   | 1996-2018 | N800 BEV   | MCU          |         | Clear DTCs          |                                            |
| Light truck   | 1996-2018 | N800 BEV   | MCU          |         | Read data streams   |                                            |
| Light truck   | 1996-2018 | N800 BEV   | MCU          |         | Actuation test      |                                            |
| Light truck   | 1996-2018 | N800 BEV   | MCU          |         | Special functions   | 1. Write VIN                               |
| Light truck   | 1996-2018 | N800 BEV   | OBC          |         | Version Information |                                            |
| Light truck   | 1996-2018 | N800 BEV   | OBC          |         | Read DTCs           |                                            |

| model       | year      | department | system | subitem | function            | subfunction        |
|-------------|-----------|------------|--------|---------|---------------------|--------------------|
| Light truck | 1996-2018 | N800 BEV   | OBC    |         | Clear DTCs          |                    |
| Light truck | 1996-2018 | N800 BEV   | OBC    |         | Read data streams   |                    |
| Light truck | 1996-2018 | N800 BEV   | OBC    |         | Special functions   | 1. Write VIN       |
| Light truck | 1996-2018 | N800 BEV   | BMS    |         | Version Information |                    |
| Light truck | 1996-2018 | N800 BEV   | BMS    |         | Read DTCs           |                    |
| Light truck | 1996-2018 | N800 BEV   | BMS    |         | Clear DTCs          |                    |
| Light truck | 1996-2018 | N800 BEV   | BMS    |         | Read data streams   |                    |
| Light truck | 1996-2018 | N800 BEV   | BMS    |         | Special functions   | 1. Functional test |
| Light truck | 1996-2018 | N800 BEV   | BMS    |         | Special functions   | 2. Write VIN       |
| Light truck | 1996-2018 | N800 BEV   | DCDC   |         | Version Information |                    |
| Light truck | 1996-2018 | N800 BEV   | DCDC   |         | Read DTCs           |                    |
| Light truck | 1996-2018 | N800 BEV   | DCDC   |         | Clear DTCs          |                    |
| Light truck | 1996-2018 | N800 BEV   | DCDC   |         | Read data streams   |                    |
| Light truck | 1996-2018 | N800 BEV   | DCDC   |         | Actuation test      |                    |
| Light truck | 1996-2018 | N800 BEV   | DCDC   |         | Special functions   | 1. Write VIN       |
| Light truck | 1996-2018 | N800 BEV   | ABS    |         | Version Information |                    |
| Light truck | 1996-2018 | N800 BEV   | ABS    |         | Read DTCs           |                    |
| Light truck | 1996-2018 | N800 BEV   | ABS    |         | Clear DTCs          |                    |
| Light truck | 1996-2018 | N800 BEV   | ABS    |         | Read data streams   |                    |
| Light truck | 1996-2018 | N800 BEV   | ABS    |         | Actuation test      |                    |
| Light truck | 1996-2018 | N800 BEV   | SCU    |         | Version Information |                    |
| Light truck | 1996-2018 | N800 BEV   | SCU    |         | Read DTCs           |                    |
| Light truck | 1996-2018 | N800 BEV   | SCU    |         | Clear DTCs          |                    |
| Light truck | 1996-2018 | N800 BEV   | SCU    |         | Actuation test      |                    |
| Light truck | 1996-2018 | N800 BEV   | SCU    |         | Special functions   | 1. Remote learning |
| Light truck | 1996-2018 | N800 BEV   | SCU    |         | Special functions   | 2. Hardware reset  |
| Light truck | 1996-2018 | N800 BEV   | SCU    |         | Special functions   | 3. Write VIN       |
| Light truck | 1996-2018 | N800 BEV   | BCM    |         | Version Information |                    |
| Light truck | 1996-2018 | N800 BEV   | BCM    |         | Read DTCs           |                    |
| Light truck | 1996-2018 | N800 BEV   | BCM    |         | Clear DTCs          |                    |
| Light truck | 1996-2018 | N800 BEV   | BCM    |         | Read data streams   |                    |
| Light truck | 1996-2018 | N800 BEV   | BCM    |         | Actuation test      |                    |
| Light truck | 1996-2018 | N800 BEV   | BCM    |         | Special functions   | 1. Write VIN       |
| Light truck | 1996-2018 | N800 BEV   | BCM    |         | Special functions   | 2. Hardware reset  |
| Light truck | 1996-2018 | N800 BEV   | BCM    |         | Special functions   | 3. Software reset  |
| Light truck | 1996-2018 | N800 BEV   | ICM    |         | Version Information |                    |
| Light truck | 1996-2018 | N800 BEV   | ICM    |         | Read DTCs           |                    |
| Light truck | 1996-2018 | N800 BEV   | ICM    |         | Clear DTCs          |                    |
| Light truck | 1996-2018 | N800 BEV   | ICM    |         | Read data streams   |                    |

| model       | year      | department        | system                               | subitem | function            | subfunction                     |
|-------------|-----------|-------------------|--------------------------------------|---------|---------------------|---------------------------------|
| Light truck | 1996-2018 | N800 BEV          | ICM                                  |         | Special functions   | 1. Write VIN                    |
| Light truck | 1996-2018 | N800 BEV          | ACM                                  |         | Version Information |                                 |
| Light truck | 1996-2018 | N800 BEV          | ACM                                  |         | Read DTCs           |                                 |
| Light truck | 1996-2018 | N800 BEV          | ACM                                  |         | Clear DTCs          |                                 |
| Light truck | 1996-2018 | N800 BEV          | ACM                                  |         | Read data streams   |                                 |
| Light truck | 1996-2018 | N800 BEV          | ACM                                  |         | Special functions   | 1. Write VIN                    |
| Light truck | 1996-2018 | N800 BEV          | TBOX                                 |         | Version Information |                                 |
| Light truck | 1996-2018 | N800 BEV          | TBOX                                 |         | Read DTCs           |                                 |
| Light truck | 1996-2018 | N800 BEV          | TBOX                                 |         | Clear DTCs          |                                 |
| Light truck | 1996-2018 | N800 BEV          | TBOX                                 |         | Read data streams   |                                 |
| Light truck | 1996-2018 | N800 BEV          | GW                                   |         | Version Information |                                 |
| Light truck | 1996-2018 | N800 BEV          | GW                                   |         | Read DTCs           |                                 |
| Light truck | 1996-2018 | N800 BEV          | GW                                   |         | Clear DTCs          |                                 |
| Light truck | 1996-2018 | N800 BEV          | GW                                   |         | Special functions   | 1.写入VIN                         |
| Light truck | 1996-2018 | --                | Beijing heavy duty country five TBOX |         | Version Information |                                 |
| Light truck | 1996-2018 | --                | Beijing heavy duty country five TBOX |         | Read DTCs           |                                 |
| Light truck | 1996-2018 | --                | Beijing heavy duty country five TBOX |         | Clear DTCs          |                                 |
| Light truck | 1996-2018 | --                | Beijing heavy duty country five TBOX |         | Read data streams   |                                 |
| Light truck | 1996-2018 | --                | Beijing heavy duty country five TBOX |         | Special functions   | 1. Write VIN                    |
| Light truck | 1996-2018 | N800 HP           | Body control module -BCM             |         | Version Information |                                 |
| Light truck | 1996-2018 | N800 HP           | Body control module -BCM             |         | Read DTCs           |                                 |
| Light truck | 1996-2018 | N800 HP           | Body control module -BCM             |         | Clear DTCs          |                                 |
| Light truck | 1996-2018 | N800 HP           | Body control module -BCM             |         | Read data streams   |                                 |
| Light truck | 1996-2018 | N800 HP           | Body control module -BCM             |         | Actuation test      |                                 |
| Light truck | 1996-2018 | N800 HP           | Body control module -BCM             |         | Special functions   | 1. Remote learning              |
| Light truck | 1996-2018 | N800 HP           | Body control module -BCM             |         | Special functions   | 2. Wipe all remote controls     |
| Light truck | 1996-2018 | N800 HP           | Body control module -BCM             |         | Special functions   | 3. Hardware reset               |
| Light truck | 1996-2018 | N800 HP           | Body control module -BCM             |         | Special functions   | 4. Write VIN                    |
| Light truck | 1996-2018 | N800 HP           | WANAN air brake ABS                  |         | Version Information |                                 |
| Light truck | 1996-2018 | N800 HP           | WANAN air brake ABS                  |         | Read DTCs           |                                 |
| Light truck | 1996-2018 | N800 HP           | WANAN air brake ABS                  |         | Clear DTCs          |                                 |
| Light truck | 1996-2018 | N800 HP           | WANAN air brake ABS                  |         | Read data streams   |                                 |
| Light truck | 1996-2018 | N800 HP           | WANAN air brake ABS                  |         | Actuation test      |                                 |
| Light truck | 1996-2018 | N800 HP           | WANAN air brake ABS                  |         | Special functions   | 1. Enter the ECU number         |
| Light truck | 1996-2018 | N800 HP           | WANAN air brake ABS                  |         | Special functions   | 2. Enter VIN code               |
| Light truck | 1996-2018 | N800 HP           | WANAN air brake ABS                  |         | Special functions   | 3. Enter the vehicle model code |
| YuSheng     | 1996-2018 | New YuSheng(S350) | DONGFANGJIULE - clip system -APM     |         | Version Information |                                 |
| YuSheng     | 1996-2018 | New YuSheng(S351) | DONGFANGJIULE - clip system -APM     |         | Read DTCs           |                                 |

| model    | year      | department        | system                           | subitem | function                                                                       | subfunction                                                                                                                                                                                                                                                                                                                                                                                         |
|----------|-----------|-------------------|----------------------------------|---------|--------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| YuSheng  | 1996-2018 | New YuSheng(S352) | DONGFANGJIULE - clip system -APM |         | Clear DTCs                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                     |
| YuSheng  | 1996-2018 | New YuSheng(S353) | DONGFANGJIULE - clip system -APM |         | Read data streams                                                              |                                                                                                                                                                                                                                                                                                                                                                                                     |
| YuSheng  | 1996-2018 | New YuSheng(S354) | DONGFANGJIULE - clip system -APM |         | Actuation test                                                                 |                                                                                                                                                                                                                                                                                                                                                                                                     |
| YuSheng  | 1996-2018 | New YuSheng(S355) | DONGFANGJIULE - clip system -APM |         | Special functions                                                              | 1. Read configuration information                                                                                                                                                                                                                                                                                                                                                                   |
| YuSheng  | 1996-2018 | New YuSheng(S356) | DONGFANGJIULE - clip system -APM |         | Special functions                                                              | 2. Write configuration information                                                                                                                                                                                                                                                                                                                                                                  |
| YuSheng  | 1996-2018 | New YuSheng(S357) | DONGFANGJIULE - clip system -APM |         | Special functions                                                              | 3. Learn by yourself                                                                                                                                                                                                                                                                                                                                                                                |
| YuSheng  | 1996-2018 | New YuSheng(S358) | DONGFANGJIULE - clip system -APM |         | Special functions                                                              | 4. Clip-on erasure                                                                                                                                                                                                                                                                                                                                                                                  |
| JX isuzu | 2014      | TF Series         | 4JK1                             |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write;2.Injector Code Read/Write;3.Fuel Supply Pump Learn Resetting.                                                                                                                                                                                                                                                                                                                     |
| JX isuzu | 2014      | TF Series         | TCCM                             |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test |                                                                                                                                                                                                                                                                                                                                                                                                     |
| JX isuzu | 2014      | TF Series         | Immobilizer                      |         |                                                                                |                                                                                                                                                                                                                                                                                                                                                                                                     |
| JX isuzu | 2014      | TF Series         | Meter                            |         | Information                                                                    | Vehicle Configuration Setting;Opening Message Display,Clock Display,GLOW PLUG Indicator Light,SVS Indicator Light,ESC Indicator Light,ABS Warning Light,Cruise Control Indicator Light,4WD Indicator Light,Key Remind Warning,Language Setting,Seat Belt Warning,DPD Indicator Light,Over Speed Warning,Fuel Economy Display,Passive Entry and Start System Information Display,Back Shift Warning. |

| model    | year | department | system                                     | subitem | function                                                                       | subfunction                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------|------|------------|--------------------------------------------|---------|--------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| JX isuzu | 2014 | TF Series  | Meter-1                                    |         | Information                                                                    | Vehicle Configuration Setting;ISS Function,Clock Display,GLOW PLUG Indicator Light,SVS Indicator Light,ESC Indicator Light,ABS Warning Light,Cruise Control Indicator Light,4WD Indicator Light,Key Remind Warning,Language Setting,Seat Belt Warning,DPD Indicator Light,Over Speed Warning,Fuel Tank Capacity,Passive Entry and Start System Information Display,Back Shift Warning,Engine Type,Transmission Type,Tire Size,Final Gear Ratio. |
| JX isuzu | 2014 | TF Series  | SRS                                        |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream                |                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| JX isuzu | 2014 | TF Series  | SRS-1                                      |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream                |                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| JX isuzu | 2014 | TF Series  | SRS-2                                      |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream                |                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| JX isuzu | 2014 | TF Series  | Passive Entry and Start System (Push Type) |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write;2.Reset Passive Entry and Start System Control Unit;3.Reset Engine Control Module;4.Erase Electronic KEY;5.Reset Steering Lock ECU;6.Electronic KEY Registration;7.Vehicle Configuration Setting;8.Initial Controller Setting                                                                                                                                                                                                  |
| JX isuzu | 2014 | TF Series  | BCM                                        |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream                | 1.Remote Keyless Entry Transmitter Registration Delete;2.BCM Data Setting/Change;Anti-Theft,Super Lock,Vehicle Speed Linked Door Lock,Door Unlocking Function Setting,SRS Airbag Deployment Signal,Write Completion Flag                                                                                                                                                                                                                        |

| model    | year | department | system      | subitem | function                                                                       | subfunction                                                                                                                                                                                                                                                                                                                                                                                         |
|----------|------|------------|-------------|---------|--------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| JX isuzu | 2014 | TF Series  | BCM-1       |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream                | 1.BCM Data Setting/Change:Anti-Theft,Super Lock,Vehicle Speed Linked Door Lock,Door Unlocking Function Setting,SRS Airbag Deployment Signal,Write Completion Flag                                                                                                                                                                                                                                   |
| JX isuzu | 2014 | TF Series  | ABS/ESC     |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write.                                                                                                                                                                                                                                                                                                                                                                                   |
| JX isuzu | 2014 | TF Series  | ABS/ESC-1   |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write;2.Learning for Steering Central Position;3.Learning for G-Sensor Central Position.                                                                                                                                                                                                                                                                                                 |
| JX isuzu | 2015 | UC Series  | 4JJ1        |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write;2.Injector Code Read/Write;3.Fuel Supply Pump Learn Resetting.                                                                                                                                                                                                                                                                                                                     |
| JX isuzu | 2015 | UC Series  | AT          |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write;2.Clear Learning Value and Diag Information.                                                                                                                                                                                                                                                                                                                                       |
| JX isuzu | 2015 | UC Series  | TCCM        |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test |                                                                                                                                                                                                                                                                                                                                                                                                     |
| JX isuzu | 2015 | UC Series  | Immobilizer |         |                                                                                |                                                                                                                                                                                                                                                                                                                                                                                                     |
| JX isuzu | 2015 | UC Series  | Meter       |         | Information                                                                    | Vehicle Configuration Setting:Opening Message Display,Clock Display,GLOW PLUG Indicator Light,SVS Indicator Light,ESC Indicator Light,ABS Warning Light,Cruise Control Indicator Light,4WD Indicator Light,Key Remind Warning,Language Setting,Seat Belt Warning,DPD Indicator Light,Over Speed Warning,Fuel Economy Display,Passive Entry and Start System Information Display,Back Shift Warning. |

| model    | year | department | system  | subitem | function                                                        | subfunction                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------|------|------------|---------|---------|-----------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| JX isuzu | 2015 | UC Series  | Meter-1 |         | Information                                                     | Vehicle Configuration Setting;ISS Function,Clock Display,GLOW PLUG Indicator Light,SVS Indicator Light,ESC Indicator Light,ABS Warning Light,Cruise Control Indicator Light,4WD Indicator Light,Key Remind Warning,Language Setting,Seat Belt Warning,DPD Indicator Light,Over Speed Warning,Fuel Tank Capacity,Passive Entry and Start System Information Display,Back Shift Warning,Engine Type,Transmission Type,Tire Size,Final Gear Ratio. |
| JX isuzu | 2015 | UC Series  | SRS     |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream |                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| JX isuzu | 2015 | UC Series  | SRS-1   |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream |                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| JX isuzu | 2015 | UC Series  | SRS-2   |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream |                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| JX isuzu | 2015 | UC Series  | BCM     |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream | 1.Remote Keyless Entry Transmitter Registration Delete;2.BCM Data Setting/Change:Anti-Theft,Super Lock,Vehicle Speed Linked Door Lock,Door Unlocking Function Setting,SRS Airbag Deployment Signal,Write Completion Flag                                                                                                                                                                                                                        |
| JX isuzu | 2015 | UC Series  | BCM-1   |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream | 1.BCM Data Setting/Change:Anti-Theft,Super Lock,Vehicle Speed Linked Door Lock,Door Unlocking Function Setting,SRS Airbag Deployment Signal,Write Completion Flag                                                                                                                                                                                                                                                                               |

| model    | year | department | system                                     | subitem | function                                                                       | subfunction                                                                                                                                                                                                                                                                                                                                                                                         |
|----------|------|------------|--------------------------------------------|---------|--------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| JX isuzu | 2015 | UC Series  | Passive Entry and Start System (Push Type) |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write;2.Reset Passive Entry and Start System Control Unit;3.Reset Engine Control Module;4.Erase Electronic KEY;5.Reset Steering Lock ECU;6.Electronic KEY Registration;7.Vehicle Configuration Setting;8.Initial Controller Setting                                                                                                                                                      |
| JX isuzu | 2015 | UC Series  | ABS/ESC                                    |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write.                                                                                                                                                                                                                                                                                                                                                                                   |
| JX isuzu | 2015 | UC Series  | ABS/ESC-1                                  |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write;2.Learning for Steering Central Position;3.Learning for G-Sensor Central Position.                                                                                                                                                                                                                                                                                                 |
| JX isuzu | 2015 | UC Series  | 4JK1                                       |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write;2.Injector Code Read/Write;3.Fuel Supply Pump Learn Resetting.                                                                                                                                                                                                                                                                                                                     |
| JX isuzu | 2015 | UC Series  | AT                                         |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write;2.Clear Learning Value and Diag Information.                                                                                                                                                                                                                                                                                                                                       |
| JX isuzu | 2015 | UC Series  | TCCM                                       |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test |                                                                                                                                                                                                                                                                                                                                                                                                     |
| JX isuzu | 2015 | UC Series  | Immobilizer                                |         |                                                                                |                                                                                                                                                                                                                                                                                                                                                                                                     |
| JX isuzu | 2015 | UC Series  | Meter                                      |         | Information                                                                    | Vehicle Configuration Setting;Opening Message Display,Clock Display,GLOW PLUG Indicator Light,SVS Indicator Light,ESC Indicator Light,ABS Warning Light,Cruise Control Indicator Light,4WD Indicator Light,Key Remind Warning,Language Setting,Seat Belt Warning,DPD Indicator Light,Over Speed Warning,Fuel Economy Display,Passive Entry and Start System Information Display,Back Shift Warning. |

| model    | year | department | system  | subitem | function                                                        | subfunction                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------|------|------------|---------|---------|-----------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| JX isuzu | 2015 | UC Series  | Meter-1 |         | Information                                                     | Vehicle Configuration Setting;ISS Function,Clock Display,GLOW PLUG Indicator Light,SVS Indicator Light,ESC Indicator Light,ABS Warning Light,Cruise Control Indicator Light,4WD Indicator Light,Key Remind Warning,Language Setting,Seat Belt Warning,DPD Indicator Light,Over Speed Warning,Fuel Tank Capacity,Passive Entry and Start System Information Display,Back Shift Warning,Engine Type,Transmission Type,Tire Size,Final Gear Ratio. |
| JX isuzu | 2015 | UC Series  | SRS     |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream |                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| JX isuzu | 2015 | UC Series  | SRS-1   |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream |                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| JX isuzu | 2015 | UC Series  | SRS-2   |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream |                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| JX isuzu | 2015 | UC Series  | BCM     |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream | 1.Remote Keyless Entry Transmitter Registration Delete;2.BCM Data Setting/Change:Anti-Theft,Super Lock,Vehicle Speed Linked Door Lock,Door Unlocking Function Setting,SRS Airbag Deployment Signal,Write Completion Flag                                                                                                                                                                                                                        |
| JX isuzu | 2015 | UC Series  | BCM-1   |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream | 1.BCM Data Setting/Change:Anti-Theft,Super Lock,Vehicle Speed Linked Door Lock,Door Unlocking Function Setting,SRS Airbag Deployment Signal,Write Completion Flag                                                                                                                                                                                                                                                                               |

| model    | year | department | system                                     | subitem | function                                                                       | subfunction                                                                                                                                                                                                                                    |
|----------|------|------------|--------------------------------------------|---------|--------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| JX isuzu | 2015 | UC Series  | Passive Entry and Start System (Push Type) |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write;2.Reset Passive Entry and Start System Control Unit;3.Reset Engine Control Module;4.Erase Electronic KEY;5.Reset Steering Lock ECU;6.Electronic KEY Registration;7.Vehicle Configuration Setting;8.Initial Controller Setting |
| JX isuzu | 2015 | UC Series  | ABS/ESC                                    |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write.                                                                                                                                                                                                                              |
| JX isuzu | 2015 | UC Series  | ABS/ESC-1                                  |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write;2.Learning for Steering Central Position;3.Learning for G-Sensor Central Position.                                                                                                                                            |
| JX isuzu | 2017 | TF Series  | 4JJ1                                       |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write;2.Injector Code Read/Write;3.Fuel Supply Pump Learn Resetting.                                                                                                                                                                |
| JX isuzu | 2017 | TF Series  | 4JJ1-1                                     |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write;2.Injector Code Read/Write;3.Fuel Supply Pump Learn Resetting;4.DPD Regeneration;5.Reset Oil Dilution Estimate Quantity;6.Reset Small Fuel Injection Quantity Learning;7.Exhaust Differential Pressure Sensor Learning.       |
| JX isuzu | 2017 | TF Series  | TCCM                                       |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test |                                                                                                                                                                                                                                                |
| JX isuzu | 2017 | TF Series  | Immobilizer                                |         |                                                                                |                                                                                                                                                                                                                                                |

| model    | year | department | system  | subitem | function                                                        | subfunction                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------|------|------------|---------|---------|-----------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| JX isuzu | 2017 | TF Series  | Meter   |         | Information                                                     | Vehicle Configuration Setting:Opening Message Display,Clock Display,GLOW PLUG Indicator Light,SVS Indicator Light,ESC Indicator Light,ABS Warning Light,Cruise Control Indicator Light,4WD Indicator Light,Key Remind Warning,Language Setting,Seat Belt Warning,DPD Indicator Light,Over Speed Warning,Fuel Economy Display,Passive Entry and Start System Information Display,Back Shift Warning.                                             |
| JX isuzu | 2017 | TF Series  | Meter-1 |         | Information                                                     | Vehicle Configuration Setting:ISS Function,Clock Display,GLOW PLUG Indicator Light,SVS Indicator Light,ESC Indicator Light,ABS Warning Light,Cruise Control Indicator Light,4WD Indicator Light,Key Remind Warning,Language Setting,Seat Belt Warning,DPD Indicator Light,Over Speed Warning,Fuel Tank Capacity,Passive Entry and Start System Information Display,Back Shift Warning,Engine Type,Transmission Type,Tire Size,Final Gear Ratio. |
| JX isuzu | 2017 | TF Series  | SRS     |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream |                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| JX isuzu | 2017 | TF Series  | SRS-1   |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream |                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| JX isuzu | 2017 | TF Series  | SRS-2   |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream |                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

| model    | year | department | system                                     | subitem | function                                                                       | subfunction                                                                                                                                                                                                                                    |
|----------|------|------------|--------------------------------------------|---------|--------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| JX isuzu | 2017 | TF Series  | Passive Entry and Start System (Push Type) |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write;2.Reset Passive Entry and Start System Control Unit;3.Reset Engine Control Module;4.Erase Electronic KEY;5.Reset Steering Lock ECU;6.Electronic KEY Registration;7.Vehicle Configuration Setting;8.Initial Controller Setting |
| JX isuzu | 2017 | TF Series  | BCM                                        |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream                | 1.Remote Keyless Entry Transmitter Registration Delete;2.BCM Data Setting/Change:Anti-Theft,Super Lock,Vehicle Speed Linked Door Lock,Door Unlocking Function Setting,SRS Airbag Deployment Signal,Write Completion Flag                       |
| JX isuzu | 2017 | TF Series  | BCM-1                                      |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream                | 1.BCM Data Setting/Change:Anti-Theft,Super Lock,Vehicle Speed Linked Door Lock,Door Unlocking Function Setting,SRS Airbag Deployment Signal,Write Completion Flag                                                                              |
| JX isuzu | 2017 | TF Series  | SRS(Denso)                                 |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream                |                                                                                                                                                                                                                                                |
| JX isuzu | 2017 | TF Series  | ABS/ESC                                    |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write.                                                                                                                                                                                                                              |
| JX isuzu | 2017 | TF Series  | ABS/ESC-1                                  |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write;2.Learning for Steering Central Position;3.Learning for G-Sensor Central Position.                                                                                                                                            |
| JX isuzu | 2017 | TF Series  | ABS/ESC-2                                  |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write;2.Learning for Steering Central Position;3.Learning for G-Sensor Central Position.                                                                                                                                            |
| JX isuzu | 2017 | TF Series  | TPMS                                       |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;               | 1.Programming TPMS Sensor ID.                                                                                                                                                                                                                  |

| model    | year | department | system      | subitem | function                                                                       | subfunction                                                                                                                                                                                                                                                                                                                                                                                         |
|----------|------|------------|-------------|---------|--------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| JX isuzu | 2017 | UC Series  | 4JJ1        |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN<br>Read/Write;2.Injector Code<br>Read/Write;3.Fuel Supply Pump Learn Resetting.                                                                                                                                                                                                                                                                                                               |
| JX isuzu | 2017 | UC Series  | 4JJ1-1      |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN<br>Read/Write;2.Injector Code<br>Read/Write;3.Fuel Supply Pump Learn Resetting;4.DPD Regeneration;5.Reset Oil Dilution Estimate Quantity;6.Reset Small Fuel Injection Quantity Learning;7.Exhaust Differential Pressure Sensor Learning.                                                                                                                                                      |
| JX isuzu | 2017 | UC Series  | TCCM        |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test |                                                                                                                                                                                                                                                                                                                                                                                                     |
| JX isuzu | 2017 | UC Series  | Immobilizer |         |                                                                                |                                                                                                                                                                                                                                                                                                                                                                                                     |
| JX isuzu | 2017 | UC Series  | Meter       |         | Information                                                                    | Vehicle Configuration Setting;Opening Message Display,Clock Display,GLOW PLUG Indicator Light,SVS Indicator Light,ESC Indicator Light,ABS Warning Light,Cruise Control Indicator Light,4WD Indicator Light,Key Remind Warning,Language Setting,Seat Belt Warning,DPD Indicator Light,Over Speed Warning,Fuel Economy Display,Passive Entry and Start System Information Display,Back Shift Warning. |

| model    | year | department | system                                     | subitem | function                                                                       | subfunction                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------|------|------------|--------------------------------------------|---------|--------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| JX isuzu | 2017 | UC Series  | Meter-1                                    |         | Information                                                                    | Vehicle Configuration Setting;ISS Function,Clock Display,GLOW PLUG Indicator Light,SVS Indicator Light,ESC Indicator Light,ABS Warning Light,Cruise Control Indicator Light,4WD Indicator Light,Key Remind Warning,Language Setting,Seat Belt Warning,DPD Indicator Light,Over Speed Warning,Fuel Tank Capacity,Passive Entry and Start System Information Display,Back Shift Warning,Engine Type,Transmission Type,Tire Size,Final Gear Ratio. |
| JX isuzu | 2017 | UC Series  | SRS                                        |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream                |                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| JX isuzu | 2017 | UC Series  | SRS-1                                      |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream                |                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| JX isuzu | 2017 | UC Series  | SRS-2                                      |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream                |                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| JX isuzu | 2017 | UC Series  | Passive Entry and Start System (Push Type) |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write;2.Reset Passive Entry and Start System Control Unit;3.Reset Engine Control Module;4.Erase Electronic KEY;5.Reset Steering Lock ECU;6.Electronic KEY Registration;7.Vehicle Configuration Setting;8.Initial Controller Setting                                                                                                                                                                                                  |
| JX isuzu | 2017 | UC Series  | BCM                                        |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream                | 1.Remote Keyless Entry Transmitter Registration Delete;2.BCM Data Setting/Change;Anti-Theft,Super Lock,Vehicle Speed Linked Door Lock,Door Unlocking Function Setting,SRS Airbag Deployment Signal,Write Completion Flag                                                                                                                                                                                                                        |

| model                    | year      | department    | system       | subitem | function                                                                       | subfunction                                                                                                                                                                                                                                                                                                  |
|--------------------------|-----------|---------------|--------------|---------|--------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| JX isuzu                 | 2017      | UC Series     | BCM-1        |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream                | 1.BCM Data Setting/Change:Anti-Theft,Super Lock,Vehicle Speed Linked Door Lock,Door Unlocking Function Setting,SRS Airbag Deployment Signal,Write Completion Flag                                                                                                                                            |
| JX isuzu                 | 2017      | UC Series     | SRS(Denso)   |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream                |                                                                                                                                                                                                                                                                                                              |
| JX isuzu                 | 2017      | UC Series     | ABS/ESC      |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write.                                                                                                                                                                                                                                                                                            |
| JX isuzu                 | 2017      | UC Series     | ABS/ESC-1    |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write;2.Learning for Steering Central Position;3.Learning for G-Sensor Central Position.                                                                                                                                                                                                          |
| JX isuzu                 | 2017      | UC Series     | ABS/ESC-2    |         | Information;Read Fault Code;Clear Fault Memory;Read Data Stream;Actuation Test | 1.VIN Read/Write;2.Learning for Steering Central Position;3.Learning for G-Sensor Central Position.                                                                                                                                                                                                          |
| Jiangling light gasoline | 1996-2018 | QiLing series | EDC17C55(IV) |         | Version Information                                                            |                                                                                                                                                                                                                                                                                                              |
| Jiangling light gasoline | 1996-2018 | QiLing series | EDC17C55(IV) |         | Read DTCs                                                                      |                                                                                                                                                                                                                                                                                                              |
| Jiangling light gasoline | 1996-2018 | QiLing series | EDC17C55(IV) |         | Clear DTCs                                                                     |                                                                                                                                                                                                                                                                                                              |
| Jiangling light gasoline | 1996-2018 | QiLing series | EDC17C55(IV) |         | Read data streams                                                              |                                                                                                                                                                                                                                                                                                              |
| Jiangling light gasoline | 1996-2018 | QiLing series | EDC17C55(IV) |         | Actuation test                                                                 |                                                                                                                                                                                                                                                                                                              |
| Jiangling light gasoline | 1996-2018 | QiLing series | EDC17C55(IV) |         | Special functions                                                              | Function Test<br>VIN Code Brush Writing<br>EGR Zero Starting To Learn<br>Clear ZFC Learning Value<br>Flashing The Injector Data<br>Clear LTE Function<br>ECU Reset<br>Start Fault Information Test<br>Compression Test<br>Acceleration Test<br>Jet Off Test<br>Engine Speed Comparison<br>High-pressure Test |