

Skoda Diagnostics List (Note:For reference only)

model	year	chassis	system	function	subfunction
Citigo	2012-2018	AA	01 Engine Electronics	Read Fault Codes	
Citigo	2012-2018	AA	01 Engine Electronics	Clear Fault Codes	
Citigo	2012-2018	AA	01 Engine Electronics	Measuring Blocks	
Citigo	2012-2018	AA	01 Engine Electronics	Output Tests	
Citigo	2012-2018	AA	01 Engine Electronics	Specia Functions	
Citigo	2012-2018	AA	02 Transmission Electronics	Read Fault Codes	
Citigo	2012-2018	AA	02 Transmission Electronics	Clear Fault Codes	
Citigo	2012-2018	AA	02 Transmission Electronics	Measuring Blocks	
Citigo	2012-2018	AA	02 Transmission Electronics	Output Tests	
Citigo	2012-2018	AA	02 Transmission Electronics	Specia Functions	
Citigo	2012-2018	AA	03 Brake Electronics	Read Fault Codes	
Citigo	2012-2018	AA	03 Brake Electronics	Clear Fault Codes	
Citigo	2012-2018	AA	03 Brake Electronics	Measuring Blocks	
Citigo	2012-2018	AA	03 Brake Electronics	Output Tests	
Citigo	2012-2018	AA	03 Brake Electronics	Specia Functions	
Citigo	2012-2018	AA	08 AC/Heating Electronics	Read Fault Codes	
Citigo	2012-2018	AA	08 AC/Heating Electronics	Clear Fault Codes	
Citigo	2012-2018	AA	08 AC/Heating Electronics	Measuring Blocks	
Citigo	2012-2018	AA	08 AC/Heating Electronics	Output Tests	
Citigo	2012-2018	AA	08 AC/Heating Electronics	Specia Functions	
Citigo	2012-2018	AA	09 Electronic Ctrl Electronics	Read Fault Codes	
Citigo	2012-2018	AA	09 Electronic Ctrl Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Citigo	2012-2018	AA	09 Electronic Ctrl Electronics	Measuring Blocks	
Citigo	2012-2018	AA	09 Electronic Ctrl Electronics	Output Tests	
Citigo	2012-2018	AA	09 Electronic Ctrl Electronics	Specia Functions	
Citigo	2012-2018	AA	10 Parking Assist System 2	Read Fault Codes	
Citigo	2012-2018	AA	10 Parking Assist System 2	Clear Fault Codes	
Citigo	2012-2018	AA	10 Parking Assist System 2	Measuring Blocks	
Citigo	2012-2018	AA	10 Parking Assist System 2	Output Tests	
Citigo	2012-2018	AA	10 Parking Assist System 2	Specia Functions	
Citigo	2012-2018	AA	15 Airbags	Read Fault Codes	
Citigo	2012-2018	AA	15 Airbags	Clear Fault Codes	
Citigo	2012-2018	AA	15 Airbags	Measuring Blocks	
Citigo	2012-2018	AA	15 Airbags	Output Tests	
Citigo	2012-2018	AA	15 Airbags	Specia Functions	
Citigo	2012-2018	AA	17 Instrument Cluster	Read Fault Codes	
Citigo	2012-2018	AA	17 Instrument Cluster	Clear Fault Codes	
Citigo	2012-2018	AA	17 Instrument Cluster	Measuring Blocks	
Citigo	2012-2018	AA	17 Instrument Cluster	Output Tests	
Citigo	2012-2018	AA	17 Instrument Cluster	Specia Functions	
Citigo	2012-2018	AA	19 Gateway Data Bus	Read Fault Codes	
Citigo	2012-2018	AA	19 Gateway Data Bus	Clear Fault Codes	
Citigo	2012-2018	AA	19 Gateway Data Bus	Measuring Blocks	
Citigo	2012-2018	AA	19 Gateway Data Bus	Output Tests	
Citigo	2012-2018	AA	19 Gateway Data Bus	Specia Functions	
Citigo	2012-2018	AA	23 Braker Booster	Read Fault Codes	
Citigo	2012-2018	AA	23 Braker Booster	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Citigo	2012-2018	AA	23 Braker Booster	Measuring Blocks	
Citigo	2012-2018	AA	23 Braker Booster	Output Tests	
Citigo	2012-2018	AA	23 Braker Booster	Specia Functions	
Citigo	2012-2018	AA	25 Immobilizer	Read Fault Codes	
Citigo	2012-2018	AA	25 Immobilizer	Clear Fault Codes	
Citigo	2012-2018	AA	25 Immobilizer	Measuring Blocks	
Citigo	2012-2018	AA	25 Immobilizer	Output Tests	
Citigo	2012-2018	AA	25 Immobilizer	Specia Functions	
Citigo	2012-2018	AA	44 Steering Assistance	Read Fault Codes	
Citigo	2012-2018	AA	44 Steering Assistance	Clear Fault Codes	
Citigo	2012-2018	AA	44 Steering Assistance	Measuring Blocks	
Citigo	2012-2018	AA	44 Steering Assistance	Output Tests	
Citigo	2012-2018	AA	44 Steering Assistance	Specia Functions	
Citigo	2012-2018	AA	47 Soundsystem	Read Fault Codes	
Citigo	2012-2018	AA	47 Soundsystem	Clear Fault Codes	
Citigo	2012-2018	AA	47 Soundsystem	Measuring Blocks	
Citigo	2012-2018	AA	47 Soundsystem	Output Tests	
Citigo	2012-2018	AA	47 Soundsystem	Specia Functions	
Citigo	2012-2018	AA	51 Electric Drive	Read Fault Codes	
Citigo	2012-2018	AA	51 Electric Drive	Clear Fault Codes	
Citigo	2012-2018	AA	51 Electric Drive	Measuring Blocks	
Citigo	2012-2018	AA	51 Electric Drive	Output Tests	
Citigo	2012-2018	AA	51 Electric Drive	Specia Functions	
Citigo	2012-2018	AA	56 Radio	Read Fault Codes	
Citigo	2012-2018	AA	56 Radio	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Citigo	2012-2018	AA	56 Radio	Measuring Blocks	
Citigo	2012-2018	AA	56 Radio	Output Tests	
Citigo	2012-2018	AA	56 Radio	Specia Functions	
Citigo	2012-2018	AA	5F Information Electronic Equipment 1	Read Fault Codes	
Citigo	2012-2018	AA	5F Information Electronic Equipment 1	Clear Fault Codes	
Citigo	2012-2018	AA	5F Information Electronic Equipment 1	Measuring Blocks	
Citigo	2012-2018	AA	5F Information Electronic Equipment 1	Output Tests	
Citigo	2012-2018	AA	5F Information Electronic Equipment 1	Specia Functions	
Citigo	2012-2018	AA	61 Battery Control	Read Fault Codes	
Citigo	2012-2018	AA	61 Battery Control	Clear Fault Codes	
Citigo	2012-2018	AA	61 Battery Control	Measuring Blocks	
Citigo	2012-2018	AA	61 Battery Control	Output Tests	
Citigo	2012-2018	AA	61 Battery Control	Specia Functions	
Citigo	2012-2018	AA	69 Trailer Function	Read Fault Codes	
Citigo	2012-2018	AA	69 Trailer Function	Clear Fault Codes	
Citigo	2012-2018	AA	69 Trailer Function	Measuring Blocks	
Citigo	2012-2018	AA	69 Trailer Function	Output Tests	
Citigo	2012-2018	AA	69 Trailer Function	Specia Functions	
Citigo	2012-2018	AA	75 Emergency Call Module	Read Fault Codes	
Citigo	2012-2018	AA	75 Emergency Call Module	Clear Fault Codes	
Citigo	2012-2018	AA	75 Emergency Call Module	Measuring Blocks	
Citigo	2012-2018	AA	75 Emergency Call Module	Output Tests	
Citigo	2012-2018	AA	75 Emergency Call Module	Specia Functions	
Citigo	2012-2018	AA	8C Hybrid Battery	Read Fault Codes	
Citigo	2012-2018	AA	8C Hybrid Battery	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Citigo	2012-2018	AA	8C Hybrid Battery	Measuring Blocks	
Citigo	2012-2018	AA	8C Hybrid Battery	Output Tests	
Citigo	2012-2018	AA	8C Hybrid Battery	Specia Functions	
Citigo	2012-2018	AA	AD Brake Sensors	Read Fault Codes	
Citigo	2012-2018	AA	AD Brake Sensors	Clear Fault Codes	
Citigo	2012-2018	AA	AD Brake Sensors	Measuring Blocks	
Citigo	2012-2018	AA	AD Brake Sensors	Output Tests	
Citigo	2012-2018	AA	AD Brake Sensors	Specia Functions	
Citigo	2012-2018	AA	BD Hi Vlot. Batt. Charger	Read Fault Codes	
Citigo	2012-2018	AA	BD Hi Vlot. Batt. Charger	Clear Fault Codes	
Citigo	2012-2018	AA	BD Hi Vlot. Batt. Charger	Measuring Blocks	
Citigo	2012-2018	AA	BD Hi Vlot. Batt. Charger	Output Tests	
Citigo	2012-2018	AA	BD Hi Vlot. Batt. Charger	Specia Functions	
Citigo	2012-2018	AA	C0 Act. For Ext. Noise	Read Fault Codes	
Citigo	2012-2018	AA	C0 Act. For Ext. Noise	Clear Fault Codes	
Citigo	2012-2018	AA	C0 Act. For Ext. Noise	Measuring Blocks	
Citigo	2012-2018	AA	C0 Act. For Ext. Noise	Output Tests	
Citigo	2012-2018	AA	C0 Act. For Ext. Noise	Specia Functions	
Citigo	2012-2018	AA	C6 Batt. Chrg	Read Fault Codes	
Citigo	2012-2018	AA	C6 Batt. Chrg	Clear Fault Codes	
Citigo	2012-2018	AA	C6 Batt. Chrg	Measuring Blocks	
Citigo	2012-2018	AA	C6 Batt. Chrg	Output Tests	
Citigo	2012-2018	AA	C6 Batt. Chrg	Specia Functions	
Fabia	2015-2018	NJ	01 Engine Electronics	Read Fault Codes	
Fabia	2015-2018	NJ	01 Engine Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia	2015-2018	NJ	01 Engine Electronics	Measuring Blocks	
Fabia	2015-2018	NJ	01 Engine Electronics	Output Tests	
Fabia	2015-2018	NJ	01 Engine Electronics	Specia Functions	
Fabia	2015-2018	NJ	02 Transmission Electronics	Read Fault Codes	
Fabia	2015-2018	NJ	02 Transmission Electronics	Clear Fault Codes	
Fabia	2015-2018	NJ	02 Transmission Electronics	Measuring Blocks	
Fabia	2015-2018	NJ	02 Transmission Electronics	Output Tests	
Fabia	2015-2018	NJ	02 Transmission Electronics	Specia Functions	
Fabia	2015-2018	NJ	03 Brake Electronics	Read Fault Codes	
Fabia	2015-2018	NJ	03 Brake Electronics	Clear Fault Codes	
Fabia	2015-2018	NJ	03 Brake Electronics	Measuring Blocks	
Fabia	2015-2018	NJ	03 Brake Electronics	Output Tests	
Fabia	2015-2018	NJ	03 Brake Electronics	Specia Functions	
Fabia	2015-2018	NJ	08 AC/Heating Electronics	Read Fault Codes	
Fabia	2015-2018	NJ	08 AC/Heating Electronics	Clear Fault Codes	
Fabia	2015-2018	NJ	08 AC/Heating Electronics	Measuring Blocks	
Fabia	2015-2018	NJ	08 AC/Heating Electronics	Output Tests	
Fabia	2015-2018	NJ	08 AC/Heating Electronics	Specia Functions	
Fabia	2015-2018	NJ	09 Electronic Ctrl Electronics	Read Fault Codes	
Fabia	2015-2018	NJ	09 Electronic Ctrl Electronics	Clear Fault Codes	
Fabia	2015-2018	NJ	09 Electronic Ctrl Electronics	Measuring Blocks	
Fabia	2015-2018	NJ	09 Electronic Ctrl Electronics	Output Tests	
Fabia	2015-2018	NJ	09 Electronic Ctrl Electronics	Specia Functions	
Fabia	2015-2018	NJ	13 Distance Control	Read Fault Codes	
Fabia	2015-2018	NJ	13 Distance Control	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia	2015-2018	NJ	13 Distance Control	Measuring Blocks	
Fabia	2015-2018	NJ	13 Distance Control	Output Tests	
Fabia	2015-2018	NJ	13 Distance Control	Specia Functions	
Fabia	2015-2018	NJ	15 Airbags	Read Fault Codes	
Fabia	2015-2018	NJ	15 Airbags	Clear Fault Codes	
Fabia	2015-2018	NJ	15 Airbags	Measuring Blocks	
Fabia	2015-2018	NJ	15 Airbags	Output Tests	
Fabia	2015-2018	NJ	15 Airbags	Specia Functions	
Fabia	2015-2018	NJ	17 Instrument Cluster	Read Fault Codes	
Fabia	2015-2018	NJ	17 Instrument Cluster	Clear Fault Codes	
Fabia	2015-2018	NJ	17 Instrument Cluster	Measuring Blocks	
Fabia	2015-2018	NJ	17 Instrument Cluster	Output Tests	
Fabia	2015-2018	NJ	17 Instrument Cluster	Specia Functions	
Fabia	2015-2018	NJ	19 Gateway Data Bus	Read Fault Codes	
Fabia	2015-2018	NJ	19 Gateway Data Bus	Clear Fault Codes	
Fabia	2015-2018	NJ	19 Gateway Data Bus	Measuring Blocks	
Fabia	2015-2018	NJ	19 Gateway Data Bus	Output Tests	
Fabia	2015-2018	NJ	19 Gateway Data Bus	Specia Functions	
Fabia	2015-2018	NJ	2B Steer Col Lock	Read Fault Codes	
Fabia	2015-2018	NJ	2B Steer Col Lock	Clear Fault Codes	
Fabia	2015-2018	NJ	2B Steer Col Lock	Measuring Blocks	
Fabia	2015-2018	NJ	2B Steer Col Lock	Output Tests	
Fabia	2015-2018	NJ	2B Steer Col Lock	Specia Functions	
Fabia	2015-2018	NJ	44 Steering Assistance	Read Fault Codes	
Fabia	2015-2018	NJ	44 Steering Assistance	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia	2015-2018	NJ	44 Steering Assistance	Measuring Blocks	
Fabia	2015-2018	NJ	44 Steering Assistance	Output Tests	
Fabia	2015-2018	NJ	44 Steering Assistance	Specia Functions	
Fabia	2015-2018	NJ	5F Information Electronic Equipment 1	Read Fault Codes	
Fabia	2015-2018	NJ	5F Information Electronic Equipment 1	Clear Fault Codes	
Fabia	2015-2018	NJ	5F Information Electronic Equipment 1	Measuring Blocks	
Fabia	2015-2018	NJ	5F Information Electronic Equipment 1	Output Tests	
Fabia	2015-2018	NJ	5F Information Electronic Equipment 1	Specia Functions	
Fabia	2015-2018	NJ	69 Trailer Function	Read Fault Codes	
Fabia	2015-2018	NJ	69 Trailer Function	Clear Fault Codes	
Fabia	2015-2018	NJ	69 Trailer Function	Measuring Blocks	
Fabia	2015-2018	NJ	69 Trailer Function	Output Tests	
Fabia	2015-2018	NJ	69 Trailer Function	Specia Functions	
Fabia	2015-2018	NJ	76 Parking Aid	Read Fault Codes	
Fabia	2015-2018	NJ	76 Parking Aid	Clear Fault Codes	
Fabia	2015-2018	NJ	76 Parking Aid	Measuring Blocks	
Fabia	2015-2018	NJ	76 Parking Aid	Output Tests	
Fabia	2015-2018	NJ	76 Parking Aid	Specia Functions	
Fabia	2015-2018	NJ	B7 Access Start Interf	Read Fault Codes	
Fabia	2015-2018	NJ	B7 Access Start Interf	Clear Fault Codes	
Fabia	2015-2018	NJ	B7 Access Start Interf	Measuring Blocks	
Fabia	2015-2018	NJ	B7 Access Start Interf	Output Tests	
Fabia	2015-2018	NJ	B7 Access Start Interf	Specia Functions	
Fabia I	1999-2004	6Y	01 Engine Electronics	Read Fault Codes	
Fabia I	1999-2004	6Y	01 Engine Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia I	1999-2004	6Y	01 Engine Electronics	Measuring Blocks	
Fabia I	1999-2004	6Y	01 Engine Electronics	Output Tests	
Fabia I	1999-2004	6Y	01 Engine Electronics	Specia Functions	
Fabia I	1999-2004	6Y	02 Transmission Electronics	Read Fault Codes	
Fabia I	1999-2004	6Y	02 Transmission Electronics	Clear Fault Codes	
Fabia I	1999-2004	6Y	02 Transmission Electronics	Measuring Blocks	
Fabia I	1999-2004	6Y	02 Transmission Electronics	Output Tests	
Fabia I	1999-2004	6Y	02 Transmission Electronics	Specia Functions	
Fabia I	1999-2004	6Y	03 Brake Electronics	Read Fault Codes	
Fabia I	1999-2004	6Y	03 Brake Electronics	Clear Fault Codes	
Fabia I	1999-2004	6Y	03 Brake Electronics	Measuring Blocks	
Fabia I	1999-2004	6Y	03 Brake Electronics	Output Tests	
Fabia I	1999-2004	6Y	03 Brake Electronics	Specia Functions	
Fabia I	1999-2004	6Y	08 AC/Heating Electronics	Read Fault Codes	
Fabia I	1999-2004	6Y	08 AC/Heating Electronics	Clear Fault Codes	
Fabia I	1999-2004	6Y	08 AC/Heating Electronics	Measuring Blocks	
Fabia I	1999-2004	6Y	08 AC/Heating Electronics	Output Tests	
Fabia I	1999-2004	6Y	08 AC/Heating Electronics	Specia Functions	
Fabia I	1999-2004	6Y	09 Electronic Ctrl Electronics	Read Fault Codes	
Fabia I	1999-2004	6Y	09 Electronic Ctrl Electronics	Clear Fault Codes	
Fabia I	1999-2004	6Y	09 Electronic Ctrl Electronics	Measuring Blocks	
Fabia I	1999-2004	6Y	09 Electronic Ctrl Electronics	Output Tests	
Fabia I	1999-2004	6Y	09 Electronic Ctrl Electronics	Specia Functions	
Fabia I	1999-2004	6Y	11 Engine Electronics 2	Read Fault Codes	
Fabia I	1999-2004	6Y	11 Engine Electronics 2	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia I	1999-2004	6Y	11 Engine Electronics 2	Measuring Blocks	
Fabia I	1999-2004	6Y	11 Engine Electronics 2	Output Tests	
Fabia I	1999-2004	6Y	11 Engine Electronics 2	Specia Functions	
Fabia I	1999-2004	6Y	15 Airbags	Read Fault Codes	
Fabia I	1999-2004	6Y	15 Airbags	Clear Fault Codes	
Fabia I	1999-2004	6Y	15 Airbags	Measuring Blocks	
Fabia I	1999-2004	6Y	15 Airbags	Output Tests	
Fabia I	1999-2004	6Y	15 Airbags	Specia Functions	
Fabia I	1999-2004	6Y	17 Instrument Cluster	Read Fault Codes	
Fabia I	1999-2004	6Y	17 Instrument Cluster	Clear Fault Codes	
Fabia I	1999-2004	6Y	17 Instrument Cluster	Measuring Blocks	
Fabia I	1999-2004	6Y	17 Instrument Cluster	Output Tests	
Fabia I	1999-2004	6Y	17 Instrument Cluster	Specia Functions	
Fabia I	1999-2004	6Y	19 Gateway Data Bus	Read Fault Codes	
Fabia I	1999-2004	6Y	19 Gateway Data Bus	Clear Fault Codes	
Fabia I	1999-2004	6Y	19 Gateway Data Bus	Measuring Blocks	
Fabia I	1999-2004	6Y	19 Gateway Data Bus	Output Tests	
Fabia I	1999-2004	6Y	19 Gateway Data Bus	Specia Functions	
Fabia I	1999-2004	6Y	25 Immobilizer	Read Fault Codes	
Fabia I	1999-2004	6Y	25 Immobilizer	Clear Fault Codes	
Fabia I	1999-2004	6Y	25 Immobilizer	Measuring Blocks	
Fabia I	1999-2004	6Y	25 Immobilizer	Output Tests	
Fabia I	1999-2004	6Y	25 Immobilizer	Specia Functions	
Fabia I	1999-2004	6Y	37 Navigation	Read Fault Codes	
Fabia I	1999-2004	6Y	37 Navigation	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia I	1999-2004	6Y	37 Navigation	Measuring Blocks	
Fabia I	1999-2004	6Y	37 Navigation	Output Tests	
Fabia I	1999-2004	6Y	37 Navigation	Specia Functions	
Fabia I	1999-2004	6Y	44 Steering Assistance	Read Fault Codes	
Fabia I	1999-2004	6Y	44 Steering Assistance	Clear Fault Codes	
Fabia I	1999-2004	6Y	44 Steering Assistance	Measuring Blocks	
Fabia I	1999-2004	6Y	44 Steering Assistance	Output Tests	
Fabia I	1999-2004	6Y	44 Steering Assistance	Specia Functions	
Fabia I	1999-2004	6Y	46 Central Control Module	Read Fault Codes	
Fabia I	1999-2004	6Y	46 Central Control Module	Clear Fault Codes	
Fabia I	1999-2004	6Y	46 Central Control Module	Measuring Blocks	
Fabia I	1999-2004	6Y	46 Central Control Module	Output Tests	
Fabia I	1999-2004	6Y	46 Central Control Module	Specia Functions	
Fabia I	1999-2004	6Y	51 Electric Drive	Read Fault Codes	
Fabia I	1999-2004	6Y	51 Electric Drive	Clear Fault Codes	
Fabia I	1999-2004	6Y	51 Electric Drive	Measuring Blocks	
Fabia I	1999-2004	6Y	51 Electric Drive	Output Tests	
Fabia I	1999-2004	6Y	51 Electric Drive	Specia Functions	
Fabia I	1999-2004	6Y	55 Headlight Range Control	Read Fault Codes	
Fabia I	1999-2004	6Y	55 Headlight Range Control	Clear Fault Codes	
Fabia I	1999-2004	6Y	55 Headlight Range Control	Measuring Blocks	
Fabia I	1999-2004	6Y	55 Headlight Range Control	Output Tests	
Fabia I	1999-2004	6Y	55 Headlight Range Control	Specia Functions	
Fabia I	1999-2004	6Y	56 Radio	Read Fault Codes	
Fabia I	1999-2004	6Y	56 Radio	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia I	1999-2004	6Y	56 Radio	Measuring Blocks	
Fabia I	1999-2004	6Y	56 Radio	Output Tests	
Fabia I	1999-2004	6Y	56 Radio	Specia Functions	
Fabia I	1999-2004	6Y	76 Parking Aid	Read Fault Codes	
Fabia I	1999-2004	6Y	76 Parking Aid	Clear Fault Codes	
Fabia I	1999-2004	6Y	76 Parking Aid	Measuring Blocks	
Fabia I	1999-2004	6Y	76 Parking Aid	Output Tests	
Fabia I	1999-2004	6Y	76 Parking Aid	Specia Functions	
Fabia I	1999-2004	6Y	8C Hybrid Battery	Read Fault Codes	
Fabia I	1999-2004	6Y	8C Hybrid Battery	Clear Fault Codes	
Fabia I	1999-2004	6Y	8C Hybrid Battery	Measuring Blocks	
Fabia I	1999-2004	6Y	8C Hybrid Battery	Output Tests	
Fabia I	1999-2004	6Y	8C Hybrid Battery	Specia Functions	
Fabia I	2005	6Y	01 Engine Electronics	Read Fault Codes	
Fabia I	2005	6Y	01 Engine Electronics	Clear Fault Codes	
Fabia I	2005	6Y	01 Engine Electronics	Measuring Blocks	
Fabia I	2005	6Y	01 Engine Electronics	Output Tests	
Fabia I	2005	6Y	01 Engine Electronics	Specia Functions	
Fabia I	2005	6Y	02 Transmission Electronics	Read Fault Codes	
Fabia I	2005	6Y	02 Transmission Electronics	Clear Fault Codes	
Fabia I	2005	6Y	02 Transmission Electronics	Measuring Blocks	
Fabia I	2005	6Y	02 Transmission Electronics	Output Tests	
Fabia I	2005	6Y	02 Transmission Electronics	Specia Functions	
Fabia I	2005	6Y	03 Brake Electronics	Read Fault Codes	
Fabia I	2005	6Y	03 Brake Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia I	2005	6Y	03 Brake Electronics	Measuring Blocks	
Fabia I	2005	6Y	03 Brake Electronics	Output Tests	
Fabia I	2005	6Y	03 Brake Electronics	Specia Functions	
Fabia I	2005	6Y	08 AC/Heating Electronics	Read Fault Codes	
Fabia I	2005	6Y	08 AC/Heating Electronics	Clear Fault Codes	
Fabia I	2005	6Y	08 AC/Heating Electronics	Measuring Blocks	
Fabia I	2005	6Y	08 AC/Heating Electronics	Output Tests	
Fabia I	2005	6Y	08 AC/Heating Electronics	Specia Functions	
Fabia I	2005	6Y	09 Electronic Ctrl Electronics	Read Fault Codes	
Fabia I	2005	6Y	09 Electronic Ctrl Electronics	Clear Fault Codes	
Fabia I	2005	6Y	09 Electronic Ctrl Electronics	Measuring Blocks	
Fabia I	2005	6Y	09 Electronic Ctrl Electronics	Output Tests	
Fabia I	2005	6Y	09 Electronic Ctrl Electronics	Specia Functions	
Fabia I	2005	6Y	11 Engine Electronics 2	Read Fault Codes	
Fabia I	2005	6Y	11 Engine Electronics 2	Clear Fault Codes	
Fabia I	2005	6Y	11 Engine Electronics 2	Measuring Blocks	
Fabia I	2005	6Y	11 Engine Electronics 2	Output Tests	
Fabia I	2005	6Y	11 Engine Electronics 2	Specia Functions	
Fabia I	2005	6Y	15 Airbags	Read Fault Codes	
Fabia I	2005	6Y	15 Airbags	Clear Fault Codes	
Fabia I	2005	6Y	15 Airbags	Measuring Blocks	
Fabia I	2005	6Y	15 Airbags	Output Tests	
Fabia I	2005	6Y	15 Airbags	Specia Functions	
Fabia I	2005	6Y	17 Instrument Cluster	Read Fault Codes	
Fabia I	2005	6Y	17 Instrument Cluster	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia I	2005	6Y	17 Instrument Cluster	Measuring Blocks	
Fabia I	2005	6Y	17 Instrument Cluster	Output Tests	
Fabia I	2005	6Y	17 Instrument Cluster	Specia Functions	
Fabia I	2005	6Y	19 Gateway Data Bus	Read Fault Codes	
Fabia I	2005	6Y	19 Gateway Data Bus	Clear Fault Codes	
Fabia I	2005	6Y	19 Gateway Data Bus	Measuring Blocks	
Fabia I	2005	6Y	19 Gateway Data Bus	Output Tests	
Fabia I	2005	6Y	19 Gateway Data Bus	Specia Functions	
Fabia I	2005	6Y	25 Immobilizer	Read Fault Codes	
Fabia I	2005	6Y	25 Immobilizer	Clear Fault Codes	
Fabia I	2005	6Y	25 Immobilizer	Measuring Blocks	
Fabia I	2005	6Y	25 Immobilizer	Output Tests	
Fabia I	2005	6Y	25 Immobilizer	Specia Functions	
Fabia I	2005	6Y	37 Navigation	Read Fault Codes	
Fabia I	2005	6Y	37 Navigation	Clear Fault Codes	
Fabia I	2005	6Y	37 Navigation	Measuring Blocks	
Fabia I	2005	6Y	37 Navigation	Output Tests	
Fabia I	2005	6Y	37 Navigation	Specia Functions	
Fabia I	2005	6Y	44 Steering Assistance	Read Fault Codes	
Fabia I	2005	6Y	44 Steering Assistance	Clear Fault Codes	
Fabia I	2005	6Y	44 Steering Assistance	Measuring Blocks	
Fabia I	2005	6Y	44 Steering Assistance	Output Tests	
Fabia I	2005	6Y	44 Steering Assistance	Specia Functions	
Fabia I	2005	6Y	46 Central Control Module	Read Fault Codes	
Fabia I	2005	6Y	46 Central Control Module	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia I	2005	6Y	46 Central Control Module	Measuring Blocks	
Fabia I	2005	6Y	46 Central Control Module	Output Tests	
Fabia I	2005	6Y	46 Central Control Module	Specia Functions	
Fabia I	2005	6Y	51 Electric Drive	Read Fault Codes	
Fabia I	2005	6Y	51 Electric Drive	Clear Fault Codes	
Fabia I	2005	6Y	51 Electric Drive	Measuring Blocks	
Fabia I	2005	6Y	51 Electric Drive	Output Tests	
Fabia I	2005	6Y	51 Electric Drive	Specia Functions	
Fabia I	2005	6Y	55 Headlight Range Control	Read Fault Codes	
Fabia I	2005	6Y	55 Headlight Range Control	Clear Fault Codes	
Fabia I	2005	6Y	55 Headlight Range Control	Measuring Blocks	
Fabia I	2005	6Y	55 Headlight Range Control	Output Tests	
Fabia I	2005	6Y	55 Headlight Range Control	Specia Functions	
Fabia I	2005	6Y	56 Radio	Read Fault Codes	
Fabia I	2005	6Y	56 Radio	Clear Fault Codes	
Fabia I	2005	6Y	56 Radio	Measuring Blocks	
Fabia I	2005	6Y	56 Radio	Output Tests	
Fabia I	2005	6Y	56 Radio	Specia Functions	
Fabia I	2005	6Y	76 Parking Aid	Read Fault Codes	
Fabia I	2005	6Y	76 Parking Aid	Clear Fault Codes	
Fabia I	2005	6Y	76 Parking Aid	Measuring Blocks	
Fabia I	2005	6Y	76 Parking Aid	Output Tests	
Fabia I	2005	6Y	76 Parking Aid	Specia Functions	
Fabia I	2005	6Y	8C Hybrid Battery	Read Fault Codes	
Fabia I	2005	6Y	8C Hybrid Battery	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia I	2005	6Y	8C Hybrid Battery	Measuring Blocks	
Fabia I	2005	6Y	8C Hybrid Battery	Output Tests	
Fabia I	2005	6Y	8C Hybrid Battery	Specia Functions	
Fabia I	2006-2008	6Y	01 Engine Electronics	Read Fault Codes	
Fabia I	2006-2008	6Y	01 Engine Electronics	Clear Fault Codes	
Fabia I	2006-2008	6Y	01 Engine Electronics	Measuring Blocks	
Fabia I	2006-2008	6Y	01 Engine Electronics	Output Tests	
Fabia I	2006-2008	6Y	01 Engine Electronics	Specia Functions	
Fabia I	2006-2008	6Y	02 Transmission Electronics	Read Fault Codes	
Fabia I	2006-2008	6Y	02 Transmission Electronics	Clear Fault Codes	
Fabia I	2006-2008	6Y	02 Transmission Electronics	Measuring Blocks	
Fabia I	2006-2008	6Y	02 Transmission Electronics	Output Tests	
Fabia I	2006-2008	6Y	02 Transmission Electronics	Specia Functions	
Fabia I	2006-2008	6Y	03 Brake Electronics	Read Fault Codes	
Fabia I	2006-2008	6Y	03 Brake Electronics	Clear Fault Codes	
Fabia I	2006-2008	6Y	03 Brake Electronics	Measuring Blocks	
Fabia I	2006-2008	6Y	03 Brake Electronics	Output Tests	
Fabia I	2006-2008	6Y	03 Brake Electronics	Specia Functions	
Fabia I	2006-2008	6Y	08 AC/Heating Electronics	Read Fault Codes	
Fabia I	2006-2008	6Y	08 AC/Heating Electronics	Clear Fault Codes	
Fabia I	2006-2008	6Y	08 AC/Heating Electronics	Measuring Blocks	
Fabia I	2006-2008	6Y	08 AC/Heating Electronics	Output Tests	
Fabia I	2006-2008	6Y	08 AC/Heating Electronics	Specia Functions	
Fabia I	2006-2008	6Y	09 Electronic Ctrl Electronics	Read Fault Codes	
Fabia I	2006-2008	6Y	09 Electronic Ctrl Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia I	2006-2008	6Y	09 Electronic Ctrl Electronics	Measuring Blocks	
Fabia I	2006-2008	6Y	09 Electronic Ctrl Electronics	Output Tests	
Fabia I	2006-2008	6Y	09 Electronic Ctrl Electronics	Specia Functions	
Fabia I	2006-2008	6Y	11 Engine Electronics 2	Read Fault Codes	
Fabia I	2006-2008	6Y	11 Engine Electronics 2	Clear Fault Codes	
Fabia I	2006-2008	6Y	11 Engine Electronics 2	Measuring Blocks	
Fabia I	2006-2008	6Y	11 Engine Electronics 2	Output Tests	
Fabia I	2006-2008	6Y	11 Engine Electronics 2	Specia Functions	
Fabia I	2006-2008	6Y	15 Airbags	Read Fault Codes	
Fabia I	2006-2008	6Y	15 Airbags	Clear Fault Codes	
Fabia I	2006-2008	6Y	15 Airbags	Measuring Blocks	
Fabia I	2006-2008	6Y	15 Airbags	Output Tests	
Fabia I	2006-2008	6Y	15 Airbags	Specia Functions	
Fabia I	2006-2008	6Y	17 Instrument Cluster	Read Fault Codes	
Fabia I	2006-2008	6Y	17 Instrument Cluster	Clear Fault Codes	
Fabia I	2006-2008	6Y	17 Instrument Cluster	Measuring Blocks	
Fabia I	2006-2008	6Y	17 Instrument Cluster	Output Tests	
Fabia I	2006-2008	6Y	17 Instrument Cluster	Specia Functions	
Fabia I	2006-2008	6Y	19 Gateway Data Bus	Read Fault Codes	
Fabia I	2006-2008	6Y	19 Gateway Data Bus	Clear Fault Codes	
Fabia I	2006-2008	6Y	19 Gateway Data Bus	Measuring Blocks	
Fabia I	2006-2008	6Y	19 Gateway Data Bus	Output Tests	
Fabia I	2006-2008	6Y	19 Gateway Data Bus	Specia Functions	
Fabia I	2006-2008	6Y	25 Immobilizer	Read Fault Codes	
Fabia I	2006-2008	6Y	25 Immobilizer	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia I	2006-2008	6Y	25 Immobilizer	Measuring Blocks	
Fabia I	2006-2008	6Y	25 Immobilizer	Output Tests	
Fabia I	2006-2008	6Y	25 Immobilizer	Specia Functions	
Fabia I	2006-2008	6Y	37 Navigation	Read Fault Codes	
Fabia I	2006-2008	6Y	37 Navigation	Clear Fault Codes	
Fabia I	2006-2008	6Y	37 Navigation	Measuring Blocks	
Fabia I	2006-2008	6Y	37 Navigation	Output Tests	
Fabia I	2006-2008	6Y	37 Navigation	Specia Functions	
Fabia I	2006-2008	6Y	44 Steering Assistance	Read Fault Codes	
Fabia I	2006-2008	6Y	44 Steering Assistance	Clear Fault Codes	
Fabia I	2006-2008	6Y	44 Steering Assistance	Measuring Blocks	
Fabia I	2006-2008	6Y	44 Steering Assistance	Output Tests	
Fabia I	2006-2008	6Y	44 Steering Assistance	Specia Functions	
Fabia I	2006-2008	6Y	46 Central Control Module	Read Fault Codes	
Fabia I	2006-2008	6Y	46 Central Control Module	Clear Fault Codes	
Fabia I	2006-2008	6Y	46 Central Control Module	Measuring Blocks	
Fabia I	2006-2008	6Y	46 Central Control Module	Output Tests	
Fabia I	2006-2008	6Y	46 Central Control Module	Specia Functions	
Fabia I	2006-2008	6Y	51 Electric Drive	Read Fault Codes	
Fabia I	2006-2008	6Y	51 Electric Drive	Clear Fault Codes	
Fabia I	2006-2008	6Y	51 Electric Drive	Measuring Blocks	
Fabia I	2006-2008	6Y	51 Electric Drive	Output Tests	
Fabia I	2006-2008	6Y	51 Electric Drive	Specia Functions	
Fabia I	2006-2008	6Y	55 Headlight Range Control	Read Fault Codes	
Fabia I	2006-2008	6Y	55 Headlight Range Control	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia I	2006-2008	6Y	55 Headlight Range Control	Measuring Blocks	
Fabia I	2006-2008	6Y	55 Headlight Range Control	Output Tests	
Fabia I	2006-2008	6Y	55 Headlight Range Control	Specia Functions	
Fabia I	2006-2008	6Y	56 Radio	Read Fault Codes	
Fabia I	2006-2008	6Y	56 Radio	Clear Fault Codes	
Fabia I	2006-2008	6Y	56 Radio	Measuring Blocks	
Fabia I	2006-2008	6Y	56 Radio	Output Tests	
Fabia I	2006-2008	6Y	56 Radio	Specia Functions	
Fabia I	2006-2008	6Y	76 Parking Aid	Read Fault Codes	
Fabia I	2006-2008	6Y	76 Parking Aid	Clear Fault Codes	
Fabia I	2006-2008	6Y	76 Parking Aid	Measuring Blocks	
Fabia I	2006-2008	6Y	76 Parking Aid	Output Tests	
Fabia I	2006-2008	6Y	76 Parking Aid	Specia Functions	
Fabia I	2006-2008	6Y	77 Telephone	Read Fault Codes	
Fabia I	2006-2008	6Y	77 Telephone	Clear Fault Codes	
Fabia I	2006-2008	6Y	77 Telephone	Measuring Blocks	
Fabia I	2006-2008	6Y	77 Telephone	Output Tests	
Fabia I	2006-2008	6Y	77 Telephone	Specia Functions	
Fabia I	2006-2008	6Y	8C Hybrid Battery	Read Fault Codes	
Fabia I	2006-2008	6Y	8C Hybrid Battery	Clear Fault Codes	
Fabia I	2006-2008	6Y	8C Hybrid Battery	Measuring Blocks	
Fabia I	2006-2008	6Y	8C Hybrid Battery	Output Tests	
Fabia I	2006-2008	6Y	8C Hybrid Battery	Specia Functions	
Fabia II	2007	54	01 Engine Electronics	Read Fault Codes	
Fabia II	2007	54	01 Engine Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia II	2007	54	01 Engine Electronics	Measuring Blocks	
Fabia II	2007	54	01 Engine Electronics	Output Tests	
Fabia II	2007	54	01 Engine Electronics	Specia Functions	
Fabia II	2007	54	02 Transmission Electronics	Read Fault Codes	
Fabia II	2007	54	02 Transmission Electronics	Clear Fault Codes	
Fabia II	2007	54	02 Transmission Electronics	Measuring Blocks	
Fabia II	2007	54	02 Transmission Electronics	Output Tests	
Fabia II	2007	54	02 Transmission Electronics	Specia Functions	
Fabia II	2007	54	03 Brake Electronics	Read Fault Codes	
Fabia II	2007	54	03 Brake Electronics	Clear Fault Codes	
Fabia II	2007	54	03 Brake Electronics	Measuring Blocks	
Fabia II	2007	54	03 Brake Electronics	Output Tests	
Fabia II	2007	54	03 Brake Electronics	Specia Functions	
Fabia II	2007	54	08 AC/Heating Electronics	Read Fault Codes	
Fabia II	2007	54	08 AC/Heating Electronics	Clear Fault Codes	
Fabia II	2007	54	08 AC/Heating Electronics	Measuring Blocks	
Fabia II	2007	54	08 AC/Heating Electronics	Output Tests	
Fabia II	2007	54	08 AC/Heating Electronics	Specia Functions	
Fabia II	2007	54	09 Electronic Ctrl Electronics	Read Fault Codes	
Fabia II	2007	54	09 Electronic Ctrl Electronics	Clear Fault Codes	
Fabia II	2007	54	09 Electronic Ctrl Electronics	Measuring Blocks	
Fabia II	2007	54	09 Electronic Ctrl Electronics	Output Tests	
Fabia II	2007	54	09 Electronic Ctrl Electronics	Specia Functions	
Fabia II	2007	54	11 Engine Electronics 2	Read Fault Codes	
Fabia II	2007	54	11 Engine Electronics 2	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia II	2007	54	11 Engine Electronics 2	Measuring Blocks	
Fabia II	2007	54	11 Engine Electronics 2	Output Tests	
Fabia II	2007	54	11 Engine Electronics 2	Specia Functions	
Fabia II	2007	54	15 Airbags	Read Fault Codes	
Fabia II	2007	54	15 Airbags	Clear Fault Codes	
Fabia II	2007	54	15 Airbags	Measuring Blocks	
Fabia II	2007	54	15 Airbags	Output Tests	
Fabia II	2007	54	15 Airbags	Specia Functions	
Fabia II	2007	54	16 Steering Wheel Electronics	Read Fault Codes	
Fabia II	2007	54	16 Steering Wheel Electronics	Clear Fault Codes	
Fabia II	2007	54	16 Steering Wheel Electronics	Measuring Blocks	
Fabia II	2007	54	16 Steering Wheel Electronics	Output Tests	
Fabia II	2007	54	16 Steering Wheel Electronics	Specia Functions	
Fabia II	2007	54	17 Instrument Cluster	Read Fault Codes	
Fabia II	2007	54	17 Instrument Cluster	Clear Fault Codes	
Fabia II	2007	54	17 Instrument Cluster	Measuring Blocks	
Fabia II	2007	54	17 Instrument Cluster	Output Tests	
Fabia II	2007	54	17 Instrument Cluster	Specia Functions	
Fabia II	2007	54	19 Gateway Data Bus	Read Fault Codes	
Fabia II	2007	54	19 Gateway Data Bus	Clear Fault Codes	
Fabia II	2007	54	19 Gateway Data Bus	Measuring Blocks	
Fabia II	2007	54	19 Gateway Data Bus	Output Tests	
Fabia II	2007	54	19 Gateway Data Bus	Specia Functions	
Fabia II	2007	54	25 Immobilizer	Read Fault Codes	
Fabia II	2007	54	25 Immobilizer	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia II	2007	54	25 Immobilizer	Measuring Blocks	
Fabia II	2007	54	25 Immobilizer	Output Tests	
Fabia II	2007	54	25 Immobilizer	Specia Functions	
Fabia II	2007	54	37 Navigation	Read Fault Codes	
Fabia II	2007	54	37 Navigation	Clear Fault Codes	
Fabia II	2007	54	37 Navigation	Measuring Blocks	
Fabia II	2007	54	37 Navigation	Output Tests	
Fabia II	2007	54	37 Navigation	Specia Functions	
Fabia II	2007	54	44 Steering Assistance	Read Fault Codes	
Fabia II	2007	54	44 Steering Assistance	Clear Fault Codes	
Fabia II	2007	54	44 Steering Assistance	Measuring Blocks	
Fabia II	2007	54	44 Steering Assistance	Output Tests	
Fabia II	2007	54	44 Steering Assistance	Specia Functions	
Fabia II	2007	54	46 Central Control Module	Read Fault Codes	
Fabia II	2007	54	46 Central Control Module	Clear Fault Codes	
Fabia II	2007	54	46 Central Control Module	Measuring Blocks	
Fabia II	2007	54	46 Central Control Module	Output Tests	
Fabia II	2007	54	46 Central Control Module	Specia Functions	
Fabia II	2007	54	51 Electric Drive	Read Fault Codes	
Fabia II	2007	54	51 Electric Drive	Clear Fault Codes	
Fabia II	2007	54	51 Electric Drive	Measuring Blocks	
Fabia II	2007	54	51 Electric Drive	Output Tests	
Fabia II	2007	54	51 Electric Drive	Specia Functions	
Fabia II	2007	54	55 Headlight Range Control	Read Fault Codes	
Fabia II	2007	54	55 Headlight Range Control	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia II	2007	54	55 Headlight Range Control	Measuring Blocks	
Fabia II	2007	54	55 Headlight Range Control	Output Tests	
Fabia II	2007	54	55 Headlight Range Control	Specia Functions	
Fabia II	2007	54	56 Radio	Read Fault Codes	
Fabia II	2007	54	56 Radio	Clear Fault Codes	
Fabia II	2007	54	56 Radio	Measuring Blocks	
Fabia II	2007	54	56 Radio	Output Tests	
Fabia II	2007	54	56 Radio	Specia Functions	
Fabia II	2007	54	76 Parking Aid	Read Fault Codes	
Fabia II	2007	54	76 Parking Aid	Clear Fault Codes	
Fabia II	2007	54	76 Parking Aid	Measuring Blocks	
Fabia II	2007	54	76 Parking Aid	Output Tests	
Fabia II	2007	54	76 Parking Aid	Specia Functions	
Fabia II	2007	54	77 Telephone	Read Fault Codes	
Fabia II	2007	54	77 Telephone	Clear Fault Codes	
Fabia II	2007	54	77 Telephone	Measuring Blocks	
Fabia II	2007	54	77 Telephone	Output Tests	
Fabia II	2007	54	77 Telephone	Specia Functions	
Fabia II	2007	54	8C Hybrid Battery	Read Fault Codes	
Fabia II	2007	54	8C Hybrid Battery	Clear Fault Codes	
Fabia II	2007	54	8C Hybrid Battery	Measuring Blocks	
Fabia II	2007	54	8C Hybrid Battery	Output Tests	
Fabia II	2007	54	8C Hybrid Battery	Specia Functions	
Fabia II	2007	5J	01 Engine Electronics	Read Fault Codes	
Fabia II	2007	5J	01 Engine Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia II	2007	5J	01 Engine Electronics	Measuring Blocks	
Fabia II	2007	5J	01 Engine Electronics	Output Tests	
Fabia II	2007	5J	01 Engine Electronics	Specia Functions	
Fabia II	2007	5J	02 Transmission Electronics	Read Fault Codes	
Fabia II	2007	5J	02 Transmission Electronics	Clear Fault Codes	
Fabia II	2007	5J	02 Transmission Electronics	Measuring Blocks	
Fabia II	2007	5J	02 Transmission Electronics	Output Tests	
Fabia II	2007	5J	02 Transmission Electronics	Specia Functions	
Fabia II	2007	5J	03 Brake Electronics	Read Fault Codes	
Fabia II	2007	5J	03 Brake Electronics	Clear Fault Codes	
Fabia II	2007	5J	03 Brake Electronics	Measuring Blocks	
Fabia II	2007	5J	03 Brake Electronics	Output Tests	
Fabia II	2007	5J	03 Brake Electronics	Specia Functions	
Fabia II	2007	5J	08 AC/Heating Electronics	Read Fault Codes	
Fabia II	2007	5J	08 AC/Heating Electronics	Clear Fault Codes	
Fabia II	2007	5J	08 AC/Heating Electronics	Measuring Blocks	
Fabia II	2007	5J	08 AC/Heating Electronics	Output Tests	
Fabia II	2007	5J	08 AC/Heating Electronics	Specia Functions	
Fabia II	2007	5J	09 Electronic Ctrl Electronics	Read Fault Codes	
Fabia II	2007	5J	09 Electronic Ctrl Electronics	Clear Fault Codes	
Fabia II	2007	5J	09 Electronic Ctrl Electronics	Measuring Blocks	
Fabia II	2007	5J	09 Electronic Ctrl Electronics	Output Tests	
Fabia II	2007	5J	09 Electronic Ctrl Electronics	Specia Functions	
Fabia II	2007	5J	11 Engine Electronics 2	Read Fault Codes	
Fabia II	2007	5J	11 Engine Electronics 2	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia II	2007	5J	11 Engine Electronics 2	Measuring Blocks	
Fabia II	2007	5J	11 Engine Electronics 2	Output Tests	
Fabia II	2007	5J	11 Engine Electronics 2	Specia Functions	
Fabia II	2007	5J	15 Airbags	Read Fault Codes	
Fabia II	2007	5J	15 Airbags	Clear Fault Codes	
Fabia II	2007	5J	15 Airbags	Measuring Blocks	
Fabia II	2007	5J	15 Airbags	Output Tests	
Fabia II	2007	5J	15 Airbags	Specia Functions	
Fabia II	2007	5J	16 Steering Wheel Electronics	Read Fault Codes	
Fabia II	2007	5J	16 Steering Wheel Electronics	Clear Fault Codes	
Fabia II	2007	5J	16 Steering Wheel Electronics	Measuring Blocks	
Fabia II	2007	5J	16 Steering Wheel Electronics	Output Tests	
Fabia II	2007	5J	16 Steering Wheel Electronics	Specia Functions	
Fabia II	2007	5J	17 Instrument Cluster	Read Fault Codes	
Fabia II	2007	5J	17 Instrument Cluster	Clear Fault Codes	
Fabia II	2007	5J	17 Instrument Cluster	Measuring Blocks	
Fabia II	2007	5J	17 Instrument Cluster	Output Tests	
Fabia II	2007	5J	17 Instrument Cluster	Specia Functions	
Fabia II	2007	5J	19 Gateway Data Bus	Read Fault Codes	
Fabia II	2007	5J	19 Gateway Data Bus	Clear Fault Codes	
Fabia II	2007	5J	19 Gateway Data Bus	Measuring Blocks	
Fabia II	2007	5J	19 Gateway Data Bus	Output Tests	
Fabia II	2007	5J	19 Gateway Data Bus	Specia Functions	
Fabia II	2007	5J	25 Immobilizer	Read Fault Codes	
Fabia II	2007	5J	25 Immobilizer	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia II	2007	5J	25 Immobilizer	Measuring Blocks	
Fabia II	2007	5J	25 Immobilizer	Output Tests	
Fabia II	2007	5J	25 Immobilizer	Specia Functions	
Fabia II	2007	5J	37 Navigation	Read Fault Codes	
Fabia II	2007	5J	37 Navigation	Clear Fault Codes	
Fabia II	2007	5J	37 Navigation	Measuring Blocks	
Fabia II	2007	5J	37 Navigation	Output Tests	
Fabia II	2007	5J	37 Navigation	Specia Functions	
Fabia II	2007	5J	44 Steering Assistance	Read Fault Codes	
Fabia II	2007	5J	44 Steering Assistance	Clear Fault Codes	
Fabia II	2007	5J	44 Steering Assistance	Measuring Blocks	
Fabia II	2007	5J	44 Steering Assistance	Output Tests	
Fabia II	2007	5J	44 Steering Assistance	Specia Functions	
Fabia II	2007	5J	46 Central Control Module	Read Fault Codes	
Fabia II	2007	5J	46 Central Control Module	Clear Fault Codes	
Fabia II	2007	5J	46 Central Control Module	Measuring Blocks	
Fabia II	2007	5J	46 Central Control Module	Output Tests	
Fabia II	2007	5J	46 Central Control Module	Specia Functions	
Fabia II	2007	5J	51 Electric Drive	Read Fault Codes	
Fabia II	2007	5J	51 Electric Drive	Clear Fault Codes	
Fabia II	2007	5J	51 Electric Drive	Measuring Blocks	
Fabia II	2007	5J	51 Electric Drive	Output Tests	
Fabia II	2007	5J	51 Electric Drive	Specia Functions	
Fabia II	2007	5J	55 Headlight Range Control	Read Fault Codes	
Fabia II	2007	5J	55 Headlight Range Control	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia II	2007	5J	55 Headlight Range Control	Measuring Blocks	
Fabia II	2007	5J	55 Headlight Range Control	Output Tests	
Fabia II	2007	5J	55 Headlight Range Control	Specia Functions	
Fabia II	2007	5J	56 Radio	Read Fault Codes	
Fabia II	2007	5J	56 Radio	Clear Fault Codes	
Fabia II	2007	5J	56 Radio	Measuring Blocks	
Fabia II	2007	5J	56 Radio	Output Tests	
Fabia II	2007	5J	56 Radio	Specia Functions	
Fabia II	2007	5J	76 Parking Aid	Read Fault Codes	
Fabia II	2007	5J	76 Parking Aid	Clear Fault Codes	
Fabia II	2007	5J	76 Parking Aid	Measuring Blocks	
Fabia II	2007	5J	76 Parking Aid	Output Tests	
Fabia II	2007	5J	76 Parking Aid	Specia Functions	
Fabia II	2007	5J	77 Telephone	Read Fault Codes	
Fabia II	2007	5J	77 Telephone	Clear Fault Codes	
Fabia II	2007	5J	77 Telephone	Measuring Blocks	
Fabia II	2007	5J	77 Telephone	Output Tests	
Fabia II	2007	5J	77 Telephone	Specia Functions	
Fabia II	2007	5J	8C Hybrid Battery	Read Fault Codes	
Fabia II	2007	5J	8C Hybrid Battery	Clear Fault Codes	
Fabia II	2007	5J	8C Hybrid Battery	Measuring Blocks	
Fabia II	2007	5J	8C Hybrid Battery	Output Tests	
Fabia II	2007	5J	8C Hybrid Battery	Specia Functions	
Fabia II	2008-2010	54	01 Engine Electronics	Read Fault Codes	
Fabia II	2008-2010	54	01 Engine Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia II	2008-2010	54	01 Engine Electronics	Measuring Blocks	
Fabia II	2008-2010	54	01 Engine Electronics	Output Tests	
Fabia II	2008-2010	54	01 Engine Electronics	Specia Functions	
Fabia II	2008-2010	54	02 Transmission Electronics	Read Fault Codes	
Fabia II	2008-2010	54	02 Transmission Electronics	Clear Fault Codes	
Fabia II	2008-2010	54	02 Transmission Electronics	Measuring Blocks	
Fabia II	2008-2010	54	02 Transmission Electronics	Output Tests	
Fabia II	2008-2010	54	02 Transmission Electronics	Specia Functions	
Fabia II	2008-2010	54	03 Brake Electronics	Read Fault Codes	
Fabia II	2008-2010	54	03 Brake Electronics	Clear Fault Codes	
Fabia II	2008-2010	54	03 Brake Electronics	Measuring Blocks	
Fabia II	2008-2010	54	03 Brake Electronics	Output Tests	
Fabia II	2008-2010	54	03 Brake Electronics	Specia Functions	
Fabia II	2008-2010	54	08 AC/Heating Electronics	Read Fault Codes	
Fabia II	2008-2010	54	08 AC/Heating Electronics	Clear Fault Codes	
Fabia II	2008-2010	54	08 AC/Heating Electronics	Measuring Blocks	
Fabia II	2008-2010	54	08 AC/Heating Electronics	Output Tests	
Fabia II	2008-2010	54	08 AC/Heating Electronics	Specia Functions	
Fabia II	2008-2010	54	09 Electronic Ctrl Electronics	Read Fault Codes	
Fabia II	2008-2010	54	09 Electronic Ctrl Electronics	Clear Fault Codes	
Fabia II	2008-2010	54	09 Electronic Ctrl Electronics	Measuring Blocks	
Fabia II	2008-2010	54	09 Electronic Ctrl Electronics	Output Tests	
Fabia II	2008-2010	54	09 Electronic Ctrl Electronics	Specia Functions	
Fabia II	2008-2010	54	11 Engine Electronics 2	Read Fault Codes	
Fabia II	2008-2010	54	11 Engine Electronics 2	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia II	2008-2010	54	11 Engine Electronics 2	Measuring Blocks	
Fabia II	2008-2010	54	11 Engine Electronics 2	Output Tests	
Fabia II	2008-2010	54	11 Engine Electronics 2	Specia Functions	
Fabia II	2008-2010	54	15 Airbags	Read Fault Codes	
Fabia II	2008-2010	54	15 Airbags	Clear Fault Codes	
Fabia II	2008-2010	54	15 Airbags	Measuring Blocks	
Fabia II	2008-2010	54	15 Airbags	Output Tests	
Fabia II	2008-2010	54	15 Airbags	Specia Functions	
Fabia II	2008-2010	54	16 Steering Wheel Electronics	Read Fault Codes	
Fabia II	2008-2010	54	16 Steering Wheel Electronics	Clear Fault Codes	
Fabia II	2008-2010	54	16 Steering Wheel Electronics	Measuring Blocks	
Fabia II	2008-2010	54	16 Steering Wheel Electronics	Output Tests	
Fabia II	2008-2010	54	16 Steering Wheel Electronics	Specia Functions	
Fabia II	2008-2010	54	17 Instrument Cluster	Read Fault Codes	
Fabia II	2008-2010	54	17 Instrument Cluster	Clear Fault Codes	
Fabia II	2008-2010	54	17 Instrument Cluster	Measuring Blocks	
Fabia II	2008-2010	54	17 Instrument Cluster	Output Tests	
Fabia II	2008-2010	54	17 Instrument Cluster	Specia Functions	
Fabia II	2008-2010	54	19 Gateway Data Bus	Read Fault Codes	
Fabia II	2008-2010	54	19 Gateway Data Bus	Clear Fault Codes	
Fabia II	2008-2010	54	19 Gateway Data Bus	Measuring Blocks	
Fabia II	2008-2010	54	19 Gateway Data Bus	Output Tests	
Fabia II	2008-2010	54	19 Gateway Data Bus	Specia Functions	
Fabia II	2008-2010	54	25 Immobilizer	Read Fault Codes	
Fabia II	2008-2010	54	25 Immobilizer	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia II	2008-2010	54	25 Immobilizer	Measuring Blocks	
Fabia II	2008-2010	54	25 Immobilizer	Output Tests	
Fabia II	2008-2010	54	25 Immobilizer	Specia Functions	
Fabia II	2008-2010	54	37 Navigation	Read Fault Codes	
Fabia II	2008-2010	54	37 Navigation	Clear Fault Codes	
Fabia II	2008-2010	54	37 Navigation	Measuring Blocks	
Fabia II	2008-2010	54	37 Navigation	Output Tests	
Fabia II	2008-2010	54	37 Navigation	Specia Functions	
Fabia II	2008-2010	54	44 Steering Assistance	Read Fault Codes	
Fabia II	2008-2010	54	44 Steering Assistance	Clear Fault Codes	
Fabia II	2008-2010	54	44 Steering Assistance	Measuring Blocks	
Fabia II	2008-2010	54	44 Steering Assistance	Output Tests	
Fabia II	2008-2010	54	44 Steering Assistance	Specia Functions	
Fabia II	2008-2010	54	46 Central Control Module	Read Fault Codes	
Fabia II	2008-2010	54	46 Central Control Module	Clear Fault Codes	
Fabia II	2008-2010	54	46 Central Control Module	Measuring Blocks	
Fabia II	2008-2010	54	46 Central Control Module	Output Tests	
Fabia II	2008-2010	54	46 Central Control Module	Specia Functions	
Fabia II	2008-2010	54	51 Electric Drive	Read Fault Codes	
Fabia II	2008-2010	54	51 Electric Drive	Clear Fault Codes	
Fabia II	2008-2010	54	51 Electric Drive	Measuring Blocks	
Fabia II	2008-2010	54	51 Electric Drive	Output Tests	
Fabia II	2008-2010	54	51 Electric Drive	Specia Functions	
Fabia II	2008-2010	54	55 Headlight Range Control	Read Fault Codes	
Fabia II	2008-2010	54	55 Headlight Range Control	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia II	2008-2010	54	55 Headlight Range Control	Measuring Blocks	
Fabia II	2008-2010	54	55 Headlight Range Control	Output Tests	
Fabia II	2008-2010	54	55 Headlight Range Control	Specia Functions	
Fabia II	2008-2010	54	56 Radio	Read Fault Codes	
Fabia II	2008-2010	54	56 Radio	Clear Fault Codes	
Fabia II	2008-2010	54	56 Radio	Measuring Blocks	
Fabia II	2008-2010	54	56 Radio	Output Tests	
Fabia II	2008-2010	54	56 Radio	Specia Functions	
Fabia II	2008-2010	54	76 Parking Aid	Read Fault Codes	
Fabia II	2008-2010	54	76 Parking Aid	Clear Fault Codes	
Fabia II	2008-2010	54	76 Parking Aid	Measuring Blocks	
Fabia II	2008-2010	54	76 Parking Aid	Output Tests	
Fabia II	2008-2010	54	76 Parking Aid	Specia Functions	
Fabia II	2008-2010	54	77 Telephone	Read Fault Codes	
Fabia II	2008-2010	54	77 Telephone	Clear Fault Codes	
Fabia II	2008-2010	54	77 Telephone	Measuring Blocks	
Fabia II	2008-2010	54	77 Telephone	Output Tests	
Fabia II	2008-2010	54	77 Telephone	Specia Functions	
Fabia II	2008-2010	54	8C Hybrid Battery	Read Fault Codes	
Fabia II	2008-2010	54	8C Hybrid Battery	Clear Fault Codes	
Fabia II	2008-2010	54	8C Hybrid Battery	Measuring Blocks	
Fabia II	2008-2010	54	8C Hybrid Battery	Output Tests	
Fabia II	2008-2010	54	8C Hybrid Battery	Specia Functions	
Fabia II	2011-2015	54	01 Engine Electronics	Read Fault Codes	
Fabia II	2011-2015	54	01 Engine Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia II	2011-2015	54	01 Engine Electronics	Measuring Blocks	
Fabia II	2011-2015	54	01 Engine Electronics	Output Tests	
Fabia II	2011-2015	54	01 Engine Electronics	Specia Functions	
Fabia II	2011-2015	54	02 Transmission Electronics	Read Fault Codes	
Fabia II	2011-2015	54	02 Transmission Electronics	Clear Fault Codes	
Fabia II	2011-2015	54	02 Transmission Electronics	Measuring Blocks	
Fabia II	2011-2015	54	02 Transmission Electronics	Output Tests	
Fabia II	2011-2015	54	02 Transmission Electronics	Specia Functions	
Fabia II	2011-2015	54	03 Brake Electronics	Read Fault Codes	
Fabia II	2011-2015	54	03 Brake Electronics	Clear Fault Codes	
Fabia II	2011-2015	54	03 Brake Electronics	Measuring Blocks	
Fabia II	2011-2015	54	03 Brake Electronics	Output Tests	
Fabia II	2011-2015	54	03 Brake Electronics	Specia Functions	
Fabia II	2011-2015	54	04 Steering Position	Read Fault Codes	
Fabia II	2011-2015	54	04 Steering Position	Clear Fault Codes	
Fabia II	2011-2015	54	04 Steering Position	Measuring Blocks	
Fabia II	2011-2015	54	04 Steering Position	Output Tests	
Fabia II	2011-2015	54	04 Steering Position	Specia Functions	
Fabia II	2011-2015	54	08 AC/Heating Electronics	Read Fault Codes	
Fabia II	2011-2015	54	08 AC/Heating Electronics	Clear Fault Codes	
Fabia II	2011-2015	54	08 AC/Heating Electronics	Measuring Blocks	
Fabia II	2011-2015	54	08 AC/Heating Electronics	Output Tests	
Fabia II	2011-2015	54	08 AC/Heating Electronics	Specia Functions	
Fabia II	2011-2015	54	09 Electronic Ctrl Electronics	Read Fault Codes	
Fabia II	2011-2015	54	09 Electronic Ctrl Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia II	2011-2015	54	09 Electronic Ctrl Electronics	Measuring Blocks	
Fabia II	2011-2015	54	09 Electronic Ctrl Electronics	Output Tests	
Fabia II	2011-2015	54	09 Electronic Ctrl Electronics	Specia Functions	
Fabia II	2011-2015	54	10 Parking Assist System 2	Read Fault Codes	
Fabia II	2011-2015	54	10 Parking Assist System 2	Clear Fault Codes	
Fabia II	2011-2015	54	10 Parking Assist System 2	Measuring Blocks	
Fabia II	2011-2015	54	10 Parking Assist System 2	Output Tests	
Fabia II	2011-2015	54	10 Parking Assist System 2	Specia Functions	
Fabia II	2011-2015	54	15 Airbags	Read Fault Codes	
Fabia II	2011-2015	54	15 Airbags	Clear Fault Codes	
Fabia II	2011-2015	54	15 Airbags	Measuring Blocks	
Fabia II	2011-2015	54	15 Airbags	Output Tests	
Fabia II	2011-2015	54	15 Airbags	Specia Functions	
Fabia II	2011-2015	54	16 Steering Wheel Electronics	Read Fault Codes	
Fabia II	2011-2015	54	16 Steering Wheel Electronics	Clear Fault Codes	
Fabia II	2011-2015	54	16 Steering Wheel Electronics	Measuring Blocks	
Fabia II	2011-2015	54	16 Steering Wheel Electronics	Output Tests	
Fabia II	2011-2015	54	16 Steering Wheel Electronics	Specia Functions	
Fabia II	2011-2015	54	17 Instrument Cluster	Read Fault Codes	
Fabia II	2011-2015	54	17 Instrument Cluster	Clear Fault Codes	
Fabia II	2011-2015	54	17 Instrument Cluster	Measuring Blocks	
Fabia II	2011-2015	54	17 Instrument Cluster	Output Tests	
Fabia II	2011-2015	54	17 Instrument Cluster	Specia Functions	
Fabia II	2011-2015	54	19 Gateway Data Bus	Read Fault Codes	
Fabia II	2011-2015	54	19 Gateway Data Bus	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia II	2011-2015	54	19 Gateway Data Bus	Measuring Blocks	
Fabia II	2011-2015	54	19 Gateway Data Bus	Output Tests	
Fabia II	2011-2015	54	19 Gateway Data Bus	Specia Functions	
Fabia II	2011-2015	54	25 Immobilizer	Read Fault Codes	
Fabia II	2011-2015	54	25 Immobilizer	Clear Fault Codes	
Fabia II	2011-2015	54	25 Immobilizer	Measuring Blocks	
Fabia II	2011-2015	54	25 Immobilizer	Output Tests	
Fabia II	2011-2015	54	25 Immobilizer	Specia Functions	
Fabia II	2011-2015	54	2E Media Player Position 3	Read Fault Codes	
Fabia II	2011-2015	54	2E Media Player Position 3	Clear Fault Codes	
Fabia II	2011-2015	54	2E Media Player Position 3	Measuring Blocks	
Fabia II	2011-2015	54	2E Media Player Position 3	Output Tests	
Fabia II	2011-2015	54	2E Media Player Position 3	Specia Functions	
Fabia II	2011-2015	54	37 Navigation	Read Fault Codes	
Fabia II	2011-2015	54	37 Navigation	Clear Fault Codes	
Fabia II	2011-2015	54	37 Navigation	Measuring Blocks	
Fabia II	2011-2015	54	37 Navigation	Output Tests	
Fabia II	2011-2015	54	37 Navigation	Specia Functions	
Fabia II	2011-2015	54	44 Steering Assistance	Read Fault Codes	
Fabia II	2011-2015	54	44 Steering Assistance	Clear Fault Codes	
Fabia II	2011-2015	54	44 Steering Assistance	Measuring Blocks	
Fabia II	2011-2015	54	44 Steering Assistance	Output Tests	
Fabia II	2011-2015	54	44 Steering Assistance	Specia Functions	
Fabia II	2011-2015	54	46 Central Control Module	Read Fault Codes	
Fabia II	2011-2015	54	46 Central Control Module	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia II	2011-2015	54	46 Central Control Module	Measuring Blocks	
Fabia II	2011-2015	54	46 Central Control Module	Output Tests	
Fabia II	2011-2015	54	46 Central Control Module	Specia Functions	
Fabia II	2011-2015	54	55 Headlight Range Control	Read Fault Codes	
Fabia II	2011-2015	54	55 Headlight Range Control	Clear Fault Codes	
Fabia II	2011-2015	54	55 Headlight Range Control	Measuring Blocks	
Fabia II	2011-2015	54	55 Headlight Range Control	Output Tests	
Fabia II	2011-2015	54	55 Headlight Range Control	Specia Functions	
Fabia II	2011-2015	54	56 Radio	Read Fault Codes	
Fabia II	2011-2015	54	56 Radio	Clear Fault Codes	
Fabia II	2011-2015	54	56 Radio	Measuring Blocks	
Fabia II	2011-2015	54	56 Radio	Output Tests	
Fabia II	2011-2015	54	56 Radio	Specia Functions	
Fabia II	2011-2015	54	61 Battery Control	Read Fault Codes	
Fabia II	2011-2015	54	61 Battery Control	Clear Fault Codes	
Fabia II	2011-2015	54	61 Battery Control	Measuring Blocks	
Fabia II	2011-2015	54	61 Battery Control	Output Tests	
Fabia II	2011-2015	54	61 Battery Control	Specia Functions	
Fabia II	2011-2015	54	69 Trailer Function	Read Fault Codes	
Fabia II	2011-2015	54	69 Trailer Function	Clear Fault Codes	
Fabia II	2011-2015	54	69 Trailer Function	Measuring Blocks	
Fabia II	2011-2015	54	69 Trailer Function	Output Tests	
Fabia II	2011-2015	54	69 Trailer Function	Specia Functions	
Fabia II	2011-2015	54	76 Parking Aid	Read Fault Codes	
Fabia II	2011-2015	54	76 Parking Aid	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia II	2011-2015	54	76 Parking Aid	Measuring Blocks	
Fabia II	2011-2015	54	76 Parking Aid	Output Tests	
Fabia II	2011-2015	54	76 Parking Aid	Specia Functions	
Fabia II	2011-2015	54	77 Telephone	Read Fault Codes	
Fabia II	2011-2015	54	77 Telephone	Clear Fault Codes	
Fabia II	2011-2015	54	77 Telephone	Measuring Blocks	
Fabia II	2011-2015	54	77 Telephone	Output Tests	
Fabia II	2011-2015	54	77 Telephone	Specia Functions	
Felicia	1993-2000	79	01 Engine Electronics	Read Fault Codes	
Felicia	1993-2000	79	01 Engine Electronics	Clear Fault Codes	
Felicia	1993-2000	79	01 Engine Electronics	Measuring Blocks	
Felicia	1993-2000	79	01 Engine Electronics	Output Tests	
Felicia	1993-2000	79	01 Engine Electronics	Specia Functions	
Felicia	1993-2000	79	02 Transmission Electronics	Read Fault Codes	
Felicia	1993-2000	79	02 Transmission Electronics	Clear Fault Codes	
Felicia	1993-2000	79	02 Transmission Electronics	Measuring Blocks	
Felicia	1993-2000	79	02 Transmission Electronics	Output Tests	
Felicia	1993-2000	79	02 Transmission Electronics	Specia Functions	
Felicia	1993-2000	79	03 Brake Electronics	Read Fault Codes	
Felicia	1993-2000	79	03 Brake Electronics	Clear Fault Codes	
Felicia	1993-2000	79	03 Brake Electronics	Measuring Blocks	
Felicia	1993-2000	79	03 Brake Electronics	Output Tests	
Felicia	1993-2000	79	03 Brake Electronics	Specia Functions	
Felicia	1993-2000	79	08 AC/Heating Electronics	Read Fault Codes	
Felicia	1993-2000	79	08 AC/Heating Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Felicia	1993-2000	79	08 AC/Heating Electronics	Measuring Blocks	
Felicia	1993-2000	79	08 AC/Heating Electronics	Output Tests	
Felicia	1993-2000	79	08 AC/Heating Electronics	Specia Functions	
Felicia	1993-2000	79	11 Engine Electronics 2	Read Fault Codes	
Felicia	1993-2000	79	11 Engine Electronics 2	Clear Fault Codes	
Felicia	1993-2000	79	11 Engine Electronics 2	Measuring Blocks	
Felicia	1993-2000	79	11 Engine Electronics 2	Output Tests	
Felicia	1993-2000	79	11 Engine Electronics 2	Specia Functions	
Felicia	1993-2000	79	15 Airbags	Read Fault Codes	
Felicia	1993-2000	79	15 Airbags	Clear Fault Codes	
Felicia	1993-2000	79	15 Airbags	Measuring Blocks	
Felicia	1993-2000	79	15 Airbags	Output Tests	
Felicia	1993-2000	79	15 Airbags	Specia Functions	
Felicia	1993-2000	79	17 Instrument Cluster	Read Fault Codes	
Felicia	1993-2000	79	17 Instrument Cluster	Clear Fault Codes	
Felicia	1993-2000	79	17 Instrument Cluster	Measuring Blocks	
Felicia	1993-2000	79	17 Instrument Cluster	Output Tests	
Felicia	1993-2000	79	17 Instrument Cluster	Specia Functions	
Felicia	1993-2000	79	25 Immobilizer	Read Fault Codes	
Felicia	1993-2000	79	25 Immobilizer	Clear Fault Codes	
Felicia	1993-2000	79	25 Immobilizer	Measuring Blocks	
Felicia	1993-2000	79	25 Immobilizer	Output Tests	
Felicia	1993-2000	79	25 Immobilizer	Specia Functions	
Felicia	1993-2000	79	35 Central Locking	Read Fault Codes	
Felicia	1993-2000	79	35 Central Locking	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Felicia	1993-2000	79	35 Central Locking	Measuring Blocks	
Felicia	1993-2000	79	35 Central Locking	Output Tests	
Felicia	1993-2000	79	35 Central Locking	Specia Functions	
Felicia	1993-2000	79	51 Electric Drive	Read Fault Codes	
Felicia	1993-2000	79	51 Electric Drive	Clear Fault Codes	
Felicia	1993-2000	79	51 Electric Drive	Measuring Blocks	
Felicia	1993-2000	79	51 Electric Drive	Output Tests	
Felicia	1993-2000	79	51 Electric Drive	Specia Functions	
Felicia	1993-2000	79	56 Radio	Read Fault Codes	
Felicia	1993-2000	79	56 Radio	Clear Fault Codes	
Felicia	1993-2000	79	56 Radio	Measuring Blocks	
Felicia	1993-2000	79	56 Radio	Output Tests	
Felicia	1993-2000	79	56 Radio	Specia Functions	
Felicia	1993-2000	79	8C Hybrid Battery	Read Fault Codes	
Felicia	1993-2000	79	8C Hybrid Battery	Clear Fault Codes	
Felicia	1993-2000	79	8C Hybrid Battery	Measuring Blocks	
Felicia	1993-2000	79	8C Hybrid Battery	Output Tests	
Felicia	1993-2000	79	8C Hybrid Battery	Specia Functions	
Octavia II	2009-2013	1Z	01 Engine Electronics	Read Fault Codes	
Octavia II	2009-2013	1Z	01 Engine Electronics	Clear Fault Codes	
Octavia II	2009-2013	1Z	01 Engine Electronics	Measuring Blocks	
Octavia II	2009-2013	1Z	01 Engine Electronics	Output Tests	
Octavia II	2009-2013	1Z	01 Engine Electronics	Specia Functions	
Octavia II	2009-2013	1Z	02 Transmission Electronics	Read Fault Codes	
Octavia II	2009-2013	1Z	02 Transmission Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia II	2009-2013	1Z	02 Transmission Electronics	Measuring Blocks	
Octavia II	2009-2013	1Z	02 Transmission Electronics	Output Tests	
Octavia II	2009-2013	1Z	02 Transmission Electronics	Specia Functions	
Octavia II	2009-2013	1Z	03 Brake Electronics	Read Fault Codes	
Octavia II	2009-2013	1Z	03 Brake Electronics	Clear Fault Codes	
Octavia II	2009-2013	1Z	03 Brake Electronics	Measuring Blocks	
Octavia II	2009-2013	1Z	03 Brake Electronics	Output Tests	
Octavia II	2009-2013	1Z	03 Brake Electronics	Specia Functions	
Octavia II	2009-2013	1Z	05 Access & Permissi.	Read Fault Codes	
Octavia II	2009-2013	1Z	05 Access & Permissi.	Clear Fault Codes	
Octavia II	2009-2013	1Z	05 Access & Permissi.	Measuring Blocks	
Octavia II	2009-2013	1Z	05 Access & Permissi.	Output Tests	
Octavia II	2009-2013	1Z	05 Access & Permissi.	Specia Functions	
Octavia II	2009-2013	1Z	06 Passene. Seat Adj.	Read Fault Codes	
Octavia II	2009-2013	1Z	06 Passene. Seat Adj.	Clear Fault Codes	
Octavia II	2009-2013	1Z	06 Passene. Seat Adj.	Measuring Blocks	
Octavia II	2009-2013	1Z	06 Passene. Seat Adj.	Output Tests	
Octavia II	2009-2013	1Z	06 Passene. Seat Adj.	Specia Functions	
Octavia II	2009-2013	1Z	08 AC/Heating Electronics	Read Fault Codes	
Octavia II	2009-2013	1Z	08 AC/Heating Electronics	Clear Fault Codes	
Octavia II	2009-2013	1Z	08 AC/Heating Electronics	Measuring Blocks	
Octavia II	2009-2013	1Z	08 AC/Heating Electronics	Output Tests	
Octavia II	2009-2013	1Z	08 AC/Heating Electronics	Specia Functions	
Octavia II	2009-2013	1Z	09 Electronic Ctrl Electronics	Read Fault Codes	
Octavia II	2009-2013	1Z	09 Electronic Ctrl Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia II	2009-2013	1Z	09 Electronic Ctrl Electronics	Measuring Blocks	
Octavia II	2009-2013	1Z	09 Electronic Ctrl Electronics	Output Tests	
Octavia II	2009-2013	1Z	09 Electronic Ctrl Electronics	Specia Functions	
Octavia II	2009-2013	1Z	10 Parking Assist System 2	Read Fault Codes	
Octavia II	2009-2013	1Z	10 Parking Assist System 2	Clear Fault Codes	
Octavia II	2009-2013	1Z	10 Parking Assist System 2	Measuring Blocks	
Octavia II	2009-2013	1Z	10 Parking Assist System 2	Output Tests	
Octavia II	2009-2013	1Z	10 Parking Assist System 2	Specia Functions	
Octavia II	2009-2013	1Z	15 Airbags	Read Fault Codes	
Octavia II	2009-2013	1Z	15 Airbags	Clear Fault Codes	
Octavia II	2009-2013	1Z	15 Airbags	Measuring Blocks	
Octavia II	2009-2013	1Z	15 Airbags	Output Tests	
Octavia II	2009-2013	1Z	15 Airbags	Specia Functions	
Octavia II	2009-2013	1Z	16 Steering Wheel Electronics	Read Fault Codes	
Octavia II	2009-2013	1Z	16 Steering Wheel Electronics	Clear Fault Codes	
Octavia II	2009-2013	1Z	16 Steering Wheel Electronics	Measuring Blocks	
Octavia II	2009-2013	1Z	16 Steering Wheel Electronics	Output Tests	
Octavia II	2009-2013	1Z	16 Steering Wheel Electronics	Specia Functions	
Octavia II	2009-2013	1Z	17 Instrument Cluster	Read Fault Codes	
Octavia II	2009-2013	1Z	17 Instrument Cluster	Clear Fault Codes	
Octavia II	2009-2013	1Z	17 Instrument Cluster	Measuring Blocks	
Octavia II	2009-2013	1Z	17 Instrument Cluster	Output Tests	
Octavia II	2009-2013	1Z	17 Instrument Cluster	Specia Functions	
Octavia II	2009-2013	1Z	18 Aux Heating	Read Fault Codes	
Octavia II	2009-2013	1Z	18 Aux Heating	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia II	2009-2013	1Z	18 Aux Heating	Measuring Blocks	
Octavia II	2009-2013	1Z	18 Aux Heating	Output Tests	
Octavia II	2009-2013	1Z	18 Aux Heating	Specia Functions	
Octavia II	2009-2013	1Z	19 Gateway Data Bus	Read Fault Codes	
Octavia II	2009-2013	1Z	19 Gateway Data Bus	Clear Fault Codes	
Octavia II	2009-2013	1Z	19 Gateway Data Bus	Measuring Blocks	
Octavia II	2009-2013	1Z	19 Gateway Data Bus	Output Tests	
Octavia II	2009-2013	1Z	19 Gateway Data Bus	Specia Functions	
Octavia II	2009-2013	1Z	22 4WD Electronics	Read Fault Codes	
Octavia II	2009-2013	1Z	22 4WD Electronics	Clear Fault Codes	
Octavia II	2009-2013	1Z	22 4WD Electronics	Measuring Blocks	
Octavia II	2009-2013	1Z	22 4WD Electronics	Output Tests	
Octavia II	2009-2013	1Z	22 4WD Electronics	Specia Functions	
Octavia II	2009-2013	1Z	25 Immobilizer	Read Fault Codes	
Octavia II	2009-2013	1Z	25 Immobilizer	Clear Fault Codes	
Octavia II	2009-2013	1Z	25 Immobilizer	Measuring Blocks	
Octavia II	2009-2013	1Z	25 Immobilizer	Output Tests	
Octavia II	2009-2013	1Z	25 Immobilizer	Specia Functions	
Octavia II	2009-2013	1Z	2B Steer Col Lock	Read Fault Codes	
Octavia II	2009-2013	1Z	2B Steer Col Lock	Clear Fault Codes	
Octavia II	2009-2013	1Z	2B Steer Col Lock	Measuring Blocks	
Octavia II	2009-2013	1Z	2B Steer Col Lock	Output Tests	
Octavia II	2009-2013	1Z	2B Steer Col Lock	Specia Functions	
Octavia II	2009-2013	1Z	2E Media Player Position 3	Read Fault Codes	
Octavia II	2009-2013	1Z	2E Media Player Position 3	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia II	2009-2013	1Z	2E Media Player Position 3	Measuring Blocks	
Octavia II	2009-2013	1Z	2E Media Player Position 3	Output Tests	
Octavia II	2009-2013	1Z	2E Media Player Position 3	Specia Functions	
Octavia II	2009-2013	1Z	36 Driver`s Side Seat Adj.	Read Fault Codes	
Octavia II	2009-2013	1Z	36 Driver`s Side Seat Adj.	Clear Fault Codes	
Octavia II	2009-2013	1Z	36 Driver`s Side Seat Adj.	Measuring Blocks	
Octavia II	2009-2013	1Z	36 Driver`s Side Seat Adj.	Output Tests	
Octavia II	2009-2013	1Z	36 Driver`s Side Seat Adj.	Specia Functions	
Octavia II	2009-2013	1Z	37 Navigation	Read Fault Codes	
Octavia II	2009-2013	1Z	37 Navigation	Clear Fault Codes	
Octavia II	2009-2013	1Z	37 Navigation	Measuring Blocks	
Octavia II	2009-2013	1Z	37 Navigation	Output Tests	
Octavia II	2009-2013	1Z	37 Navigation	Specia Functions	
Octavia II	2009-2013	1Z	42 Driver-Door Elect.	Read Fault Codes	
Octavia II	2009-2013	1Z	42 Driver-Door Elect.	Clear Fault Codes	
Octavia II	2009-2013	1Z	42 Driver-Door Elect.	Measuring Blocks	
Octavia II	2009-2013	1Z	42 Driver-Door Elect.	Output Tests	
Octavia II	2009-2013	1Z	42 Driver-Door Elect.	Specia Functions	
Octavia II	2009-2013	1Z	44 Steering Assistance	Read Fault Codes	
Octavia II	2009-2013	1Z	44 Steering Assistance	Clear Fault Codes	
Octavia II	2009-2013	1Z	44 Steering Assistance	Measuring Blocks	
Octavia II	2009-2013	1Z	44 Steering Assistance	Output Tests	
Octavia II	2009-2013	1Z	44 Steering Assistance	Specia Functions	
Octavia II	2009-2013	1Z	46 Central Control Module	Read Fault Codes	
Octavia II	2009-2013	1Z	46 Central Control Module	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia II	2009-2013	1Z	46 Central Control Module	Measuring Blocks	
Octavia II	2009-2013	1Z	46 Central Control Module	Output Tests	
Octavia II	2009-2013	1Z	46 Central Control Module	Specia Functions	
Octavia II	2009-2013	1Z	47 Soundsystem	Read Fault Codes	
Octavia II	2009-2013	1Z	47 Soundsystem	Clear Fault Codes	
Octavia II	2009-2013	1Z	47 Soundsystem	Measuring Blocks	
Octavia II	2009-2013	1Z	47 Soundsystem	Output Tests	
Octavia II	2009-2013	1Z	47 Soundsystem	Specia Functions	
Octavia II	2009-2013	1Z	4F Electronic Central Electric II	Read Fault Codes	
Octavia II	2009-2013	1Z	4F Electronic Central Electric II	Clear Fault Codes	
Octavia II	2009-2013	1Z	4F Electronic Central Electric II	Measuring Blocks	
Octavia II	2009-2013	1Z	4F Electronic Central Electric II	Output Tests	
Octavia II	2009-2013	1Z	4F Electronic Central Electric II	Specia Functions	
Octavia II	2009-2013	1Z	52 Passe.-Door Elect.	Read Fault Codes	
Octavia II	2009-2013	1Z	52 Passe.-Door Elect.	Clear Fault Codes	
Octavia II	2009-2013	1Z	52 Passe.-Door Elect.	Measuring Blocks	
Octavia II	2009-2013	1Z	52 Passe.-Door Elect.	Output Tests	
Octavia II	2009-2013	1Z	52 Passe.-Door Elect.	Specia Functions	
Octavia II	2009-2013	1Z	55 Headlight Range Control	Read Fault Codes	
Octavia II	2009-2013	1Z	55 Headlight Range Control	Clear Fault Codes	
Octavia II	2009-2013	1Z	55 Headlight Range Control	Measuring Blocks	
Octavia II	2009-2013	1Z	55 Headlight Range Control	Output Tests	
Octavia II	2009-2013	1Z	55 Headlight Range Control	Specia Functions	
Octavia II	2009-2013	1Z	56 Radio	Read Fault Codes	
Octavia II	2009-2013	1Z	56 Radio	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia II	2009-2013	1Z	56 Radio	Measuring Blocks	
Octavia II	2009-2013	1Z	56 Radio	Output Tests	
Octavia II	2009-2013	1Z	56 Radio	Specia Functions	
Octavia II	2009-2013	1Z	5F Information Electronic Equipment 1	Read Fault Codes	
Octavia II	2009-2013	1Z	5F Information Electronic Equipment 1	Clear Fault Codes	
Octavia II	2009-2013	1Z	5F Information Electronic Equipment 1	Measuring Blocks	
Octavia II	2009-2013	1Z	5F Information Electronic Equipment 1	Output Tests	
Octavia II	2009-2013	1Z	5F Information Electronic Equipment 1	Specia Functions	
Octavia II	2009-2013	1Z	61 Battery Control	Read Fault Codes	
Octavia II	2009-2013	1Z	61 Battery Control	Clear Fault Codes	
Octavia II	2009-2013	1Z	61 Battery Control	Measuring Blocks	
Octavia II	2009-2013	1Z	61 Battery Control	Output Tests	
Octavia II	2009-2013	1Z	61 Battery Control	Specia Functions	
Octavia II	2009-2013	1Z	62 LR-Door Electroni.	Read Fault Codes	
Octavia II	2009-2013	1Z	62 LR-Door Electroni.	Clear Fault Codes	
Octavia II	2009-2013	1Z	62 LR-Door Electroni.	Measuring Blocks	
Octavia II	2009-2013	1Z	62 LR-Door Electroni.	Output Tests	
Octavia II	2009-2013	1Z	62 LR-Door Electroni.	Specia Functions	
Octavia II	2009-2013	1Z	69 Trailer Function	Read Fault Codes	
Octavia II	2009-2013	1Z	69 Trailer Function	Clear Fault Codes	
Octavia II	2009-2013	1Z	69 Trailer Function	Measuring Blocks	
Octavia II	2009-2013	1Z	69 Trailer Function	Output Tests	
Octavia II	2009-2013	1Z	69 Trailer Function	Specia Functions	
Octavia II	2009-2013	1Z	72 RR-Door Electroni.	Read Fault Codes	
Octavia II	2009-2013	1Z	72 RR-Door Electroni.	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia II	2009-2013	1Z	72 RR-Door Electroni.	Measuring Blocks	
Octavia II	2009-2013	1Z	72 RR-Door Electroni.	Output Tests	
Octavia II	2009-2013	1Z	72 RR-Door Electroni.	Specia Functions	
Octavia II	2009-2013	1Z	76 Parking Aid	Read Fault Codes	
Octavia II	2009-2013	1Z	76 Parking Aid	Clear Fault Codes	
Octavia II	2009-2013	1Z	76 Parking Aid	Measuring Blocks	
Octavia II	2009-2013	1Z	76 Parking Aid	Output Tests	
Octavia II	2009-2013	1Z	76 Parking Aid	Specia Functions	
Octavia II	2009-2013	1Z	77 Telephone	Read Fault Codes	
Octavia II	2009-2013	1Z	77 Telephone	Clear Fault Codes	
Octavia II	2009-2013	1Z	77 Telephone	Measuring Blocks	
Octavia II	2009-2013	1Z	77 Telephone	Output Tests	
Octavia II	2009-2013	1Z	77 Telephone	Specia Functions	
Octavia II	2009-2013	1Z	7D Auxiliary Heater	Read Fault Codes	
Octavia II	2009-2013	1Z	7D Auxiliary Heater	Clear Fault Codes	
Octavia II	2009-2013	1Z	7D Auxiliary Heater	Measuring Blocks	
Octavia II	2009-2013	1Z	7D Auxiliary Heater	Output Tests	
Octavia II	2009-2013	1Z	7D Auxiliary Heater	Specia Functions	
Octavia III	2013-2018	5E	01 Engine Electronics	Read Fault Codes	
Octavia III	2013-2018	5E	01 Engine Electronics	Clear Fault Codes	
Octavia III	2013-2018	5E	01 Engine Electronics	Measuring Blocks	
Octavia III	2013-2018	5E	01 Engine Electronics	Output Tests	
Octavia III	2013-2018	5E	01 Engine Electronics	Specia Functions	
Octavia III	2013-2018	5E	02 Transmission Electronics	Read Fault Codes	
Octavia III	2013-2018	5E	02 Transmission Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia III	2013-2018	5E	02 Transmission Electronics	Measuring Blocks	
Octavia III	2013-2018	5E	02 Transmission Electronics	Output Tests	
Octavia III	2013-2018	5E	02 Transmission Electronics	Specia Functions	
Octavia III	2013-2018	5E	03 Brake Electronics	Read Fault Codes	
Octavia III	2013-2018	5E	03 Brake Electronics	Clear Fault Codes	
Octavia III	2013-2018	5E	03 Brake Electronics	Measuring Blocks	
Octavia III	2013-2018	5E	03 Brake Electronics	Output Tests	
Octavia III	2013-2018	5E	03 Brake Electronics	Specia Functions	
Octavia III	2013-2018	5E	08 AC/Heating Electronics	Read Fault Codes	
Octavia III	2013-2018	5E	08 AC/Heating Electronics	Clear Fault Codes	
Octavia III	2013-2018	5E	08 AC/Heating Electronics	Measuring Blocks	
Octavia III	2013-2018	5E	08 AC/Heating Electronics	Output Tests	
Octavia III	2013-2018	5E	08 AC/Heating Electronics	Specia Functions	
Octavia III	2013-2018	5E	09 Electronic Ctrl Electronics	Read Fault Codes	
Octavia III	2013-2018	5E	09 Electronic Ctrl Electronics	Clear Fault Codes	
Octavia III	2013-2018	5E	09 Electronic Ctrl Electronics	Measuring Blocks	
Octavia III	2013-2018	5E	09 Electronic Ctrl Electronics	Output Tests	
Octavia III	2013-2018	5E	09 Electronic Ctrl Electronics	Specia Functions	
Octavia III	2013-2018	5E	13 Distance Control	Read Fault Codes	
Octavia III	2013-2018	5E	13 Distance Control	Clear Fault Codes	
Octavia III	2013-2018	5E	13 Distance Control	Measuring Blocks	
Octavia III	2013-2018	5E	13 Distance Control	Output Tests	
Octavia III	2013-2018	5E	13 Distance Control	Specia Functions	
Octavia III	2013-2018	5E	15 Airbags	Read Fault Codes	
Octavia III	2013-2018	5E	15 Airbags	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia III	2013-2018	5E	15 Airbags	Measuring Blocks	
Octavia III	2013-2018	5E	15 Airbags	Output Tests	
Octavia III	2013-2018	5E	15 Airbags	Specia Functions	
Octavia III	2013-2018	5E	16 Steering Wheel Electronics	Read Fault Codes	
Octavia III	2013-2018	5E	16 Steering Wheel Electronics	Clear Fault Codes	
Octavia III	2013-2018	5E	16 Steering Wheel Electronics	Measuring Blocks	
Octavia III	2013-2018	5E	16 Steering Wheel Electronics	Output Tests	
Octavia III	2013-2018	5E	16 Steering Wheel Electronics	Specia Functions	
Octavia III	2013-2018	5E	17 Instrument Cluster	Read Fault Codes	
Octavia III	2013-2018	5E	17 Instrument Cluster	Clear Fault Codes	
Octavia III	2013-2018	5E	17 Instrument Cluster	Measuring Blocks	
Octavia III	2013-2018	5E	17 Instrument Cluster	Output Tests	
Octavia III	2013-2018	5E	17 Instrument Cluster	Specia Functions	
Octavia III	2013-2018	5E	18 Aux Heating	Read Fault Codes	
Octavia III	2013-2018	5E	18 Aux Heating	Clear Fault Codes	
Octavia III	2013-2018	5E	18 Aux Heating	Measuring Blocks	
Octavia III	2013-2018	5E	18 Aux Heating	Output Tests	
Octavia III	2013-2018	5E	18 Aux Heating	Specia Functions	
Octavia III	2013-2018	5E	19 Gateway Data Bus	Read Fault Codes	
Octavia III	2013-2018	5E	19 Gateway Data Bus	Clear Fault Codes	
Octavia III	2013-2018	5E	19 Gateway Data Bus	Measuring Blocks	
Octavia III	2013-2018	5E	19 Gateway Data Bus	Output Tests	
Octavia III	2013-2018	5E	19 Gateway Data Bus	Specia Functions	
Octavia III	2013-2018	5E	20 High Beam Assistance Device	Read Fault Codes	
Octavia III	2013-2018	5E	20 High Beam Assistance Device	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia III	2013-2018	5E	20 High Beam Assistance Device	Measuring Blocks	
Octavia III	2013-2018	5E	20 High Beam Assistance Device	Output Tests	
Octavia III	2013-2018	5E	20 High Beam Assistance Device	Specia Functions	
Octavia III	2013-2018	5E	22 4WD Electronics	Read Fault Codes	
Octavia III	2013-2018	5E	22 4WD Electronics	Clear Fault Codes	
Octavia III	2013-2018	5E	22 4WD Electronics	Measuring Blocks	
Octavia III	2013-2018	5E	22 4WD Electronics	Output Tests	
Octavia III	2013-2018	5E	22 4WD Electronics	Specia Functions	
Octavia III	2013-2018	5E	2B Steer Col Lock	Read Fault Codes	
Octavia III	2013-2018	5E	2B Steer Col Lock	Clear Fault Codes	
Octavia III	2013-2018	5E	2B Steer Col Lock	Measuring Blocks	
Octavia III	2013-2018	5E	2B Steer Col Lock	Output Tests	
Octavia III	2013-2018	5E	2B Steer Col Lock	Specia Functions	
Octavia III	2013-2018	5E	32 Locking Electronisc	Read Fault Codes	
Octavia III	2013-2018	5E	32 Locking Electronisc	Clear Fault Codes	
Octavia III	2013-2018	5E	32 Locking Electronisc	Measuring Blocks	
Octavia III	2013-2018	5E	32 Locking Electronisc	Output Tests	
Octavia III	2013-2018	5E	32 Locking Electronisc	Specia Functions	
Octavia III	2013-2018	5E	36 Driver`s Side Seat Adj.	Read Fault Codes	
Octavia III	2013-2018	5E	36 Driver`s Side Seat Adj.	Clear Fault Codes	
Octavia III	2013-2018	5E	36 Driver`s Side Seat Adj.	Measuring Blocks	
Octavia III	2013-2018	5E	36 Driver`s Side Seat Adj.	Output Tests	
Octavia III	2013-2018	5E	36 Driver`s Side Seat Adj.	Specia Functions	
Octavia III	2013-2018	5E	3C Lane Departure Assistance System	Read Fault Codes	
Octavia III	2013-2018	5E	3C Lane Departure Assistance System	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia III	2013-2018	5E	3C Lane Departure Assistance System	Measuring Blocks	
Octavia III	2013-2018	5E	3C Lane Departure Assistance System	Output Tests	
Octavia III	2013-2018	5E	3C Lane Departure Assistance System	Specia Functions	
Octavia III	2013-2018	5E	42 Driver-Door Elect.	Read Fault Codes	
Octavia III	2013-2018	5E	42 Driver-Door Elect.	Clear Fault Codes	
Octavia III	2013-2018	5E	42 Driver-Door Elect.	Measuring Blocks	
Octavia III	2013-2018	5E	42 Driver-Door Elect.	Output Tests	
Octavia III	2013-2018	5E	42 Driver-Door Elect.	Specia Functions	
Octavia III	2013-2018	5E	44 Steering Assistance	Read Fault Codes	
Octavia III	2013-2018	5E	44 Steering Assistance	Clear Fault Codes	
Octavia III	2013-2018	5E	44 Steering Assistance	Measuring Blocks	
Octavia III	2013-2018	5E	44 Steering Assistance	Output Tests	
Octavia III	2013-2018	5E	44 Steering Assistance	Specia Functions	
Octavia III	2013-2018	5E	47 Soundsystem	Read Fault Codes	
Octavia III	2013-2018	5E	47 Soundsystem	Clear Fault Codes	
Octavia III	2013-2018	5E	47 Soundsystem	Measuring Blocks	
Octavia III	2013-2018	5E	47 Soundsystem	Output Tests	
Octavia III	2013-2018	5E	47 Soundsystem	Specia Functions	
Octavia III	2013-2018	5E	52 Passe.-Door Elect.	Read Fault Codes	
Octavia III	2013-2018	5E	52 Passe.-Door Elect.	Clear Fault Codes	
Octavia III	2013-2018	5E	52 Passe.-Door Elect.	Measuring Blocks	
Octavia III	2013-2018	5E	52 Passe.-Door Elect.	Output Tests	
Octavia III	2013-2018	5E	52 Passe.-Door Elect.	Specia Functions	
Octavia III	2013-2018	5E	55 Headlight Range Control	Read Fault Codes	
Octavia III	2013-2018	5E	55 Headlight Range Control	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia III	2013-2018	5E	55 Headlight Range Control	Measuring Blocks	
Octavia III	2013-2018	5E	55 Headlight Range Control	Output Tests	
Octavia III	2013-2018	5E	55 Headlight Range Control	Specia Functions	
Octavia III	2013-2018	5E	57 TV-Tuner	Read Fault Codes	
Octavia III	2013-2018	5E	57 TV-Tuner	Clear Fault Codes	
Octavia III	2013-2018	5E	57 TV-Tuner	Measuring Blocks	
Octavia III	2013-2018	5E	57 TV-Tuner	Output Tests	
Octavia III	2013-2018	5E	57 TV-Tuner	Specia Functions	
Octavia III	2013-2018	5E	5F Information Electronic Equipment 1	Read Fault Codes	
Octavia III	2013-2018	5E	5F Information Electronic Equipment 1	Clear Fault Codes	
Octavia III	2013-2018	5E	5F Information Electronic Equipment 1	Measuring Blocks	
Octavia III	2013-2018	5E	5F Information Electronic Equipment 1	Output Tests	
Octavia III	2013-2018	5E	5F Information Electronic Equipment 1	Specia Functions	
Octavia III	2013-2018	5E	65 Tyre Pressure Monitoring	Read Fault Codes	
Octavia III	2013-2018	5E	65 Tyre Pressure Monitoring	Clear Fault Codes	
Octavia III	2013-2018	5E	65 Tyre Pressure Monitoring	Measuring Blocks	
Octavia III	2013-2018	5E	65 Tyre Pressure Monitoring	Output Tests	
Octavia III	2013-2018	5E	65 Tyre Pressure Monitoring	Specia Functions	
Octavia III	2013-2018	5E	69 Trailer Function	Read Fault Codes	
Octavia III	2013-2018	5E	69 Trailer Function	Clear Fault Codes	
Octavia III	2013-2018	5E	69 Trailer Function	Measuring Blocks	
Octavia III	2013-2018	5E	69 Trailer Function	Output Tests	
Octavia III	2013-2018	5E	69 Trailer Function	Specia Functions	
Octavia III	2013-2018	5E	6C Rear Camera	Read Fault Codes	
Octavia III	2013-2018	5E	6C Rear Camera	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia III	2013-2018	5E	6C Rear Camera	Measuring Blocks	
Octavia III	2013-2018	5E	6C Rear Camera	Output Tests	
Octavia III	2013-2018	5E	6C Rear Camera	Specia Functions	
Octavia III	2013-2018	5E	6D Electronic Equipment of Trunk Lid	Read Fault Codes	
Octavia III	2013-2018	5E	6D Electronic Equipment of Trunk Lid	Clear Fault Codes	
Octavia III	2013-2018	5E	6D Electronic Equipment of Trunk Lid	Measuring Blocks	
Octavia III	2013-2018	5E	6D Electronic Equipment of Trunk Lid	Output Tests	
Octavia III	2013-2018	5E	6D Electronic Equipment of Trunk Lid	Specia Functions	
Octavia III	2013-2018	5E	76 Parking Aid	Read Fault Codes	
Octavia III	2013-2018	5E	76 Parking Aid	Clear Fault Codes	
Octavia III	2013-2018	5E	76 Parking Aid	Measuring Blocks	
Octavia III	2013-2018	5E	76 Parking Aid	Output Tests	
Octavia III	2013-2018	5E	76 Parking Aid	Specia Functions	
Octavia III	2013-2018	5E	A5 Frt Sens.Drv.Assist	Read Fault Codes	
Octavia III	2013-2018	5E	A5 Frt Sens.Drv.Assist	Clear Fault Codes	
Octavia III	2013-2018	5E	A5 Frt Sens.Drv.Assist	Measuring Blocks	
Octavia III	2013-2018	5E	A5 Frt Sens.Drv.Assist	Output Tests	
Octavia III	2013-2018	5E	A5 Frt Sens.Drv.Assist	Specia Functions	
Octavia III	2013-2018	5E	A9 Struct.Borne Sound	Read Fault Codes	
Octavia III	2013-2018	5E	A9 Struct.Borne Sound	Clear Fault Codes	
Octavia III	2013-2018	5E	A9 Struct.Borne Sound	Measuring Blocks	
Octavia III	2013-2018	5E	A9 Struct.Borne Sound	Output Tests	
Octavia III	2013-2018	5E	A9 Struct.Borne Sound	Specia Functions	
Octavia III	2013-2018	5E	B7 Access Start Interf	Read Fault Codes	
Octavia III	2013-2018	5E	B7 Access Start Interf	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia III	2013-2018	5E	B7 Access Start Interf	Measuring Blocks	
Octavia III	2013-2018	5E	B7 Access Start Interf	Output Tests	
Octavia III	2013-2018	5E	B7 Access Start Interf	Specia Functions	
Oktavia	2001	1U	01 Engine Electronics	Read Fault Codes	
Oktavia	2001	1U	01 Engine Electronics	Clear Fault Codes	
Oktavia	2001	1U	01 Engine Electronics	Measuring Blocks	
Oktavia	2001	1U	01 Engine Electronics	Output Tests	
Oktavia	2001	1U	01 Engine Electronics	Specia Functions	
Oktavia	2001	1U	02 Transmission Electronics	Read Fault Codes	
Oktavia	2001	1U	02 Transmission Electronics	Clear Fault Codes	
Oktavia	2001	1U	02 Transmission Electronics	Measuring Blocks	
Oktavia	2001	1U	02 Transmission Electronics	Output Tests	
Oktavia	2001	1U	02 Transmission Electronics	Specia Functions	
Oktavia	2001	1U	03 Brake Electronics	Read Fault Codes	
Oktavia	2001	1U	03 Brake Electronics	Clear Fault Codes	
Oktavia	2001	1U	03 Brake Electronics	Measuring Blocks	
Oktavia	2001	1U	03 Brake Electronics	Output Tests	
Oktavia	2001	1U	03 Brake Electronics	Specia Functions	
Oktavia	2001	1U	08 AC/Heating Electronics	Read Fault Codes	
Oktavia	2001	1U	08 AC/Heating Electronics	Clear Fault Codes	
Oktavia	2001	1U	08 AC/Heating Electronics	Measuring Blocks	
Oktavia	2001	1U	08 AC/Heating Electronics	Output Tests	
Oktavia	2001	1U	08 AC/Heating Electronics	Specia Functions	
Oktavia	2001	1U	11 Engine Electronics 2	Read Fault Codes	
Oktavia	2001	1U	11 Engine Electronics 2	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia	2001	1U	11 Engine Electronics 2	Measuring Blocks	
Oktavia	2001	1U	11 Engine Electronics 2	Output Tests	
Oktavia	2001	1U	11 Engine Electronics 2	Specia Functions	
Oktavia	2001	1U	15 Airbags	Read Fault Codes	
Oktavia	2001	1U	15 Airbags	Clear Fault Codes	
Oktavia	2001	1U	15 Airbags	Measuring Blocks	
Oktavia	2001	1U	15 Airbags	Output Tests	
Oktavia	2001	1U	15 Airbags	Specia Functions	
Oktavia	2001	1U	16 Steering Wheel Electronics	Read Fault Codes	
Oktavia	2001	1U	16 Steering Wheel Electronics	Clear Fault Codes	
Oktavia	2001	1U	16 Steering Wheel Electronics	Measuring Blocks	
Oktavia	2001	1U	16 Steering Wheel Electronics	Output Tests	
Oktavia	2001	1U	16 Steering Wheel Electronics	Specia Functions	
Oktavia	2001	1U	17 Instrument Cluster	Read Fault Codes	
Oktavia	2001	1U	17 Instrument Cluster	Clear Fault Codes	
Oktavia	2001	1U	17 Instrument Cluster	Measuring Blocks	
Oktavia	2001	1U	17 Instrument Cluster	Output Tests	
Oktavia	2001	1U	17 Instrument Cluster	Specia Functions	
Oktavia	2001	1U	22 4WD Electronics	Read Fault Codes	
Oktavia	2001	1U	22 4WD Electronics	Clear Fault Codes	
Oktavia	2001	1U	22 4WD Electronics	Measuring Blocks	
Oktavia	2001	1U	22 4WD Electronics	Output Tests	
Oktavia	2001	1U	22 4WD Electronics	Specia Functions	
Oktavia	2001	1U	25 Immobilizer	Read Fault Codes	
Oktavia	2001	1U	25 Immobilizer	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia	2001	1U	25 Immobilizer	Measuring Blocks	
Oktavia	2001	1U	25 Immobilizer	Output Tests	
Oktavia	2001	1U	25 Immobilizer	Specia Functions	
Oktavia	2001	1U	29 Left Light Control	Read Fault Codes	
Oktavia	2001	1U	29 Left Light Control	Clear Fault Codes	
Oktavia	2001	1U	29 Left Light Control	Measuring Blocks	
Oktavia	2001	1U	29 Left Light Control	Output Tests	
Oktavia	2001	1U	29 Left Light Control	Specia Functions	
Oktavia	2001	1U	35 Central Locking	Read Fault Codes	
Oktavia	2001	1U	35 Central Locking	Clear Fault Codes	
Oktavia	2001	1U	35 Central Locking	Measuring Blocks	
Oktavia	2001	1U	35 Central Locking	Output Tests	
Oktavia	2001	1U	35 Central Locking	Specia Functions	
Oktavia	2001	1U	36 Driver`s Side Seat Adj.	Read Fault Codes	
Oktavia	2001	1U	36 Driver`s Side Seat Adj.	Clear Fault Codes	
Oktavia	2001	1U	36 Driver`s Side Seat Adj.	Measuring Blocks	
Oktavia	2001	1U	36 Driver`s Side Seat Adj.	Output Tests	
Oktavia	2001	1U	36 Driver`s Side Seat Adj.	Specia Functions	
Oktavia	2001	1U	37 Navigation	Read Fault Codes	
Oktavia	2001	1U	37 Navigation	Clear Fault Codes	
Oktavia	2001	1U	37 Navigation	Measuring Blocks	
Oktavia	2001	1U	37 Navigation	Output Tests	
Oktavia	2001	1U	37 Navigation	Specia Functions	
Oktavia	2001	1U	39 Right Light Control	Read Fault Codes	
Oktavia	2001	1U	39 Right Light Control	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia	2001	1U	39 Right Light Control	Measuring Blocks	
Oktavia	2001	1U	39 Right Light Control	Output Tests	
Oktavia	2001	1U	39 Right Light Control	Specia Functions	
Oktavia	2001	1U	46 Central Control Module	Read Fault Codes	
Oktavia	2001	1U	46 Central Control Module	Clear Fault Codes	
Oktavia	2001	1U	46 Central Control Module	Measuring Blocks	
Oktavia	2001	1U	46 Central Control Module	Output Tests	
Oktavia	2001	1U	46 Central Control Module	Specia Functions	
Oktavia	2001	1U	51 Electric Drive	Read Fault Codes	
Oktavia	2001	1U	51 Electric Drive	Clear Fault Codes	
Oktavia	2001	1U	51 Electric Drive	Measuring Blocks	
Oktavia	2001	1U	51 Electric Drive	Output Tests	
Oktavia	2001	1U	51 Electric Drive	Specia Functions	
Oktavia	2001	1U	56 Radio	Read Fault Codes	
Oktavia	2001	1U	56 Radio	Clear Fault Codes	
Oktavia	2001	1U	56 Radio	Measuring Blocks	
Oktavia	2001	1U	56 Radio	Output Tests	
Oktavia	2001	1U	56 Radio	Specia Functions	
Oktavia	2001	1U	76 Parking Aid	Read Fault Codes	
Oktavia	2001	1U	76 Parking Aid	Clear Fault Codes	
Oktavia	2001	1U	76 Parking Aid	Measuring Blocks	
Oktavia	2001	1U	76 Parking Aid	Output Tests	
Oktavia	2001	1U	76 Parking Aid	Specia Functions	
Oktavia	2001	1U	8C Hybrid Battery	Read Fault Codes	
Oktavia	2001	1U	8C Hybrid Battery	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia	2001	1U	8C Hybrid Battery	Measuring Blocks	
Oktavia	2001	1U	8C Hybrid Battery	Output Tests	
Oktavia	2001	1U	8C Hybrid Battery	Specia Functions	
Oktavia I	1996-1998	1U	01 Engine Electronics	Read Fault Codes	
Oktavia I	1996-1998	1U	01 Engine Electronics	Clear Fault Codes	
Oktavia I	1996-1998	1U	01 Engine Electronics	Measuring Blocks	
Oktavia I	1996-1998	1U	01 Engine Electronics	Output Tests	
Oktavia I	1996-1998	1U	01 Engine Electronics	Specia Functions	
Oktavia I	1996-1998	1U	02 Transmission Electronics	Read Fault Codes	
Oktavia I	1996-1998	1U	02 Transmission Electronics	Clear Fault Codes	
Oktavia I	1996-1998	1U	02 Transmission Electronics	Measuring Blocks	
Oktavia I	1996-1998	1U	02 Transmission Electronics	Output Tests	
Oktavia I	1996-1998	1U	02 Transmission Electronics	Specia Functions	
Oktavia I	1996-1998	1U	03 Brake Electronics	Read Fault Codes	
Oktavia I	1996-1998	1U	03 Brake Electronics	Clear Fault Codes	
Oktavia I	1996-1998	1U	03 Brake Electronics	Measuring Blocks	
Oktavia I	1996-1998	1U	03 Brake Electronics	Output Tests	
Oktavia I	1996-1998	1U	03 Brake Electronics	Specia Functions	
Oktavia I	1996-1998	1U	11 Engine Electronics 2	Read Fault Codes	
Oktavia I	1996-1998	1U	11 Engine Electronics 2	Clear Fault Codes	
Oktavia I	1996-1998	1U	11 Engine Electronics 2	Measuring Blocks	
Oktavia I	1996-1998	1U	11 Engine Electronics 2	Output Tests	
Oktavia I	1996-1998	1U	11 Engine Electronics 2	Specia Functions	
Oktavia I	1996-1998	1U	15 Airbags	Read Fault Codes	
Oktavia I	1996-1998	1U	15 Airbags	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia I	1996-1998	1U	15 Airbags	Measuring Blocks	
Oktavia I	1996-1998	1U	15 Airbags	Output Tests	
Oktavia I	1996-1998	1U	15 Airbags	Specia Functions	
Oktavia I	1996-1998	1U	17 Instrument Cluster	Read Fault Codes	
Oktavia I	1996-1998	1U	17 Instrument Cluster	Clear Fault Codes	
Oktavia I	1996-1998	1U	17 Instrument Cluster	Measuring Blocks	
Oktavia I	1996-1998	1U	17 Instrument Cluster	Output Tests	
Oktavia I	1996-1998	1U	17 Instrument Cluster	Specia Functions	
Oktavia I	1996-1998	1U	25 Immobilizer	Read Fault Codes	
Oktavia I	1996-1998	1U	25 Immobilizer	Clear Fault Codes	
Oktavia I	1996-1998	1U	25 Immobilizer	Measuring Blocks	
Oktavia I	1996-1998	1U	25 Immobilizer	Output Tests	
Oktavia I	1996-1998	1U	25 Immobilizer	Specia Functions	
Oktavia I	1996-1998	1U	35 Central Locking	Read Fault Codes	
Oktavia I	1996-1998	1U	35 Central Locking	Clear Fault Codes	
Oktavia I	1996-1998	1U	35 Central Locking	Measuring Blocks	
Oktavia I	1996-1998	1U	35 Central Locking	Output Tests	
Oktavia I	1996-1998	1U	35 Central Locking	Specia Functions	
Oktavia I	1996-1998	1U	46 Central Control Module	Read Fault Codes	
Oktavia I	1996-1998	1U	46 Central Control Module	Clear Fault Codes	
Oktavia I	1996-1998	1U	46 Central Control Module	Measuring Blocks	
Oktavia I	1996-1998	1U	46 Central Control Module	Output Tests	
Oktavia I	1996-1998	1U	46 Central Control Module	Specia Functions	
Oktavia I	1996-1998	1U	51 Electric Drive	Read Fault Codes	
Oktavia I	1996-1998	1U	51 Electric Drive	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia I	1996-1998	1U	51 Electric Drive	Measuring Blocks	
Oktavia I	1996-1998	1U	51 Electric Drive	Output Tests	
Oktavia I	1996-1998	1U	51 Electric Drive	Specia Functions	
Oktavia I	1996-1998	1U	8C Hybrid Battery	Read Fault Codes	
Oktavia I	1996-1998	1U	8C Hybrid Battery	Clear Fault Codes	
Oktavia I	1996-1998	1U	8C Hybrid Battery	Measuring Blocks	
Oktavia I	1996-1998	1U	8C Hybrid Battery	Output Tests	
Oktavia I	1996-1998	1U	8C Hybrid Battery	Specia Functions	
Oktavia I	1999	1U	01 Engine Electronics	Read Fault Codes	
Oktavia I	1999	1U	01 Engine Electronics	Clear Fault Codes	
Oktavia I	1999	1U	01 Engine Electronics	Measuring Blocks	
Oktavia I	1999	1U	01 Engine Electronics	Output Tests	
Oktavia I	1999	1U	01 Engine Electronics	Specia Functions	
Oktavia I	1999	1U	02 Transmission Electronics	Read Fault Codes	
Oktavia I	1999	1U	02 Transmission Electronics	Clear Fault Codes	
Oktavia I	1999	1U	02 Transmission Electronics	Measuring Blocks	
Oktavia I	1999	1U	02 Transmission Electronics	Output Tests	
Oktavia I	1999	1U	02 Transmission Electronics	Specia Functions	
Oktavia I	1999	1U	03 Brake Electronics	Read Fault Codes	
Oktavia I	1999	1U	03 Brake Electronics	Clear Fault Codes	
Oktavia I	1999	1U	03 Brake Electronics	Measuring Blocks	
Oktavia I	1999	1U	03 Brake Electronics	Output Tests	
Oktavia I	1999	1U	03 Brake Electronics	Specia Functions	
Oktavia I	1999	1U	08 AC/Heating Electronics	Read Fault Codes	
Oktavia I	1999	1U	08 AC/Heating Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia I	1999	1U	08 AC/Heating Electronics	Measuring Blocks	
Oktavia I	1999	1U	08 AC/Heating Electronics	Output Tests	
Oktavia I	1999	1U	08 AC/Heating Electronics	Specia Functions	
Oktavia I	1999	1U	11 Engine Electronics 2	Read Fault Codes	
Oktavia I	1999	1U	11 Engine Electronics 2	Clear Fault Codes	
Oktavia I	1999	1U	11 Engine Electronics 2	Measuring Blocks	
Oktavia I	1999	1U	11 Engine Electronics 2	Output Tests	
Oktavia I	1999	1U	11 Engine Electronics 2	Specia Functions	
Oktavia I	1999	1U	15 Airbags	Read Fault Codes	
Oktavia I	1999	1U	15 Airbags	Clear Fault Codes	
Oktavia I	1999	1U	15 Airbags	Measuring Blocks	
Oktavia I	1999	1U	15 Airbags	Output Tests	
Oktavia I	1999	1U	15 Airbags	Specia Functions	
Oktavia I	1999	1U	17 Instrument Cluster	Read Fault Codes	
Oktavia I	1999	1U	17 Instrument Cluster	Clear Fault Codes	
Oktavia I	1999	1U	17 Instrument Cluster	Measuring Blocks	
Oktavia I	1999	1U	17 Instrument Cluster	Output Tests	
Oktavia I	1999	1U	17 Instrument Cluster	Specia Functions	
Oktavia I	1999	1U	25 Immobilizer	Read Fault Codes	
Oktavia I	1999	1U	25 Immobilizer	Clear Fault Codes	
Oktavia I	1999	1U	25 Immobilizer	Measuring Blocks	
Oktavia I	1999	1U	25 Immobilizer	Output Tests	
Oktavia I	1999	1U	25 Immobilizer	Specia Functions	
Oktavia I	1999	1U	35 Central Locking	Read Fault Codes	
Oktavia I	1999	1U	35 Central Locking	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia I	1999	1U	35 Central Locking	Measuring Blocks	
Oktavia I	1999	1U	35 Central Locking	Output Tests	
Oktavia I	1999	1U	35 Central Locking	Specia Functions	
Oktavia I	1999	1U	37 Navigation	Read Fault Codes	
Oktavia I	1999	1U	37 Navigation	Clear Fault Codes	
Oktavia I	1999	1U	37 Navigation	Measuring Blocks	
Oktavia I	1999	1U	37 Navigation	Output Tests	
Oktavia I	1999	1U	37 Navigation	Specia Functions	
Oktavia I	1999	1U	46 Central Control Module	Read Fault Codes	
Oktavia I	1999	1U	46 Central Control Module	Clear Fault Codes	
Oktavia I	1999	1U	46 Central Control Module	Measuring Blocks	
Oktavia I	1999	1U	46 Central Control Module	Output Tests	
Oktavia I	1999	1U	46 Central Control Module	Specia Functions	
Oktavia I	1999	1U	51 Electric Drive	Read Fault Codes	
Oktavia I	1999	1U	51 Electric Drive	Clear Fault Codes	
Oktavia I	1999	1U	51 Electric Drive	Measuring Blocks	
Oktavia I	1999	1U	51 Electric Drive	Output Tests	
Oktavia I	1999	1U	51 Electric Drive	Specia Functions	
Oktavia I	1999	1U	56 Radio	Read Fault Codes	
Oktavia I	1999	1U	56 Radio	Clear Fault Codes	
Oktavia I	1999	1U	56 Radio	Measuring Blocks	
Oktavia I	1999	1U	56 Radio	Output Tests	
Oktavia I	1999	1U	56 Radio	Specia Functions	
Oktavia I	1999	1U	8C Hybrid Battery	Read Fault Codes	
Oktavia I	1999	1U	8C Hybrid Battery	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia I	1999	1U	8C Hybrid Battery	Measuring Blocks	
Oktavia I	1999	1U	8C Hybrid Battery	Output Tests	
Oktavia I	1999	1U	8C Hybrid Battery	Specia Functions	
Oktavia I	2000	1U	01 Engine Electronics	Read Fault Codes	
Oktavia I	2000	1U	01 Engine Electronics	Clear Fault Codes	
Oktavia I	2000	1U	01 Engine Electronics	Measuring Blocks	
Oktavia I	2000	1U	01 Engine Electronics	Output Tests	
Oktavia I	2000	1U	01 Engine Electronics	Specia Functions	
Oktavia I	2000	1U	02 Transmission Electronics	Read Fault Codes	
Oktavia I	2000	1U	02 Transmission Electronics	Clear Fault Codes	
Oktavia I	2000	1U	02 Transmission Electronics	Measuring Blocks	
Oktavia I	2000	1U	02 Transmission Electronics	Output Tests	
Oktavia I	2000	1U	02 Transmission Electronics	Specia Functions	
Oktavia I	2000	1U	03 Brake Electronics	Read Fault Codes	
Oktavia I	2000	1U	03 Brake Electronics	Clear Fault Codes	
Oktavia I	2000	1U	03 Brake Electronics	Measuring Blocks	
Oktavia I	2000	1U	03 Brake Electronics	Output Tests	
Oktavia I	2000	1U	03 Brake Electronics	Specia Functions	
Oktavia I	2000	1U	08 AC/Heating Electronics	Read Fault Codes	
Oktavia I	2000	1U	08 AC/Heating Electronics	Clear Fault Codes	
Oktavia I	2000	1U	08 AC/Heating Electronics	Measuring Blocks	
Oktavia I	2000	1U	08 AC/Heating Electronics	Output Tests	
Oktavia I	2000	1U	08 AC/Heating Electronics	Specia Functions	
Oktavia I	2000	1U	11 Engine Electronics 2	Read Fault Codes	
Oktavia I	2000	1U	11 Engine Electronics 2	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia I	2000	1U	11 Engine Electronics 2	Measuring Blocks	
Oktavia I	2000	1U	11 Engine Electronics 2	Output Tests	
Oktavia I	2000	1U	11 Engine Electronics 2	Specia Functions	
Oktavia I	2000	1U	15 Airbags	Read Fault Codes	
Oktavia I	2000	1U	15 Airbags	Clear Fault Codes	
Oktavia I	2000	1U	15 Airbags	Measuring Blocks	
Oktavia I	2000	1U	15 Airbags	Output Tests	
Oktavia I	2000	1U	15 Airbags	Specia Functions	
Oktavia I	2000	1U	17 Instrument Cluster	Read Fault Codes	
Oktavia I	2000	1U	17 Instrument Cluster	Clear Fault Codes	
Oktavia I	2000	1U	17 Instrument Cluster	Measuring Blocks	
Oktavia I	2000	1U	17 Instrument Cluster	Output Tests	
Oktavia I	2000	1U	17 Instrument Cluster	Specia Functions	
Oktavia I	2000	1U	22 4WD Electronics	Read Fault Codes	
Oktavia I	2000	1U	22 4WD Electronics	Clear Fault Codes	
Oktavia I	2000	1U	22 4WD Electronics	Measuring Blocks	
Oktavia I	2000	1U	22 4WD Electronics	Output Tests	
Oktavia I	2000	1U	22 4WD Electronics	Specia Functions	
Oktavia I	2000	1U	25 Immobilizer	Read Fault Codes	
Oktavia I	2000	1U	25 Immobilizer	Clear Fault Codes	
Oktavia I	2000	1U	25 Immobilizer	Measuring Blocks	
Oktavia I	2000	1U	25 Immobilizer	Output Tests	
Oktavia I	2000	1U	25 Immobilizer	Specia Functions	
Oktavia I	2000	1U	37 Navigation	Read Fault Codes	
Oktavia I	2000	1U	37 Navigation	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia I	2000	1U	37 Navigation	Measuring Blocks	
Oktavia I	2000	1U	37 Navigation	Output Tests	
Oktavia I	2000	1U	37 Navigation	Specia Functions	
Oktavia I	2000	1U	46 Central Control Module	Read Fault Codes	
Oktavia I	2000	1U	46 Central Control Module	Clear Fault Codes	
Oktavia I	2000	1U	46 Central Control Module	Measuring Blocks	
Oktavia I	2000	1U	46 Central Control Module	Output Tests	
Oktavia I	2000	1U	46 Central Control Module	Specia Functions	
Oktavia I	2000	1U	51 Electric Drive	Read Fault Codes	
Oktavia I	2000	1U	51 Electric Drive	Clear Fault Codes	
Oktavia I	2000	1U	51 Electric Drive	Measuring Blocks	
Oktavia I	2000	1U	51 Electric Drive	Output Tests	
Oktavia I	2000	1U	51 Electric Drive	Specia Functions	
Oktavia I	2000	1U	56 Radio	Read Fault Codes	
Oktavia I	2000	1U	56 Radio	Clear Fault Codes	
Oktavia I	2000	1U	56 Radio	Measuring Blocks	
Oktavia I	2000	1U	56 Radio	Output Tests	
Oktavia I	2000	1U	56 Radio	Specia Functions	
Oktavia I	2000	1U	76 Parking Aid	Read Fault Codes	
Oktavia I	2000	1U	76 Parking Aid	Clear Fault Codes	
Oktavia I	2000	1U	76 Parking Aid	Measuring Blocks	
Oktavia I	2000	1U	76 Parking Aid	Output Tests	
Oktavia I	2000	1U	76 Parking Aid	Specia Functions	
Oktavia I	2000	1U	8C Hybrid Battery	Read Fault Codes	
Oktavia I	2000	1U	8C Hybrid Battery	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia I	2000	1U	8C Hybrid Battery	Measuring Blocks	
Oktavia I	2000	1U	8C Hybrid Battery	Output Tests	
Oktavia I	2000	1U	8C Hybrid Battery	Specia Functions	
Oktavia I	2002-2011	1U	01 Engine Electronics	Read Fault Codes	
Oktavia I	2002-2011	1U	01 Engine Electronics	Clear Fault Codes	
Oktavia I	2002-2011	1U	01 Engine Electronics	Measuring Blocks	
Oktavia I	2002-2011	1U	01 Engine Electronics	Output Tests	
Oktavia I	2002-2011	1U	01 Engine Electronics	Specia Functions	
Oktavia I	2002-2011	1U	02 Transmission Electronics	Read Fault Codes	
Oktavia I	2002-2011	1U	02 Transmission Electronics	Clear Fault Codes	
Oktavia I	2002-2011	1U	02 Transmission Electronics	Measuring Blocks	
Oktavia I	2002-2011	1U	02 Transmission Electronics	Output Tests	
Oktavia I	2002-2011	1U	02 Transmission Electronics	Specia Functions	
Oktavia I	2002-2011	1U	03 Brake Electronics	Read Fault Codes	
Oktavia I	2002-2011	1U	03 Brake Electronics	Clear Fault Codes	
Oktavia I	2002-2011	1U	03 Brake Electronics	Measuring Blocks	
Oktavia I	2002-2011	1U	03 Brake Electronics	Output Tests	
Oktavia I	2002-2011	1U	03 Brake Electronics	Specia Functions	
Oktavia I	2002-2011	1U	08 AC/Heating Electronics	Read Fault Codes	
Oktavia I	2002-2011	1U	08 AC/Heating Electronics	Clear Fault Codes	
Oktavia I	2002-2011	1U	08 AC/Heating Electronics	Measuring Blocks	
Oktavia I	2002-2011	1U	08 AC/Heating Electronics	Output Tests	
Oktavia I	2002-2011	1U	08 AC/Heating Electronics	Specia Functions	
Oktavia I	2002-2011	1U	11 Engine Electronics 2	Read Fault Codes	
Oktavia I	2002-2011	1U	11 Engine Electronics 2	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia I	2002-2011	1U	11 Engine Electronics 2	Measuring Blocks	
Oktavia I	2002-2011	1U	11 Engine Electronics 2	Output Tests	
Oktavia I	2002-2011	1U	11 Engine Electronics 2	Specia Functions	
Oktavia I	2002-2011	1U	15 Airbags	Read Fault Codes	
Oktavia I	2002-2011	1U	15 Airbags	Clear Fault Codes	
Oktavia I	2002-2011	1U	15 Airbags	Measuring Blocks	
Oktavia I	2002-2011	1U	15 Airbags	Output Tests	
Oktavia I	2002-2011	1U	15 Airbags	Specia Functions	
Oktavia I	2002-2011	1U	16 Steering Wheel Electronics	Read Fault Codes	
Oktavia I	2002-2011	1U	16 Steering Wheel Electronics	Clear Fault Codes	
Oktavia I	2002-2011	1U	16 Steering Wheel Electronics	Measuring Blocks	
Oktavia I	2002-2011	1U	16 Steering Wheel Electronics	Output Tests	
Oktavia I	2002-2011	1U	16 Steering Wheel Electronics	Specia Functions	
Oktavia I	2002-2011	1U	17 Instrument Cluster	Read Fault Codes	
Oktavia I	2002-2011	1U	17 Instrument Cluster	Clear Fault Codes	
Oktavia I	2002-2011	1U	17 Instrument Cluster	Measuring Blocks	
Oktavia I	2002-2011	1U	17 Instrument Cluster	Output Tests	
Oktavia I	2002-2011	1U	17 Instrument Cluster	Specia Functions	
Oktavia I	2002-2011	1U	19 Gateway Data Bus	Read Fault Codes	
Oktavia I	2002-2011	1U	19 Gateway Data Bus	Clear Fault Codes	
Oktavia I	2002-2011	1U	19 Gateway Data Bus	Measuring Blocks	
Oktavia I	2002-2011	1U	19 Gateway Data Bus	Output Tests	
Oktavia I	2002-2011	1U	19 Gateway Data Bus	Specia Functions	
Oktavia I	2002-2011	1U	22 4WD Electronics	Read Fault Codes	
Oktavia I	2002-2011	1U	22 4WD Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia I	2002-2011	1U	22 4WD Electronics	Measuring Blocks	
Oktavia I	2002-2011	1U	22 4WD Electronics	Output Tests	
Oktavia I	2002-2011	1U	22 4WD Electronics	Specia Functions	
Oktavia I	2002-2011	1U	25 Immobilizer	Read Fault Codes	
Oktavia I	2002-2011	1U	25 Immobilizer	Clear Fault Codes	
Oktavia I	2002-2011	1U	25 Immobilizer	Measuring Blocks	
Oktavia I	2002-2011	1U	25 Immobilizer	Output Tests	
Oktavia I	2002-2011	1U	25 Immobilizer	Specia Functions	
Oktavia I	2002-2011	1U	29 Left Light Control	Read Fault Codes	
Oktavia I	2002-2011	1U	29 Left Light Control	Clear Fault Codes	
Oktavia I	2002-2011	1U	29 Left Light Control	Measuring Blocks	
Oktavia I	2002-2011	1U	29 Left Light Control	Output Tests	
Oktavia I	2002-2011	1U	29 Left Light Control	Specia Functions	
Oktavia I	2002-2011	1U	35 Central Locking	Read Fault Codes	
Oktavia I	2002-2011	1U	35 Central Locking	Clear Fault Codes	
Oktavia I	2002-2011	1U	35 Central Locking	Measuring Blocks	
Oktavia I	2002-2011	1U	35 Central Locking	Output Tests	
Oktavia I	2002-2011	1U	35 Central Locking	Specia Functions	
Oktavia I	2002-2011	1U	36 Driver`s Side Seat Adj.	Read Fault Codes	
Oktavia I	2002-2011	1U	36 Driver`s Side Seat Adj.	Clear Fault Codes	
Oktavia I	2002-2011	1U	36 Driver`s Side Seat Adj.	Measuring Blocks	
Oktavia I	2002-2011	1U	36 Driver`s Side Seat Adj.	Output Tests	
Oktavia I	2002-2011	1U	36 Driver`s Side Seat Adj.	Specia Functions	
Oktavia I	2002-2011	1U	37 Navigation	Read Fault Codes	
Oktavia I	2002-2011	1U	37 Navigation	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia I	2002-2011	1U	37 Navigation	Measuring Blocks	
Oktavia I	2002-2011	1U	37 Navigation	Output Tests	
Oktavia I	2002-2011	1U	37 Navigation	Specia Functions	
Oktavia I	2002-2011	1U	39 Right Light Control	Read Fault Codes	
Oktavia I	2002-2011	1U	39 Right Light Control	Clear Fault Codes	
Oktavia I	2002-2011	1U	39 Right Light Control	Measuring Blocks	
Oktavia I	2002-2011	1U	39 Right Light Control	Output Tests	
Oktavia I	2002-2011	1U	39 Right Light Control	Specia Functions	
Oktavia I	2002-2011	1U	46 Central Control Module	Read Fault Codes	
Oktavia I	2002-2011	1U	46 Central Control Module	Clear Fault Codes	
Oktavia I	2002-2011	1U	46 Central Control Module	Measuring Blocks	
Oktavia I	2002-2011	1U	46 Central Control Module	Output Tests	
Oktavia I	2002-2011	1U	46 Central Control Module	Specia Functions	
Oktavia I	2002-2011	1U	51 Electric Drive	Read Fault Codes	
Oktavia I	2002-2011	1U	51 Electric Drive	Clear Fault Codes	
Oktavia I	2002-2011	1U	51 Electric Drive	Measuring Blocks	
Oktavia I	2002-2011	1U	51 Electric Drive	Output Tests	
Oktavia I	2002-2011	1U	51 Electric Drive	Specia Functions	
Oktavia I	2002-2011	1U	56 Radio	Read Fault Codes	
Oktavia I	2002-2011	1U	56 Radio	Clear Fault Codes	
Oktavia I	2002-2011	1U	56 Radio	Measuring Blocks	
Oktavia I	2002-2011	1U	56 Radio	Output Tests	
Oktavia I	2002-2011	1U	56 Radio	Specia Functions	
Oktavia I	2002-2011	1U	76 Parking Aid	Read Fault Codes	
Oktavia I	2002-2011	1U	76 Parking Aid	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia I	2002-2011	1U	76 Parking Aid	Measuring Blocks	
Oktavia I	2002-2011	1U	76 Parking Aid	Output Tests	
Oktavia I	2002-2011	1U	76 Parking Aid	Specia Functions	
Oktavia I	2002-2011	1U	8C Hybrid Battery	Read Fault Codes	
Oktavia I	2002-2011	1U	8C Hybrid Battery	Clear Fault Codes	
Oktavia I	2002-2011	1U	8C Hybrid Battery	Measuring Blocks	
Oktavia I	2002-2011	1U	8C Hybrid Battery	Output Tests	
Oktavia I	2002-2011	1U	8C Hybrid Battery	Specia Functions	
Oktavia II	2004	1Z	01 Engine Electronics	Read Fault Codes	
Oktavia II	2004	1Z	01 Engine Electronics	Clear Fault Codes	
Oktavia II	2004	1Z	01 Engine Electronics	Measuring Blocks	
Oktavia II	2004	1Z	01 Engine Electronics	Output Tests	
Oktavia II	2004	1Z	01 Engine Electronics	Specia Functions	
Oktavia II	2004	1Z	02 Transmission Electronics	Read Fault Codes	
Oktavia II	2004	1Z	02 Transmission Electronics	Clear Fault Codes	
Oktavia II	2004	1Z	02 Transmission Electronics	Measuring Blocks	
Oktavia II	2004	1Z	02 Transmission Electronics	Output Tests	
Oktavia II	2004	1Z	02 Transmission Electronics	Specia Functions	
Oktavia II	2004	1Z	03 Brake Electronics	Read Fault Codes	
Oktavia II	2004	1Z	03 Brake Electronics	Clear Fault Codes	
Oktavia II	2004	1Z	03 Brake Electronics	Measuring Blocks	
Oktavia II	2004	1Z	03 Brake Electronics	Output Tests	
Oktavia II	2004	1Z	03 Brake Electronics	Specia Functions	
Oktavia II	2004	1Z	08 AC/Heating Electronics	Read Fault Codes	
Oktavia II	2004	1Z	08 AC/Heating Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia II	2004	1Z	08 AC/Heating Electronics	Measuring Blocks	
Oktavia II	2004	1Z	08 AC/Heating Electronics	Output Tests	
Oktavia II	2004	1Z	08 AC/Heating Electronics	Specia Functions	
Oktavia II	2004	1Z	09 Electronic Ctrl Electronics	Read Fault Codes	
Oktavia II	2004	1Z	09 Electronic Ctrl Electronics	Clear Fault Codes	
Oktavia II	2004	1Z	09 Electronic Ctrl Electronics	Measuring Blocks	
Oktavia II	2004	1Z	09 Electronic Ctrl Electronics	Output Tests	
Oktavia II	2004	1Z	09 Electronic Ctrl Electronics	Specia Functions	
Oktavia II	2004	1Z	11 Engine Electronics 2	Read Fault Codes	
Oktavia II	2004	1Z	11 Engine Electronics 2	Clear Fault Codes	
Oktavia II	2004	1Z	11 Engine Electronics 2	Measuring Blocks	
Oktavia II	2004	1Z	11 Engine Electronics 2	Output Tests	
Oktavia II	2004	1Z	11 Engine Electronics 2	Specia Functions	
Oktavia II	2004	1Z	15 Airbags	Read Fault Codes	
Oktavia II	2004	1Z	15 Airbags	Clear Fault Codes	
Oktavia II	2004	1Z	15 Airbags	Measuring Blocks	
Oktavia II	2004	1Z	15 Airbags	Output Tests	
Oktavia II	2004	1Z	15 Airbags	Specia Functions	
Oktavia II	2004	1Z	16 Steering Wheel Electronics	Read Fault Codes	
Oktavia II	2004	1Z	16 Steering Wheel Electronics	Clear Fault Codes	
Oktavia II	2004	1Z	16 Steering Wheel Electronics	Measuring Blocks	
Oktavia II	2004	1Z	16 Steering Wheel Electronics	Output Tests	
Oktavia II	2004	1Z	16 Steering Wheel Electronics	Specia Functions	
Oktavia II	2004	1Z	17 Instrument Cluster	Read Fault Codes	
Oktavia II	2004	1Z	17 Instrument Cluster	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia II	2004	1Z	17 Instrument Cluster	Measuring Blocks	
Oktavia II	2004	1Z	17 Instrument Cluster	Output Tests	
Oktavia II	2004	1Z	17 Instrument Cluster	Specia Functions	
Oktavia II	2004	1Z	19 Gateway Data Bus	Read Fault Codes	
Oktavia II	2004	1Z	19 Gateway Data Bus	Clear Fault Codes	
Oktavia II	2004	1Z	19 Gateway Data Bus	Measuring Blocks	
Oktavia II	2004	1Z	19 Gateway Data Bus	Output Tests	
Oktavia II	2004	1Z	19 Gateway Data Bus	Specia Functions	
Oktavia II	2004	1Z	25 Immobilizer	Read Fault Codes	
Oktavia II	2004	1Z	25 Immobilizer	Clear Fault Codes	
Oktavia II	2004	1Z	25 Immobilizer	Measuring Blocks	
Oktavia II	2004	1Z	25 Immobilizer	Output Tests	
Oktavia II	2004	1Z	25 Immobilizer	Specia Functions	
Oktavia II	2004	1Z	36 Driver`s Side Seat Adj.	Read Fault Codes	
Oktavia II	2004	1Z	36 Driver`s Side Seat Adj.	Clear Fault Codes	
Oktavia II	2004	1Z	36 Driver`s Side Seat Adj.	Measuring Blocks	
Oktavia II	2004	1Z	36 Driver`s Side Seat Adj.	Output Tests	
Oktavia II	2004	1Z	36 Driver`s Side Seat Adj.	Specia Functions	
Oktavia II	2004	1Z	37 Navigation	Read Fault Codes	
Oktavia II	2004	1Z	37 Navigation	Clear Fault Codes	
Oktavia II	2004	1Z	37 Navigation	Measuring Blocks	
Oktavia II	2004	1Z	37 Navigation	Output Tests	
Oktavia II	2004	1Z	37 Navigation	Specia Functions	
Oktavia II	2004	1Z	42 Driver-Door Elect.	Read Fault Codes	
Oktavia II	2004	1Z	42 Driver-Door Elect.	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia II	2004	1Z	42 Driver-Door Elect.	Measuring Blocks	
Oktavia II	2004	1Z	42 Driver-Door Elect.	Output Tests	
Oktavia II	2004	1Z	42 Driver-Door Elect.	Specia Functions	
Oktavia II	2004	1Z	44 Steering Assistance	Read Fault Codes	
Oktavia II	2004	1Z	44 Steering Assistance	Clear Fault Codes	
Oktavia II	2004	1Z	44 Steering Assistance	Measuring Blocks	
Oktavia II	2004	1Z	44 Steering Assistance	Output Tests	
Oktavia II	2004	1Z	44 Steering Assistance	Specia Functions	
Oktavia II	2004	1Z	46 Central Control Module	Read Fault Codes	
Oktavia II	2004	1Z	46 Central Control Module	Clear Fault Codes	
Oktavia II	2004	1Z	46 Central Control Module	Measuring Blocks	
Oktavia II	2004	1Z	46 Central Control Module	Output Tests	
Oktavia II	2004	1Z	46 Central Control Module	Specia Functions	
Oktavia II	2004	1Z	47 Soundsystem	Read Fault Codes	
Oktavia II	2004	1Z	47 Soundsystem	Clear Fault Codes	
Oktavia II	2004	1Z	47 Soundsystem	Measuring Blocks	
Oktavia II	2004	1Z	47 Soundsystem	Output Tests	
Oktavia II	2004	1Z	47 Soundsystem	Specia Functions	
Oktavia II	2004	1Z	51 Electric Drive	Read Fault Codes	
Oktavia II	2004	1Z	51 Electric Drive	Clear Fault Codes	
Oktavia II	2004	1Z	51 Electric Drive	Measuring Blocks	
Oktavia II	2004	1Z	51 Electric Drive	Output Tests	
Oktavia II	2004	1Z	51 Electric Drive	Specia Functions	
Oktavia II	2004	1Z	52 Passe.-Door Elect.	Read Fault Codes	
Oktavia II	2004	1Z	52 Passe.-Door Elect.	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia II	2004	1Z	52 Passe.-Door Elect.	Measuring Blocks	
Oktavia II	2004	1Z	52 Passe.-Door Elect.	Output Tests	
Oktavia II	2004	1Z	52 Passe.-Door Elect.	Specia Functions	
Oktavia II	2004	1Z	55 Headlight Range Control	Read Fault Codes	
Oktavia II	2004	1Z	55 Headlight Range Control	Clear Fault Codes	
Oktavia II	2004	1Z	55 Headlight Range Control	Measuring Blocks	
Oktavia II	2004	1Z	55 Headlight Range Control	Output Tests	
Oktavia II	2004	1Z	55 Headlight Range Control	Specia Functions	
Oktavia II	2004	1Z	56 Radio	Read Fault Codes	
Oktavia II	2004	1Z	56 Radio	Clear Fault Codes	
Oktavia II	2004	1Z	56 Radio	Measuring Blocks	
Oktavia II	2004	1Z	56 Radio	Output Tests	
Oktavia II	2004	1Z	56 Radio	Specia Functions	
Oktavia II	2004	1Z	62 LR-Door Electroni.	Read Fault Codes	
Oktavia II	2004	1Z	62 LR-Door Electroni.	Clear Fault Codes	
Oktavia II	2004	1Z	62 LR-Door Electroni.	Measuring Blocks	
Oktavia II	2004	1Z	62 LR-Door Electroni.	Output Tests	
Oktavia II	2004	1Z	62 LR-Door Electroni.	Specia Functions	
Oktavia II	2004	1Z	69 Trailer Function	Read Fault Codes	
Oktavia II	2004	1Z	69 Trailer Function	Clear Fault Codes	
Oktavia II	2004	1Z	69 Trailer Function	Measuring Blocks	
Oktavia II	2004	1Z	69 Trailer Function	Output Tests	
Oktavia II	2004	1Z	69 Trailer Function	Specia Functions	
Oktavia II	2004	1Z	72 RR-Door Electroni.	Read Fault Codes	
Oktavia II	2004	1Z	72 RR-Door Electroni.	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia II	2004	1Z	72 RR-Door Electroni.	Measuring Blocks	
Oktavia II	2004	1Z	72 RR-Door Electroni.	Output Tests	
Oktavia II	2004	1Z	72 RR-Door Electroni.	Specia Functions	
Oktavia II	2004	1Z	76 Parking Aid	Read Fault Codes	
Oktavia II	2004	1Z	76 Parking Aid	Clear Fault Codes	
Oktavia II	2004	1Z	76 Parking Aid	Measuring Blocks	
Oktavia II	2004	1Z	76 Parking Aid	Output Tests	
Oktavia II	2004	1Z	76 Parking Aid	Specia Functions	
Oktavia II	2004	1Z	77 Telephone	Read Fault Codes	
Oktavia II	2004	1Z	77 Telephone	Clear Fault Codes	
Oktavia II	2004	1Z	77 Telephone	Measuring Blocks	
Oktavia II	2004	1Z	77 Telephone	Output Tests	
Oktavia II	2004	1Z	77 Telephone	Specia Functions	
Oktavia II	2004	1Z	7D Auxiliary Heater	Read Fault Codes	
Oktavia II	2004	1Z	7D Auxiliary Heater	Clear Fault Codes	
Oktavia II	2004	1Z	7D Auxiliary Heater	Measuring Blocks	
Oktavia II	2004	1Z	7D Auxiliary Heater	Output Tests	
Oktavia II	2004	1Z	7D Auxiliary Heater	Specia Functions	
Oktavia II	2004	1Z	8C Hybrid Battery	Read Fault Codes	
Oktavia II	2004	1Z	8C Hybrid Battery	Clear Fault Codes	
Oktavia II	2004	1Z	8C Hybrid Battery	Measuring Blocks	
Oktavia II	2004	1Z	8C Hybrid Battery	Output Tests	
Oktavia II	2004	1Z	8C Hybrid Battery	Specia Functions	
Oktavia II	2006-2008	1Z	01 Engine Electronics	Read Fault Codes	
Oktavia II	2006-2008	1Z	01 Engine Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia II	2006-2008	1Z	01 Engine Electronics	Measuring Blocks	
Oktavia II	2006-2008	1Z	01 Engine Electronics	Output Tests	
Oktavia II	2006-2008	1Z	01 Engine Electronics	Specia Functions	
Oktavia II	2006-2008	1Z	02 Transmission Electronics	Read Fault Codes	
Oktavia II	2006-2008	1Z	02 Transmission Electronics	Clear Fault Codes	
Oktavia II	2006-2008	1Z	02 Transmission Electronics	Measuring Blocks	
Oktavia II	2006-2008	1Z	02 Transmission Electronics	Output Tests	
Oktavia II	2006-2008	1Z	02 Transmission Electronics	Specia Functions	
Oktavia II	2006-2008	1Z	03 Brake Electronics	Read Fault Codes	
Oktavia II	2006-2008	1Z	03 Brake Electronics	Clear Fault Codes	
Oktavia II	2006-2008	1Z	03 Brake Electronics	Measuring Blocks	
Oktavia II	2006-2008	1Z	03 Brake Electronics	Output Tests	
Oktavia II	2006-2008	1Z	03 Brake Electronics	Specia Functions	
Oktavia II	2006-2008	1Z	08 AC/Heating Electronics	Read Fault Codes	
Oktavia II	2006-2008	1Z	08 AC/Heating Electronics	Clear Fault Codes	
Oktavia II	2006-2008	1Z	08 AC/Heating Electronics	Measuring Blocks	
Oktavia II	2006-2008	1Z	08 AC/Heating Electronics	Output Tests	
Oktavia II	2006-2008	1Z	08 AC/Heating Electronics	Specia Functions	
Oktavia II	2006-2008	1Z	09 Electronic Ctrl Electronics	Read Fault Codes	
Oktavia II	2006-2008	1Z	09 Electronic Ctrl Electronics	Clear Fault Codes	
Oktavia II	2006-2008	1Z	09 Electronic Ctrl Electronics	Measuring Blocks	
Oktavia II	2006-2008	1Z	09 Electronic Ctrl Electronics	Output Tests	
Oktavia II	2006-2008	1Z	09 Electronic Ctrl Electronics	Specia Functions	
Oktavia II	2006-2008	1Z	11 Engine Electronics 2	Read Fault Codes	
Oktavia II	2006-2008	1Z	11 Engine Electronics 2	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia II	2006-2008	1Z	11 Engine Electronics 2	Measuring Blocks	
Oktavia II	2006-2008	1Z	11 Engine Electronics 2	Output Tests	
Oktavia II	2006-2008	1Z	11 Engine Electronics 2	Specia Functions	
Oktavia II	2006-2008	1Z	15 Airbags	Read Fault Codes	
Oktavia II	2006-2008	1Z	15 Airbags	Clear Fault Codes	
Oktavia II	2006-2008	1Z	15 Airbags	Measuring Blocks	
Oktavia II	2006-2008	1Z	15 Airbags	Output Tests	
Oktavia II	2006-2008	1Z	15 Airbags	Specia Functions	
Oktavia II	2006-2008	1Z	16 Steering Wheel Electronics	Read Fault Codes	
Oktavia II	2006-2008	1Z	16 Steering Wheel Electronics	Clear Fault Codes	
Oktavia II	2006-2008	1Z	16 Steering Wheel Electronics	Measuring Blocks	
Oktavia II	2006-2008	1Z	16 Steering Wheel Electronics	Output Tests	
Oktavia II	2006-2008	1Z	16 Steering Wheel Electronics	Specia Functions	
Oktavia II	2006-2008	1Z	17 Instrument Cluster	Read Fault Codes	
Oktavia II	2006-2008	1Z	17 Instrument Cluster	Clear Fault Codes	
Oktavia II	2006-2008	1Z	17 Instrument Cluster	Measuring Blocks	
Oktavia II	2006-2008	1Z	17 Instrument Cluster	Output Tests	
Oktavia II	2006-2008	1Z	17 Instrument Cluster	Specia Functions	
Oktavia II	2006-2008	1Z	19 Gateway Data Bus	Read Fault Codes	
Oktavia II	2006-2008	1Z	19 Gateway Data Bus	Clear Fault Codes	
Oktavia II	2006-2008	1Z	19 Gateway Data Bus	Measuring Blocks	
Oktavia II	2006-2008	1Z	19 Gateway Data Bus	Output Tests	
Oktavia II	2006-2008	1Z	19 Gateway Data Bus	Specia Functions	
Oktavia II	2006-2008	1Z	22 4WD Electronics	Read Fault Codes	
Oktavia II	2006-2008	1Z	22 4WD Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia II	2006-2008	1Z	22 4WD Electronics	Measuring Blocks	
Oktavia II	2006-2008	1Z	22 4WD Electronics	Output Tests	
Oktavia II	2006-2008	1Z	22 4WD Electronics	Specia Functions	
Oktavia II	2006-2008	1Z	25 Immobilizer	Read Fault Codes	
Oktavia II	2006-2008	1Z	25 Immobilizer	Clear Fault Codes	
Oktavia II	2006-2008	1Z	25 Immobilizer	Measuring Blocks	
Oktavia II	2006-2008	1Z	25 Immobilizer	Output Tests	
Oktavia II	2006-2008	1Z	25 Immobilizer	Specia Functions	
Oktavia II	2006-2008	1Z	36 Driver`s Side Seat Adj.	Read Fault Codes	
Oktavia II	2006-2008	1Z	36 Driver`s Side Seat Adj.	Clear Fault Codes	
Oktavia II	2006-2008	1Z	36 Driver`s Side Seat Adj.	Measuring Blocks	
Oktavia II	2006-2008	1Z	36 Driver`s Side Seat Adj.	Output Tests	
Oktavia II	2006-2008	1Z	36 Driver`s Side Seat Adj.	Specia Functions	
Oktavia II	2006-2008	1Z	37 Navigation	Read Fault Codes	
Oktavia II	2006-2008	1Z	37 Navigation	Clear Fault Codes	
Oktavia II	2006-2008	1Z	37 Navigation	Measuring Blocks	
Oktavia II	2006-2008	1Z	37 Navigation	Output Tests	
Oktavia II	2006-2008	1Z	37 Navigation	Specia Functions	
Oktavia II	2006-2008	1Z	42 Driver-Door Elect.	Read Fault Codes	
Oktavia II	2006-2008	1Z	42 Driver-Door Elect.	Clear Fault Codes	
Oktavia II	2006-2008	1Z	42 Driver-Door Elect.	Measuring Blocks	
Oktavia II	2006-2008	1Z	42 Driver-Door Elect.	Output Tests	
Oktavia II	2006-2008	1Z	42 Driver-Door Elect.	Specia Functions	
Oktavia II	2006-2008	1Z	44 Steering Assistance	Read Fault Codes	
Oktavia II	2006-2008	1Z	44 Steering Assistance	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia II	2006-2008	1Z	44 Steering Assistance	Measuring Blocks	
Oktavia II	2006-2008	1Z	44 Steering Assistance	Output Tests	
Oktavia II	2006-2008	1Z	44 Steering Assistance	Specia Functions	
Oktavia II	2006-2008	1Z	46 Central Control Module	Read Fault Codes	
Oktavia II	2006-2008	1Z	46 Central Control Module	Clear Fault Codes	
Oktavia II	2006-2008	1Z	46 Central Control Module	Measuring Blocks	
Oktavia II	2006-2008	1Z	46 Central Control Module	Output Tests	
Oktavia II	2006-2008	1Z	46 Central Control Module	Specia Functions	
Oktavia II	2006-2008	1Z	47 Soundsystem	Read Fault Codes	
Oktavia II	2006-2008	1Z	47 Soundsystem	Clear Fault Codes	
Oktavia II	2006-2008	1Z	47 Soundsystem	Measuring Blocks	
Oktavia II	2006-2008	1Z	47 Soundsystem	Output Tests	
Oktavia II	2006-2008	1Z	47 Soundsystem	Specia Functions	
Oktavia II	2006-2008	1Z	51 Electric Drive	Read Fault Codes	
Oktavia II	2006-2008	1Z	51 Electric Drive	Clear Fault Codes	
Oktavia II	2006-2008	1Z	51 Electric Drive	Measuring Blocks	
Oktavia II	2006-2008	1Z	51 Electric Drive	Output Tests	
Oktavia II	2006-2008	1Z	51 Electric Drive	Specia Functions	
Oktavia II	2006-2008	1Z	52 Passe.-Door Elect.	Read Fault Codes	
Oktavia II	2006-2008	1Z	52 Passe.-Door Elect.	Clear Fault Codes	
Oktavia II	2006-2008	1Z	52 Passe.-Door Elect.	Measuring Blocks	
Oktavia II	2006-2008	1Z	52 Passe.-Door Elect.	Output Tests	
Oktavia II	2006-2008	1Z	52 Passe.-Door Elect.	Specia Functions	
Oktavia II	2006-2008	1Z	55 Headlight Range Control	Read Fault Codes	
Oktavia II	2006-2008	1Z	55 Headlight Range Control	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia II	2006-2008	1Z	55 Headlight Range Control	Measuring Blocks	
Oktavia II	2006-2008	1Z	55 Headlight Range Control	Output Tests	
Oktavia II	2006-2008	1Z	55 Headlight Range Control	Specia Functions	
Oktavia II	2006-2008	1Z	56 Radio	Read Fault Codes	
Oktavia II	2006-2008	1Z	56 Radio	Clear Fault Codes	
Oktavia II	2006-2008	1Z	56 Radio	Measuring Blocks	
Oktavia II	2006-2008	1Z	56 Radio	Output Tests	
Oktavia II	2006-2008	1Z	56 Radio	Specia Functions	
Oktavia II	2006-2008	1Z	62 LR-Door Electroni.	Read Fault Codes	
Oktavia II	2006-2008	1Z	62 LR-Door Electroni.	Clear Fault Codes	
Oktavia II	2006-2008	1Z	62 LR-Door Electroni.	Measuring Blocks	
Oktavia II	2006-2008	1Z	62 LR-Door Electroni.	Output Tests	
Oktavia II	2006-2008	1Z	62 LR-Door Electroni.	Specia Functions	
Oktavia II	2006-2008	1Z	69 Trailer Function	Read Fault Codes	
Oktavia II	2006-2008	1Z	69 Trailer Function	Clear Fault Codes	
Oktavia II	2006-2008	1Z	69 Trailer Function	Measuring Blocks	
Oktavia II	2006-2008	1Z	69 Trailer Function	Output Tests	
Oktavia II	2006-2008	1Z	69 Trailer Function	Specia Functions	
Oktavia II	2006-2008	1Z	72 RR-Door Electroni.	Read Fault Codes	
Oktavia II	2006-2008	1Z	72 RR-Door Electroni.	Clear Fault Codes	
Oktavia II	2006-2008	1Z	72 RR-Door Electroni.	Measuring Blocks	
Oktavia II	2006-2008	1Z	72 RR-Door Electroni.	Output Tests	
Oktavia II	2006-2008	1Z	72 RR-Door Electroni.	Specia Functions	
Oktavia II	2006-2008	1Z	76 Parking Aid	Read Fault Codes	
Oktavia II	2006-2008	1Z	76 Parking Aid	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Oktavia II	2006-2008	1Z	76 Parking Aid	Measuring Blocks	
Oktavia II	2006-2008	1Z	76 Parking Aid	Output Tests	
Oktavia II	2006-2008	1Z	76 Parking Aid	Specia Functions	
Oktavia II	2006-2008	1Z	77 Telephone	Read Fault Codes	
Oktavia II	2006-2008	1Z	77 Telephone	Clear Fault Codes	
Oktavia II	2006-2008	1Z	77 Telephone	Measuring Blocks	
Oktavia II	2006-2008	1Z	77 Telephone	Output Tests	
Oktavia II	2006-2008	1Z	77 Telephone	Specia Functions	
Oktavia II	2006-2008	1Z	7D Auxiliary Heater	Read Fault Codes	
Oktavia II	2006-2008	1Z	7D Auxiliary Heater	Clear Fault Codes	
Oktavia II	2006-2008	1Z	7D Auxiliary Heater	Measuring Blocks	
Oktavia II	2006-2008	1Z	7D Auxiliary Heater	Output Tests	
Oktavia II	2006-2008	1Z	7D Auxiliary Heater	Specia Functions	
Oktavia II	2006-2008	1Z	8C Hybrid Battery	Read Fault Codes	
Oktavia II	2006-2008	1Z	8C Hybrid Battery	Clear Fault Codes	
Oktavia II	2006-2008	1Z	8C Hybrid Battery	Measuring Blocks	
Oktavia II	2006-2008	1Z	8C Hybrid Battery	Output Tests	
Oktavia II	2006-2008	1Z	8C Hybrid Battery	Specia Functions	
Rapid	2010-2018	NA	01 Engine Electronics	Read Fault Codes	
Rapid	2010-2018	NA	01 Engine Electronics	Clear Fault Codes	
Rapid	2010-2018	NA	01 Engine Electronics	Measuring Blocks	
Rapid	2010-2018	NA	01 Engine Electronics	Output Tests	
Rapid	2010-2018	NA	01 Engine Electronics	Specia Functions	
Rapid	2010-2018	NA	02 Transmission Electronics	Read Fault Codes	
Rapid	2010-2018	NA	02 Transmission Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Rapid	2010-2018	NA	02 Transmission Electronics	Measuring Blocks	
Rapid	2010-2018	NA	02 Transmission Electronics	Output Tests	
Rapid	2010-2018	NA	02 Transmission Electronics	Specia Functions	
Rapid	2010-2018	NA	03 Brake Electronics	Read Fault Codes	
Rapid	2010-2018	NA	03 Brake Electronics	Clear Fault Codes	
Rapid	2010-2018	NA	03 Brake Electronics	Measuring Blocks	
Rapid	2010-2018	NA	03 Brake Electronics	Output Tests	
Rapid	2010-2018	NA	03 Brake Electronics	Specia Functions	
Rapid	2010-2018	NA	04 Steering Position	Read Fault Codes	
Rapid	2010-2018	NA	04 Steering Position	Clear Fault Codes	
Rapid	2010-2018	NA	04 Steering Position	Measuring Blocks	
Rapid	2010-2018	NA	04 Steering Position	Output Tests	
Rapid	2010-2018	NA	04 Steering Position	Specia Functions	
Rapid	2010-2018	NA	08 AC/Heating Electronics	Read Fault Codes	
Rapid	2010-2018	NA	08 AC/Heating Electronics	Clear Fault Codes	
Rapid	2010-2018	NA	08 AC/Heating Electronics	Measuring Blocks	
Rapid	2010-2018	NA	08 AC/Heating Electronics	Output Tests	
Rapid	2010-2018	NA	08 AC/Heating Electronics	Specia Functions	
Rapid	2010-2018	NA	09 Electronic Ctrl Electronics	Read Fault Codes	
Rapid	2010-2018	NA	09 Electronic Ctrl Electronics	Clear Fault Codes	
Rapid	2010-2018	NA	09 Electronic Ctrl Electronics	Measuring Blocks	
Rapid	2010-2018	NA	09 Electronic Ctrl Electronics	Output Tests	
Rapid	2010-2018	NA	09 Electronic Ctrl Electronics	Specia Functions	
Rapid	2010-2018	NA	10 Parking Assist System 2	Read Fault Codes	
Rapid	2010-2018	NA	10 Parking Assist System 2	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Rapid	2010-2018	NA	10 Parking Assist System 2	Measuring Blocks	
Rapid	2010-2018	NA	10 Parking Assist System 2	Output Tests	
Rapid	2010-2018	NA	10 Parking Assist System 2	Specia Functions	
Rapid	2010-2018	NA	15 Airbags	Read Fault Codes	
Rapid	2010-2018	NA	15 Airbags	Clear Fault Codes	
Rapid	2010-2018	NA	15 Airbags	Measuring Blocks	
Rapid	2010-2018	NA	15 Airbags	Output Tests	
Rapid	2010-2018	NA	15 Airbags	Specia Functions	
Rapid	2010-2018	NA	16 Steering Wheel Electronics	Read Fault Codes	
Rapid	2010-2018	NA	16 Steering Wheel Electronics	Clear Fault Codes	
Rapid	2010-2018	NA	16 Steering Wheel Electronics	Measuring Blocks	
Rapid	2010-2018	NA	16 Steering Wheel Electronics	Output Tests	
Rapid	2010-2018	NA	16 Steering Wheel Electronics	Specia Functions	
Rapid	2010-2018	NA	17 Instrument Cluster	Read Fault Codes	
Rapid	2010-2018	NA	17 Instrument Cluster	Clear Fault Codes	
Rapid	2010-2018	NA	17 Instrument Cluster	Measuring Blocks	
Rapid	2010-2018	NA	17 Instrument Cluster	Output Tests	
Rapid	2010-2018	NA	17 Instrument Cluster	Specia Functions	
Rapid	2010-2018	NA	19 Gateway Data Bus	Read Fault Codes	
Rapid	2010-2018	NA	19 Gateway Data Bus	Clear Fault Codes	
Rapid	2010-2018	NA	19 Gateway Data Bus	Measuring Blocks	
Rapid	2010-2018	NA	19 Gateway Data Bus	Output Tests	
Rapid	2010-2018	NA	19 Gateway Data Bus	Specia Functions	
Rapid	2010-2018	NA	25 Immobilizer	Read Fault Codes	
Rapid	2010-2018	NA	25 Immobilizer	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Rapid	2010-2018	NA	25 Immobilizer	Measuring Blocks	
Rapid	2010-2018	NA	25 Immobilizer	Output Tests	
Rapid	2010-2018	NA	25 Immobilizer	Specia Functions	
Rapid	2010-2018	NA	2E Media Player Position 3	Read Fault Codes	
Rapid	2010-2018	NA	2E Media Player Position 3	Clear Fault Codes	
Rapid	2010-2018	NA	2E Media Player Position 3	Measuring Blocks	
Rapid	2010-2018	NA	2E Media Player Position 3	Output Tests	
Rapid	2010-2018	NA	2E Media Player Position 3	Specia Functions	
Rapid	2010-2018	NA	37 Navigation	Read Fault Codes	
Rapid	2010-2018	NA	37 Navigation	Clear Fault Codes	
Rapid	2010-2018	NA	37 Navigation	Measuring Blocks	
Rapid	2010-2018	NA	37 Navigation	Output Tests	
Rapid	2010-2018	NA	37 Navigation	Specia Functions	
Rapid	2010-2018	NA	44 Steering Assistance	Read Fault Codes	
Rapid	2010-2018	NA	44 Steering Assistance	Clear Fault Codes	
Rapid	2010-2018	NA	44 Steering Assistance	Measuring Blocks	
Rapid	2010-2018	NA	44 Steering Assistance	Output Tests	
Rapid	2010-2018	NA	44 Steering Assistance	Specia Functions	
Rapid	2010-2018	NA	46 Central Control Module	Read Fault Codes	
Rapid	2010-2018	NA	46 Central Control Module	Clear Fault Codes	
Rapid	2010-2018	NA	46 Central Control Module	Measuring Blocks	
Rapid	2010-2018	NA	46 Central Control Module	Output Tests	
Rapid	2010-2018	NA	46 Central Control Module	Specia Functions	
Rapid	2010-2018	NA	55 Headlight Range Control	Read Fault Codes	
Rapid	2010-2018	NA	55 Headlight Range Control	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Rapid	2010-2018	NA	55 Headlight Range Control	Measuring Blocks	
Rapid	2010-2018	NA	55 Headlight Range Control	Output Tests	
Rapid	2010-2018	NA	55 Headlight Range Control	Specia Functions	
Rapid	2010-2018	NA	56 Radio	Read Fault Codes	
Rapid	2010-2018	NA	56 Radio	Clear Fault Codes	
Rapid	2010-2018	NA	56 Radio	Measuring Blocks	
Rapid	2010-2018	NA	56 Radio	Output Tests	
Rapid	2010-2018	NA	56 Radio	Specia Functions	
Rapid	2010-2018	NA	61 Battery Control	Read Fault Codes	
Rapid	2010-2018	NA	61 Battery Control	Clear Fault Codes	
Rapid	2010-2018	NA	61 Battery Control	Measuring Blocks	
Rapid	2010-2018	NA	61 Battery Control	Output Tests	
Rapid	2010-2018	NA	61 Battery Control	Specia Functions	
Rapid	2010-2018	NA	69 Trailer Function	Read Fault Codes	
Rapid	2010-2018	NA	69 Trailer Function	Clear Fault Codes	
Rapid	2010-2018	NA	69 Trailer Function	Measuring Blocks	
Rapid	2010-2018	NA	69 Trailer Function	Output Tests	
Rapid	2010-2018	NA	69 Trailer Function	Specia Functions	
Rapid	2010-2018	NA	76 Parking Aid	Read Fault Codes	
Rapid	2010-2018	NA	76 Parking Aid	Clear Fault Codes	
Rapid	2010-2018	NA	76 Parking Aid	Measuring Blocks	
Rapid	2010-2018	NA	76 Parking Aid	Output Tests	
Rapid	2010-2018	NA	76 Parking Aid	Specia Functions	
Rapid	2010-2018	NA	77 Telephone	Read Fault Codes	
Rapid	2010-2018	NA	77 Telephone	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Rapid	2010-2018	NA	77 Telephone	Measuring Blocks	
Rapid	2010-2018	NA	77 Telephone	Output Tests	
Rapid	2010-2018	NA	77 Telephone	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	01 Engine Electronics	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	01 Engine Electronics	Clear Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	01 Engine Electronics	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	01 Engine Electronics	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	01 Engine Electronics	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	02 Transmission Electronics	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	02 Transmission Electronics	Clear Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	02 Transmission Electronics	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	02 Transmission Electronics	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	02 Transmission Electronics	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	03 Brake Electronics	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	03 Brake Electronics	Clear Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	03 Brake Electronics	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	03 Brake Electronics	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	03 Brake Electronics	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	04 Steering Position	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	04 Steering Position	Clear Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	04 Steering Position	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	04 Steering Position	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	04 Steering Position	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	08 AC/Heating Electronics	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	08 AC/Heating Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Rapid EU (A-Entry)	2013-2018	NH	08 AC/Heating Electronics	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	08 AC/Heating Electronics	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	08 AC/Heating Electronics	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	09 Electronic Ctrl Electronics	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	09 Electronic Ctrl Electronics	Clear Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	09 Electronic Ctrl Electronics	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	09 Electronic Ctrl Electronics	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	09 Electronic Ctrl Electronics	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	10 Parking Assist System 2	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	10 Parking Assist System 2	Clear Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	10 Parking Assist System 2	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	10 Parking Assist System 2	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	10 Parking Assist System 2	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	13 Distance Control	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	13 Distance Control	Clear Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	13 Distance Control	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	13 Distance Control	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	13 Distance Control	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	15 Airbags	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	15 Airbags	Clear Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	15 Airbags	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	15 Airbags	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	15 Airbags	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	17 Instrument Cluster	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	17 Instrument Cluster	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Rapid EU (A-Entry)	2013-2018	NH	17 Instrument Cluster	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	17 Instrument Cluster	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	17 Instrument Cluster	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	19 Gateway Data Bus	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	19 Gateway Data Bus	Clear Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	19 Gateway Data Bus	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	19 Gateway Data Bus	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	19 Gateway Data Bus	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	25 Immobilizer	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	25 Immobilizer	Clear Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	25 Immobilizer	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	25 Immobilizer	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	25 Immobilizer	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	2B Steer Col Lock	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	2B Steer Col Lock	Clear Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	2B Steer Col Lock	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	2B Steer Col Lock	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	2B Steer Col Lock	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	2E Media Player Position 3	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	2E Media Player Position 3	Clear Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	2E Media Player Position 3	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	2E Media Player Position 3	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	2E Media Player Position 3	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	37 Navigation	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	37 Navigation	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Rapid EU (A-Entry)	2013-2018	NH	37 Navigation	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	37 Navigation	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	37 Navigation	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	44 Steering Assistance	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	44 Steering Assistance	Clear Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	44 Steering Assistance	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	44 Steering Assistance	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	44 Steering Assistance	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	55 Headlight Range Control	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	55 Headlight Range Control	Clear Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	55 Headlight Range Control	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	55 Headlight Range Control	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	55 Headlight Range Control	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	56 Radio	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	56 Radio	Clear Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	56 Radio	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	56 Radio	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	56 Radio	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	5F Information Electronic Equipment 1	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	5F Information Electronic Equipment 1	Clear Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	5F Information Electronic Equipment 1	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	5F Information Electronic Equipment 1	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	5F Information Electronic Equipment 1	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	61 Battery Control	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	61 Battery Control	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Rapid EU (A-Entry)	2013-2018	NH	61 Battery Control	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	61 Battery Control	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	61 Battery Control	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	69 Trailer Function	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	69 Trailer Function	Clear Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	69 Trailer Function	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	69 Trailer Function	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	69 Trailer Function	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	76 Parking Aid	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	76 Parking Aid	Clear Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	76 Parking Aid	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	76 Parking Aid	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	76 Parking Aid	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	77 Telephone	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	77 Telephone	Clear Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	77 Telephone	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	77 Telephone	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	77 Telephone	Specia Functions	
Rapid EU (A-Entry)	2013-2018	NH	B7 Access Start Interf	Read Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	B7 Access Start Interf	Clear Fault Codes	
Rapid EU (A-Entry)	2013-2018	NH	B7 Access Start Interf	Measuring Blocks	
Rapid EU (A-Entry)	2013-2018	NH	B7 Access Start Interf	Output Tests	
Rapid EU (A-Entry)	2013-2018	NH	B7 Access Start Interf	Specia Functions	
Roomster	2006	5J	01 Engine Electronics	Read Fault Codes	
Roomster	2006	5J	01 Engine Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Roomster	2006	5J	01 Engine Electronics	Measuring Blocks	
Roomster	2006	5J	01 Engine Electronics	Output Tests	
Roomster	2006	5J	01 Engine Electronics	Specia Functions	
Roomster	2006	5J	02 Transmission Electronics	Read Fault Codes	
Roomster	2006	5J	02 Transmission Electronics	Clear Fault Codes	
Roomster	2006	5J	02 Transmission Electronics	Measuring Blocks	
Roomster	2006	5J	02 Transmission Electronics	Output Tests	
Roomster	2006	5J	02 Transmission Electronics	Specia Functions	
Roomster	2006	5J	03 Brake Electronics	Read Fault Codes	
Roomster	2006	5J	03 Brake Electronics	Clear Fault Codes	
Roomster	2006	5J	03 Brake Electronics	Measuring Blocks	
Roomster	2006	5J	03 Brake Electronics	Output Tests	
Roomster	2006	5J	03 Brake Electronics	Specia Functions	
Roomster	2006	5J	08 AC/Heating Electronics	Read Fault Codes	
Roomster	2006	5J	08 AC/Heating Electronics	Clear Fault Codes	
Roomster	2006	5J	08 AC/Heating Electronics	Measuring Blocks	
Roomster	2006	5J	08 AC/Heating Electronics	Output Tests	
Roomster	2006	5J	08 AC/Heating Electronics	Specia Functions	
Roomster	2006	5J	09 Electronic Ctrl Electronics	Read Fault Codes	
Roomster	2006	5J	09 Electronic Ctrl Electronics	Clear Fault Codes	
Roomster	2006	5J	09 Electronic Ctrl Electronics	Measuring Blocks	
Roomster	2006	5J	09 Electronic Ctrl Electronics	Output Tests	
Roomster	2006	5J	09 Electronic Ctrl Electronics	Specia Functions	
Roomster	2006	5J	11 Engine Electronics 2	Read Fault Codes	
Roomster	2006	5J	11 Engine Electronics 2	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Roomster	2006	5J	11 Engine Electronics 2	Measuring Blocks	
Roomster	2006	5J	11 Engine Electronics 2	Output Tests	
Roomster	2006	5J	11 Engine Electronics 2	Specia Functions	
Roomster	2006	5J	15 Airbags	Read Fault Codes	
Roomster	2006	5J	15 Airbags	Clear Fault Codes	
Roomster	2006	5J	15 Airbags	Measuring Blocks	
Roomster	2006	5J	15 Airbags	Output Tests	
Roomster	2006	5J	15 Airbags	Specia Functions	
Roomster	2006	5J	16 Steering Wheel Electronics	Read Fault Codes	
Roomster	2006	5J	16 Steering Wheel Electronics	Clear Fault Codes	
Roomster	2006	5J	16 Steering Wheel Electronics	Measuring Blocks	
Roomster	2006	5J	16 Steering Wheel Electronics	Output Tests	
Roomster	2006	5J	16 Steering Wheel Electronics	Specia Functions	
Roomster	2006	5J	17 Instrument Cluster	Read Fault Codes	
Roomster	2006	5J	17 Instrument Cluster	Clear Fault Codes	
Roomster	2006	5J	17 Instrument Cluster	Measuring Blocks	
Roomster	2006	5J	17 Instrument Cluster	Output Tests	
Roomster	2006	5J	17 Instrument Cluster	Specia Functions	
Roomster	2006	5J	19 Gateway Data Bus	Read Fault Codes	
Roomster	2006	5J	19 Gateway Data Bus	Clear Fault Codes	
Roomster	2006	5J	19 Gateway Data Bus	Measuring Blocks	
Roomster	2006	5J	19 Gateway Data Bus	Output Tests	
Roomster	2006	5J	19 Gateway Data Bus	Specia Functions	
Roomster	2006	5J	25 Immobilizer	Read Fault Codes	
Roomster	2006	5J	25 Immobilizer	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Roomster	2006	5J	25 Immobilizer	Measuring Blocks	
Roomster	2006	5J	25 Immobilizer	Output Tests	
Roomster	2006	5J	25 Immobilizer	Specia Functions	
Roomster	2006	5J	37 Navigation	Read Fault Codes	
Roomster	2006	5J	37 Navigation	Clear Fault Codes	
Roomster	2006	5J	37 Navigation	Measuring Blocks	
Roomster	2006	5J	37 Navigation	Output Tests	
Roomster	2006	5J	37 Navigation	Specia Functions	
Roomster	2006	5J	44 Steering Assistance	Read Fault Codes	
Roomster	2006	5J	44 Steering Assistance	Clear Fault Codes	
Roomster	2006	5J	44 Steering Assistance	Measuring Blocks	
Roomster	2006	5J	44 Steering Assistance	Output Tests	
Roomster	2006	5J	44 Steering Assistance	Specia Functions	
Roomster	2006	5J	46 Central Control Module	Read Fault Codes	
Roomster	2006	5J	46 Central Control Module	Clear Fault Codes	
Roomster	2006	5J	46 Central Control Module	Measuring Blocks	
Roomster	2006	5J	46 Central Control Module	Output Tests	
Roomster	2006	5J	46 Central Control Module	Specia Functions	
Roomster	2006	5J	51 Electric Drive	Read Fault Codes	
Roomster	2006	5J	51 Electric Drive	Clear Fault Codes	
Roomster	2006	5J	51 Electric Drive	Measuring Blocks	
Roomster	2006	5J	51 Electric Drive	Output Tests	
Roomster	2006	5J	51 Electric Drive	Specia Functions	
Roomster	2006	5J	55 Headlight Range Control	Read Fault Codes	
Roomster	2006	5J	55 Headlight Range Control	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Roomster	2006	5J	55 Headlight Range Control	Measuring Blocks	
Roomster	2006	5J	55 Headlight Range Control	Output Tests	
Roomster	2006	5J	55 Headlight Range Control	Specia Functions	
Roomster	2006	5J	56 Radio	Read Fault Codes	
Roomster	2006	5J	56 Radio	Clear Fault Codes	
Roomster	2006	5J	56 Radio	Measuring Blocks	
Roomster	2006	5J	56 Radio	Output Tests	
Roomster	2006	5J	56 Radio	Specia Functions	
Roomster	2006	5J	76 Parking Aid	Read Fault Codes	
Roomster	2006	5J	76 Parking Aid	Clear Fault Codes	
Roomster	2006	5J	76 Parking Aid	Measuring Blocks	
Roomster	2006	5J	76 Parking Aid	Output Tests	
Roomster	2006	5J	76 Parking Aid	Specia Functions	
Roomster	2006	5J	77 Telephone	Read Fault Codes	
Roomster	2006	5J	77 Telephone	Clear Fault Codes	
Roomster	2006	5J	77 Telephone	Measuring Blocks	
Roomster	2006	5J	77 Telephone	Output Tests	
Roomster	2006	5J	77 Telephone	Specia Functions	
Roomster	2006	5J	8C Hybrid Battery	Read Fault Codes	
Roomster	2006	5J	8C Hybrid Battery	Clear Fault Codes	
Roomster	2006	5J	8C Hybrid Battery	Measuring Blocks	
Roomster	2006	5J	8C Hybrid Battery	Output Tests	
Roomster	2006	5J	8C Hybrid Battery	Specia Functions	
Roomster	2007-2010	5J	01 Engine Electronics	Read Fault Codes	
Roomster	2007-2010	5J	01 Engine Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Roomster	2007-2010	5J	01 Engine Electronics	Measuring Blocks	
Roomster	2007-2010	5J	01 Engine Electronics	Output Tests	
Roomster	2007-2010	5J	01 Engine Electronics	Specia Functions	
Roomster	2007-2010	5J	02 Transmission Electronics	Read Fault Codes	
Roomster	2007-2010	5J	02 Transmission Electronics	Clear Fault Codes	
Roomster	2007-2010	5J	02 Transmission Electronics	Measuring Blocks	
Roomster	2007-2010	5J	02 Transmission Electronics	Output Tests	
Roomster	2007-2010	5J	02 Transmission Electronics	Specia Functions	
Roomster	2007-2010	5J	03 Brake Electronics	Read Fault Codes	
Roomster	2007-2010	5J	03 Brake Electronics	Clear Fault Codes	
Roomster	2007-2010	5J	03 Brake Electronics	Measuring Blocks	
Roomster	2007-2010	5J	03 Brake Electronics	Output Tests	
Roomster	2007-2010	5J	03 Brake Electronics	Specia Functions	
Roomster	2007-2010	5J	08 AC/Heating Electronics	Read Fault Codes	
Roomster	2007-2010	5J	08 AC/Heating Electronics	Clear Fault Codes	
Roomster	2007-2010	5J	08 AC/Heating Electronics	Measuring Blocks	
Roomster	2007-2010	5J	08 AC/Heating Electronics	Output Tests	
Roomster	2007-2010	5J	08 AC/Heating Electronics	Specia Functions	
Roomster	2007-2010	5J	09 Electronic Ctrl Electronics	Read Fault Codes	
Roomster	2007-2010	5J	09 Electronic Ctrl Electronics	Clear Fault Codes	
Roomster	2007-2010	5J	09 Electronic Ctrl Electronics	Measuring Blocks	
Roomster	2007-2010	5J	09 Electronic Ctrl Electronics	Output Tests	
Roomster	2007-2010	5J	09 Electronic Ctrl Electronics	Specia Functions	
Roomster	2007-2010	5J	11 Engine Electronics 2	Read Fault Codes	
Roomster	2007-2010	5J	11 Engine Electronics 2	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Roomster	2007-2010	5J	11 Engine Electronics 2	Measuring Blocks	
Roomster	2007-2010	5J	11 Engine Electronics 2	Output Tests	
Roomster	2007-2010	5J	11 Engine Electronics 2	Specia Functions	
Roomster	2007-2010	5J	15 Airbags	Read Fault Codes	
Roomster	2007-2010	5J	15 Airbags	Clear Fault Codes	
Roomster	2007-2010	5J	15 Airbags	Measuring Blocks	
Roomster	2007-2010	5J	15 Airbags	Output Tests	
Roomster	2007-2010	5J	15 Airbags	Specia Functions	
Roomster	2007-2010	5J	16 Steering Wheel Electronics	Read Fault Codes	
Roomster	2007-2010	5J	16 Steering Wheel Electronics	Clear Fault Codes	
Roomster	2007-2010	5J	16 Steering Wheel Electronics	Measuring Blocks	
Roomster	2007-2010	5J	16 Steering Wheel Electronics	Output Tests	
Roomster	2007-2010	5J	16 Steering Wheel Electronics	Specia Functions	
Roomster	2007-2010	5J	17 Instrument Cluster	Read Fault Codes	
Roomster	2007-2010	5J	17 Instrument Cluster	Clear Fault Codes	
Roomster	2007-2010	5J	17 Instrument Cluster	Measuring Blocks	
Roomster	2007-2010	5J	17 Instrument Cluster	Output Tests	
Roomster	2007-2010	5J	17 Instrument Cluster	Specia Functions	
Roomster	2007-2010	5J	19 Gateway Data Bus	Read Fault Codes	
Roomster	2007-2010	5J	19 Gateway Data Bus	Clear Fault Codes	
Roomster	2007-2010	5J	19 Gateway Data Bus	Measuring Blocks	
Roomster	2007-2010	5J	19 Gateway Data Bus	Output Tests	
Roomster	2007-2010	5J	19 Gateway Data Bus	Specia Functions	
Roomster	2007-2010	5J	25 Immobilizer	Read Fault Codes	
Roomster	2007-2010	5J	25 Immobilizer	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Roomster	2007-2010	5J	25 Immobilizer	Measuring Blocks	
Roomster	2007-2010	5J	25 Immobilizer	Output Tests	
Roomster	2007-2010	5J	25 Immobilizer	Specia Functions	
Roomster	2007-2010	5J	37 Navigation	Read Fault Codes	
Roomster	2007-2010	5J	37 Navigation	Clear Fault Codes	
Roomster	2007-2010	5J	37 Navigation	Measuring Blocks	
Roomster	2007-2010	5J	37 Navigation	Output Tests	
Roomster	2007-2010	5J	37 Navigation	Specia Functions	
Roomster	2007-2010	5J	44 Steering Assistance	Read Fault Codes	
Roomster	2007-2010	5J	44 Steering Assistance	Clear Fault Codes	
Roomster	2007-2010	5J	44 Steering Assistance	Measuring Blocks	
Roomster	2007-2010	5J	44 Steering Assistance	Output Tests	
Roomster	2007-2010	5J	44 Steering Assistance	Specia Functions	
Roomster	2007-2010	5J	46 Central Control Module	Read Fault Codes	
Roomster	2007-2010	5J	46 Central Control Module	Clear Fault Codes	
Roomster	2007-2010	5J	46 Central Control Module	Measuring Blocks	
Roomster	2007-2010	5J	46 Central Control Module	Output Tests	
Roomster	2007-2010	5J	46 Central Control Module	Specia Functions	
Roomster	2007-2010	5J	51 Electric Drive	Read Fault Codes	
Roomster	2007-2010	5J	51 Electric Drive	Clear Fault Codes	
Roomster	2007-2010	5J	51 Electric Drive	Measuring Blocks	
Roomster	2007-2010	5J	51 Electric Drive	Output Tests	
Roomster	2007-2010	5J	51 Electric Drive	Specia Functions	
Roomster	2007-2010	5J	55 Headlight Range Control	Read Fault Codes	
Roomster	2007-2010	5J	55 Headlight Range Control	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Roomster	2007-2010	5J	55 Headlight Range Control	Measuring Blocks	
Roomster	2007-2010	5J	55 Headlight Range Control	Output Tests	
Roomster	2007-2010	5J	55 Headlight Range Control	Specia Functions	
Roomster	2007-2010	5J	56 Radio	Read Fault Codes	
Roomster	2007-2010	5J	56 Radio	Clear Fault Codes	
Roomster	2007-2010	5J	56 Radio	Measuring Blocks	
Roomster	2007-2010	5J	56 Radio	Output Tests	
Roomster	2007-2010	5J	56 Radio	Specia Functions	
Roomster	2007-2010	5J	76 Parking Aid	Read Fault Codes	
Roomster	2007-2010	5J	76 Parking Aid	Clear Fault Codes	
Roomster	2007-2010	5J	76 Parking Aid	Measuring Blocks	
Roomster	2007-2010	5J	76 Parking Aid	Output Tests	
Roomster	2007-2010	5J	76 Parking Aid	Specia Functions	
Roomster	2007-2010	5J	77 Telephone	Read Fault Codes	
Roomster	2007-2010	5J	77 Telephone	Clear Fault Codes	
Roomster	2007-2010	5J	77 Telephone	Measuring Blocks	
Roomster	2007-2010	5J	77 Telephone	Output Tests	
Roomster	2007-2010	5J	77 Telephone	Specia Functions	
Roomster	2007-2010	5J	8C Hybrid Battery	Read Fault Codes	
Roomster	2007-2010	5J	8C Hybrid Battery	Clear Fault Codes	
Roomster	2007-2010	5J	8C Hybrid Battery	Measuring Blocks	
Roomster	2007-2010	5J	8C Hybrid Battery	Output Tests	
Roomster	2007-2010	5J	8C Hybrid Battery	Specia Functions	
Roomster	2011-2015	5J	01 Engine Electronics	Read Fault Codes	
Roomster	2011-2015	5J	01 Engine Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Roomster	2011-2015	5J	01 Engine Electronics	Measuring Blocks	
Roomster	2011-2015	5J	01 Engine Electronics	Output Tests	
Roomster	2011-2015	5J	01 Engine Electronics	Specia Functions	
Roomster	2011-2015	5J	02 Transmission Electronics	Read Fault Codes	
Roomster	2011-2015	5J	02 Transmission Electronics	Clear Fault Codes	
Roomster	2011-2015	5J	02 Transmission Electronics	Measuring Blocks	
Roomster	2011-2015	5J	02 Transmission Electronics	Output Tests	
Roomster	2011-2015	5J	02 Transmission Electronics	Specia Functions	
Roomster	2011-2015	5J	03 Brake Electronics	Read Fault Codes	
Roomster	2011-2015	5J	03 Brake Electronics	Clear Fault Codes	
Roomster	2011-2015	5J	03 Brake Electronics	Measuring Blocks	
Roomster	2011-2015	5J	03 Brake Electronics	Output Tests	
Roomster	2011-2015	5J	03 Brake Electronics	Specia Functions	
Roomster	2011-2015	5J	04 Steering Position	Read Fault Codes	
Roomster	2011-2015	5J	04 Steering Position	Clear Fault Codes	
Roomster	2011-2015	5J	04 Steering Position	Measuring Blocks	
Roomster	2011-2015	5J	04 Steering Position	Output Tests	
Roomster	2011-2015	5J	04 Steering Position	Specia Functions	
Roomster	2011-2015	5J	08 AC/Heating Electronics	Read Fault Codes	
Roomster	2011-2015	5J	08 AC/Heating Electronics	Clear Fault Codes	
Roomster	2011-2015	5J	08 AC/Heating Electronics	Measuring Blocks	
Roomster	2011-2015	5J	08 AC/Heating Electronics	Output Tests	
Roomster	2011-2015	5J	08 AC/Heating Electronics	Specia Functions	
Roomster	2011-2015	5J	09 Electronic Ctrl Electronics	Read Fault Codes	
Roomster	2011-2015	5J	09 Electronic Ctrl Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Roomster	2011-2015	5J	09 Electronic Ctrl Electronics	Measuring Blocks	
Roomster	2011-2015	5J	09 Electronic Ctrl Electronics	Output Tests	
Roomster	2011-2015	5J	09 Electronic Ctrl Electronics	Specia Functions	
Roomster	2011-2015	5J	10 Parking Assist System 2	Read Fault Codes	
Roomster	2011-2015	5J	10 Parking Assist System 2	Clear Fault Codes	
Roomster	2011-2015	5J	10 Parking Assist System 2	Measuring Blocks	
Roomster	2011-2015	5J	10 Parking Assist System 2	Output Tests	
Roomster	2011-2015	5J	10 Parking Assist System 2	Specia Functions	
Roomster	2011-2015	5J	15 Airbags	Read Fault Codes	
Roomster	2011-2015	5J	15 Airbags	Clear Fault Codes	
Roomster	2011-2015	5J	15 Airbags	Measuring Blocks	
Roomster	2011-2015	5J	15 Airbags	Output Tests	
Roomster	2011-2015	5J	15 Airbags	Specia Functions	
Roomster	2011-2015	5J	16 Steering Wheel Electronics	Read Fault Codes	
Roomster	2011-2015	5J	16 Steering Wheel Electronics	Clear Fault Codes	
Roomster	2011-2015	5J	16 Steering Wheel Electronics	Measuring Blocks	
Roomster	2011-2015	5J	16 Steering Wheel Electronics	Output Tests	
Roomster	2011-2015	5J	16 Steering Wheel Electronics	Specia Functions	
Roomster	2011-2015	5J	17 Instrument Cluster	Read Fault Codes	
Roomster	2011-2015	5J	17 Instrument Cluster	Clear Fault Codes	
Roomster	2011-2015	5J	17 Instrument Cluster	Measuring Blocks	
Roomster	2011-2015	5J	17 Instrument Cluster	Output Tests	
Roomster	2011-2015	5J	17 Instrument Cluster	Specia Functions	
Roomster	2011-2015	5J	19 Gateway Data Bus	Read Fault Codes	
Roomster	2011-2015	5J	19 Gateway Data Bus	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Roomster	2011-2015	5J	19 Gateway Data Bus	Measuring Blocks	
Roomster	2011-2015	5J	19 Gateway Data Bus	Output Tests	
Roomster	2011-2015	5J	19 Gateway Data Bus	Specia Functions	
Roomster	2011-2015	5J	25 Immobilizer	Read Fault Codes	
Roomster	2011-2015	5J	25 Immobilizer	Clear Fault Codes	
Roomster	2011-2015	5J	25 Immobilizer	Measuring Blocks	
Roomster	2011-2015	5J	25 Immobilizer	Output Tests	
Roomster	2011-2015	5J	25 Immobilizer	Specia Functions	
Roomster	2011-2015	5J	2E Media Player Position 3	Read Fault Codes	
Roomster	2011-2015	5J	2E Media Player Position 3	Clear Fault Codes	
Roomster	2011-2015	5J	2E Media Player Position 3	Measuring Blocks	
Roomster	2011-2015	5J	2E Media Player Position 3	Output Tests	
Roomster	2011-2015	5J	2E Media Player Position 3	Specia Functions	
Roomster	2011-2015	5J	37 Navigation	Read Fault Codes	
Roomster	2011-2015	5J	37 Navigation	Clear Fault Codes	
Roomster	2011-2015	5J	37 Navigation	Measuring Blocks	
Roomster	2011-2015	5J	37 Navigation	Output Tests	
Roomster	2011-2015	5J	37 Navigation	Specia Functions	
Roomster	2011-2015	5J	44 Steering Assistance	Read Fault Codes	
Roomster	2011-2015	5J	44 Steering Assistance	Clear Fault Codes	
Roomster	2011-2015	5J	44 Steering Assistance	Measuring Blocks	
Roomster	2011-2015	5J	44 Steering Assistance	Output Tests	
Roomster	2011-2015	5J	44 Steering Assistance	Specia Functions	
Roomster	2011-2015	5J	46 Central Control Module	Read Fault Codes	
Roomster	2011-2015	5J	46 Central Control Module	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Roomster	2011-2015	5J	46 Central Control Module	Measuring Blocks	
Roomster	2011-2015	5J	46 Central Control Module	Output Tests	
Roomster	2011-2015	5J	46 Central Control Module	Specia Functions	
Roomster	2011-2015	5J	55 Headlight Range Control	Read Fault Codes	
Roomster	2011-2015	5J	55 Headlight Range Control	Clear Fault Codes	
Roomster	2011-2015	5J	55 Headlight Range Control	Measuring Blocks	
Roomster	2011-2015	5J	55 Headlight Range Control	Output Tests	
Roomster	2011-2015	5J	55 Headlight Range Control	Specia Functions	
Roomster	2011-2015	5J	56 Radio	Read Fault Codes	
Roomster	2011-2015	5J	56 Radio	Clear Fault Codes	
Roomster	2011-2015	5J	56 Radio	Measuring Blocks	
Roomster	2011-2015	5J	56 Radio	Output Tests	
Roomster	2011-2015	5J	56 Radio	Specia Functions	
Roomster	2011-2015	5J	61 Battery Control	Read Fault Codes	
Roomster	2011-2015	5J	61 Battery Control	Clear Fault Codes	
Roomster	2011-2015	5J	61 Battery Control	Measuring Blocks	
Roomster	2011-2015	5J	61 Battery Control	Output Tests	
Roomster	2011-2015	5J	61 Battery Control	Specia Functions	
Roomster	2011-2015	5J	69 Trailer Function	Read Fault Codes	
Roomster	2011-2015	5J	69 Trailer Function	Clear Fault Codes	
Roomster	2011-2015	5J	69 Trailer Function	Measuring Blocks	
Roomster	2011-2015	5J	69 Trailer Function	Output Tests	
Roomster	2011-2015	5J	69 Trailer Function	Specia Functions	
Roomster	2011-2015	5J	76 Parking Aid	Read Fault Codes	
Roomster	2011-2015	5J	76 Parking Aid	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Roomster	2011-2015	5J	76 Parking Aid	Measuring Blocks	
Roomster	2011-2015	5J	76 Parking Aid	Output Tests	
Roomster	2011-2015	5J	76 Parking Aid	Specia Functions	
Roomster	2011-2015	5J	77 Telephone	Read Fault Codes	
Roomster	2011-2015	5J	77 Telephone	Clear Fault Codes	
Roomster	2011-2015	5J	77 Telephone	Measuring Blocks	
Roomster	2011-2015	5J	77 Telephone	Output Tests	
Roomster	2011-2015	5J	77 Telephone	Specia Functions	
Roomster	2016	SE	01 Engine Electronics	Read Fault Codes	
Roomster	2016	SE	01 Engine Electronics	Clear Fault Codes	
Roomster	2016	SE	01 Engine Electronics	Measuring Blocks	
Roomster	2016	SE	01 Engine Electronics	Output Tests	
Roomster	2016	SE	01 Engine Electronics	Specia Functions	
Roomster	2016	SE	02 Transmission Electronics	Read Fault Codes	
Roomster	2016	SE	02 Transmission Electronics	Clear Fault Codes	
Roomster	2016	SE	02 Transmission Electronics	Measuring Blocks	
Roomster	2016	SE	02 Transmission Electronics	Output Tests	
Roomster	2016	SE	02 Transmission Electronics	Specia Functions	
Roomster	2016	SE	03 Brake Electronics	Read Fault Codes	
Roomster	2016	SE	03 Brake Electronics	Clear Fault Codes	
Roomster	2016	SE	03 Brake Electronics	Measuring Blocks	
Roomster	2016	SE	03 Brake Electronics	Output Tests	
Roomster	2016	SE	03 Brake Electronics	Specia Functions	
Roomster	2016	SE	08 AC/Heating Electronics	Read Fault Codes	
Roomster	2016	SE	08 AC/Heating Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Roomster	2016	SE	08 AC/Heating Electronics	Measuring Blocks	
Roomster	2016	SE	08 AC/Heating Electronics	Output Tests	
Roomster	2016	SE	08 AC/Heating Electronics	Specia Functions	
Roomster	2016	SE	09 Electronic Ctrl Electronics	Read Fault Codes	
Roomster	2016	SE	09 Electronic Ctrl Electronics	Clear Fault Codes	
Roomster	2016	SE	09 Electronic Ctrl Electronics	Measuring Blocks	
Roomster	2016	SE	09 Electronic Ctrl Electronics	Output Tests	
Roomster	2016	SE	09 Electronic Ctrl Electronics	Specia Functions	
Roomster	2016	SE	10 Parking Assist System 2	Read Fault Codes	
Roomster	2016	SE	10 Parking Assist System 2	Clear Fault Codes	
Roomster	2016	SE	10 Parking Assist System 2	Measuring Blocks	
Roomster	2016	SE	10 Parking Assist System 2	Output Tests	
Roomster	2016	SE	10 Parking Assist System 2	Specia Functions	
Roomster	2016	SE	13 Distance Control	Read Fault Codes	
Roomster	2016	SE	13 Distance Control	Clear Fault Codes	
Roomster	2016	SE	13 Distance Control	Measuring Blocks	
Roomster	2016	SE	13 Distance Control	Output Tests	
Roomster	2016	SE	13 Distance Control	Specia Functions	
Roomster	2016	SE	15 Airbags	Read Fault Codes	
Roomster	2016	SE	15 Airbags	Clear Fault Codes	
Roomster	2016	SE	15 Airbags	Measuring Blocks	
Roomster	2016	SE	15 Airbags	Output Tests	
Roomster	2016	SE	15 Airbags	Specia Functions	
Roomster	2016	SE	16 Steering Wheel Electronics	Read Fault Codes	
Roomster	2016	SE	16 Steering Wheel Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Roomster	2016	SE	16 Steering Wheel Electronics	Measuring Blocks	
Roomster	2016	SE	16 Steering Wheel Electronics	Output Tests	
Roomster	2016	SE	16 Steering Wheel Electronics	Specia Functions	
Roomster	2016	SE	17 Instrument Cluster	Read Fault Codes	
Roomster	2016	SE	17 Instrument Cluster	Clear Fault Codes	
Roomster	2016	SE	17 Instrument Cluster	Measuring Blocks	
Roomster	2016	SE	17 Instrument Cluster	Output Tests	
Roomster	2016	SE	17 Instrument Cluster	Specia Functions	
Roomster	2016	SE	18 Aux Heating	Read Fault Codes	
Roomster	2016	SE	18 Aux Heating	Clear Fault Codes	
Roomster	2016	SE	18 Aux Heating	Measuring Blocks	
Roomster	2016	SE	18 Aux Heating	Output Tests	
Roomster	2016	SE	18 Aux Heating	Specia Functions	
Roomster	2016	SE	19 Gateway Data Bus	Read Fault Codes	
Roomster	2016	SE	19 Gateway Data Bus	Clear Fault Codes	
Roomster	2016	SE	19 Gateway Data Bus	Measuring Blocks	
Roomster	2016	SE	19 Gateway Data Bus	Output Tests	
Roomster	2016	SE	19 Gateway Data Bus	Specia Functions	
Roomster	2016	SE	20 High Beam Assistance Device	Read Fault Codes	
Roomster	2016	SE	20 High Beam Assistance Device	Clear Fault Codes	
Roomster	2016	SE	20 High Beam Assistance Device	Measuring Blocks	
Roomster	2016	SE	20 High Beam Assistance Device	Output Tests	
Roomster	2016	SE	20 High Beam Assistance Device	Specia Functions	
Roomster	2016	SE	22 4WD Electronics	Read Fault Codes	
Roomster	2016	SE	22 4WD Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Roomster	2016	SE	22 4WD Electronics	Measuring Blocks	
Roomster	2016	SE	22 4WD Electronics	Output Tests	
Roomster	2016	SE	22 4WD Electronics	Specia Functions	
Roomster	2016	SE	25 Immobilizer	Read Fault Codes	
Roomster	2016	SE	25 Immobilizer	Clear Fault Codes	
Roomster	2016	SE	25 Immobilizer	Measuring Blocks	
Roomster	2016	SE	25 Immobilizer	Output Tests	
Roomster	2016	SE	25 Immobilizer	Specia Functions	
Roomster	2016	SE	2E Media Player Position 3	Read Fault Codes	
Roomster	2016	SE	2E Media Player Position 3	Clear Fault Codes	
Roomster	2016	SE	2E Media Player Position 3	Measuring Blocks	
Roomster	2016	SE	2E Media Player Position 3	Output Tests	
Roomster	2016	SE	2E Media Player Position 3	Specia Functions	
Roomster	2016	SE	37 Navigation	Read Fault Codes	
Roomster	2016	SE	37 Navigation	Clear Fault Codes	
Roomster	2016	SE	37 Navigation	Measuring Blocks	
Roomster	2016	SE	37 Navigation	Output Tests	
Roomster	2016	SE	37 Navigation	Specia Functions	
Roomster	2016	SE	3D 专用功能	Read Fault Codes	
Roomster	2016	SE	3D 专用功能	Clear Fault Codes	
Roomster	2016	SE	3D 专用功能	Measuring Blocks	
Roomster	2016	SE	3D 专用功能	Output Tests	
Roomster	2016	SE	3D 专用功能	Specia Functions	
Roomster	2016	SE	42 Driver-Door Elect.	Read Fault Codes	
Roomster	2016	SE	42 Driver-Door Elect.	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Roomster	2016	SE	42 Driver-Door Elect.	Measuring Blocks	
Roomster	2016	SE	42 Driver-Door Elect.	Output Tests	
Roomster	2016	SE	42 Driver-Door Elect.	Specia Functions	
Roomster	2016	SE	44 Steering Assistance	Read Fault Codes	
Roomster	2016	SE	44 Steering Assistance	Clear Fault Codes	
Roomster	2016	SE	44 Steering Assistance	Measuring Blocks	
Roomster	2016	SE	44 Steering Assistance	Output Tests	
Roomster	2016	SE	44 Steering Assistance	Specia Functions	
Roomster	2016	SE	46 Central Control Module	Read Fault Codes	
Roomster	2016	SE	46 Central Control Module	Clear Fault Codes	
Roomster	2016	SE	46 Central Control Module	Measuring Blocks	
Roomster	2016	SE	46 Central Control Module	Output Tests	
Roomster	2016	SE	46 Central Control Module	Specia Functions	
Roomster	2016	SE	52 Passe.-Door Elect.	Read Fault Codes	
Roomster	2016	SE	52 Passe.-Door Elect.	Clear Fault Codes	
Roomster	2016	SE	52 Passe.-Door Elect.	Measuring Blocks	
Roomster	2016	SE	52 Passe.-Door Elect.	Output Tests	
Roomster	2016	SE	52 Passe.-Door Elect.	Specia Functions	
Roomster	2016	SE	55 Headlight Range Control	Read Fault Codes	
Roomster	2016	SE	55 Headlight Range Control	Clear Fault Codes	
Roomster	2016	SE	55 Headlight Range Control	Measuring Blocks	
Roomster	2016	SE	55 Headlight Range Control	Output Tests	
Roomster	2016	SE	55 Headlight Range Control	Specia Functions	
Roomster	2016	SE	56 Radio	Read Fault Codes	
Roomster	2016	SE	56 Radio	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Roomster	2016	SE	56 Radio	Measuring Blocks	
Roomster	2016	SE	56 Radio	Output Tests	
Roomster	2016	SE	56 Radio	Specia Functions	
Roomster	2016	SE	5F Information Electronic Equipment 1	Read Fault Codes	
Roomster	2016	SE	5F Information Electronic Equipment 1	Clear Fault Codes	
Roomster	2016	SE	5F Information Electronic Equipment 1	Measuring Blocks	
Roomster	2016	SE	5F Information Electronic Equipment 1	Output Tests	
Roomster	2016	SE	5F Information Electronic Equipment 1	Specia Functions	
Roomster	2016	SE	61 Battery Control	Read Fault Codes	
Roomster	2016	SE	61 Battery Control	Clear Fault Codes	
Roomster	2016	SE	61 Battery Control	Measuring Blocks	
Roomster	2016	SE	61 Battery Control	Output Tests	
Roomster	2016	SE	61 Battery Control	Specia Functions	
Roomster	2016	SE	69 Trailer Function	Read Fault Codes	
Roomster	2016	SE	69 Trailer Function	Clear Fault Codes	
Roomster	2016	SE	69 Trailer Function	Measuring Blocks	
Roomster	2016	SE	69 Trailer Function	Output Tests	
Roomster	2016	SE	69 Trailer Function	Specia Functions	
Roomster	2016	SE	77 Telephone	Read Fault Codes	
Roomster	2016	SE	77 Telephone	Clear Fault Codes	
Roomster	2016	SE	77 Telephone	Measuring Blocks	
Roomster	2016	SE	77 Telephone	Output Tests	
Roomster	2016	SE	77 Telephone	Specia Functions	
Superb	2015-2018	NP	01 Engine Electronics	Read Fault Codes	
Superb	2015-2018	NP	01 Engine Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb	2015-2018	NP	01 Engine Electronics	Measuring Blocks	
Superb	2015-2018	NP	01 Engine Electronics	Output Tests	
Superb	2015-2018	NP	01 Engine Electronics	Specia Functions	
Superb	2015-2018	NP	02 Transmission Electronics	Read Fault Codes	
Superb	2015-2018	NP	02 Transmission Electronics	Clear Fault Codes	
Superb	2015-2018	NP	02 Transmission Electronics	Measuring Blocks	
Superb	2015-2018	NP	02 Transmission Electronics	Output Tests	
Superb	2015-2018	NP	02 Transmission Electronics	Specia Functions	
Superb	2015-2018	NP	03 Brake Electronics	Read Fault Codes	
Superb	2015-2018	NP	03 Brake Electronics	Clear Fault Codes	
Superb	2015-2018	NP	03 Brake Electronics	Measuring Blocks	
Superb	2015-2018	NP	03 Brake Electronics	Output Tests	
Superb	2015-2018	NP	03 Brake Electronics	Specia Functions	
Superb	2015-2018	NP	08 AC/Heating Electronics	Read Fault Codes	
Superb	2015-2018	NP	08 AC/Heating Electronics	Clear Fault Codes	
Superb	2015-2018	NP	08 AC/Heating Electronics	Measuring Blocks	
Superb	2015-2018	NP	08 AC/Heating Electronics	Output Tests	
Superb	2015-2018	NP	08 AC/Heating Electronics	Specia Functions	
Superb	2015-2018	NP	09 Electronic Ctrl Electronics	Read Fault Codes	
Superb	2015-2018	NP	09 Electronic Ctrl Electronics	Clear Fault Codes	
Superb	2015-2018	NP	09 Electronic Ctrl Electronics	Measuring Blocks	
Superb	2015-2018	NP	09 Electronic Ctrl Electronics	Output Tests	
Superb	2015-2018	NP	09 Electronic Ctrl Electronics	Specia Functions	
Superb	2015-2018	NP	13 Distance Control	Read Fault Codes	
Superb	2015-2018	NP	13 Distance Control	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb	2015-2018	NP	13 Distance Control	Measuring Blocks	
Superb	2015-2018	NP	13 Distance Control	Output Tests	
Superb	2015-2018	NP	13 Distance Control	Specia Functions	
Superb	2015-2018	NP	14 Wheel Damping Electronics	Read Fault Codes	
Superb	2015-2018	NP	14 Wheel Damping Electronics	Clear Fault Codes	
Superb	2015-2018	NP	14 Wheel Damping Electronics	Measuring Blocks	
Superb	2015-2018	NP	14 Wheel Damping Electronics	Output Tests	
Superb	2015-2018	NP	14 Wheel Damping Electronics	Specia Functions	
Superb	2015-2018	NP	15 Airbags	Read Fault Codes	
Superb	2015-2018	NP	15 Airbags	Clear Fault Codes	
Superb	2015-2018	NP	15 Airbags	Measuring Blocks	
Superb	2015-2018	NP	15 Airbags	Output Tests	
Superb	2015-2018	NP	15 Airbags	Specia Functions	
Superb	2015-2018	NP	16 Steering Wheel Electronics	Read Fault Codes	
Superb	2015-2018	NP	16 Steering Wheel Electronics	Clear Fault Codes	
Superb	2015-2018	NP	16 Steering Wheel Electronics	Measuring Blocks	
Superb	2015-2018	NP	16 Steering Wheel Electronics	Output Tests	
Superb	2015-2018	NP	16 Steering Wheel Electronics	Specia Functions	
Superb	2015-2018	NP	17 Instrument Cluster	Read Fault Codes	
Superb	2015-2018	NP	17 Instrument Cluster	Clear Fault Codes	
Superb	2015-2018	NP	17 Instrument Cluster	Measuring Blocks	
Superb	2015-2018	NP	17 Instrument Cluster	Output Tests	
Superb	2015-2018	NP	17 Instrument Cluster	Specia Functions	
Superb	2015-2018	NP	18 Aux Heating	Read Fault Codes	
Superb	2015-2018	NP	18 Aux Heating	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb	2015-2018	NP	18 Aux Heating	Measuring Blocks	
Superb	2015-2018	NP	18 Aux Heating	Output Tests	
Superb	2015-2018	NP	18 Aux Heating	Specia Functions	
Superb	2015-2018	NP	19 Gateway Data Bus	Read Fault Codes	
Superb	2015-2018	NP	19 Gateway Data Bus	Clear Fault Codes	
Superb	2015-2018	NP	19 Gateway Data Bus	Measuring Blocks	
Superb	2015-2018	NP	19 Gateway Data Bus	Output Tests	
Superb	2015-2018	NP	19 Gateway Data Bus	Specia Functions	
Superb	2015-2018	NP	20 High Beam Assistance Device	Read Fault Codes	
Superb	2015-2018	NP	20 High Beam Assistance Device	Clear Fault Codes	
Superb	2015-2018	NP	20 High Beam Assistance Device	Measuring Blocks	
Superb	2015-2018	NP	20 High Beam Assistance Device	Output Tests	
Superb	2015-2018	NP	20 High Beam Assistance Device	Specia Functions	
Superb	2015-2018	NP	22 4WD Electronics	Read Fault Codes	
Superb	2015-2018	NP	22 4WD Electronics	Clear Fault Codes	
Superb	2015-2018	NP	22 4WD Electronics	Measuring Blocks	
Superb	2015-2018	NP	22 4WD Electronics	Output Tests	
Superb	2015-2018	NP	22 4WD Electronics	Specia Functions	
Superb	2015-2018	NP	2B Steer Col Lock	Read Fault Codes	
Superb	2015-2018	NP	2B Steer Col Lock	Clear Fault Codes	
Superb	2015-2018	NP	2B Steer Col Lock	Measuring Blocks	
Superb	2015-2018	NP	2B Steer Col Lock	Output Tests	
Superb	2015-2018	NP	2B Steer Col Lock	Specia Functions	
Superb	2015-2018	NP	36 Driver`s Side Seat Adj.	Read Fault Codes	
Superb	2015-2018	NP	36 Driver`s Side Seat Adj.	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb	2015-2018	NP	36 Driver`s Side Seat Adj.	Measuring Blocks	
Superb	2015-2018	NP	36 Driver`s Side Seat Adj.	Output Tests	
Superb	2015-2018	NP	36 Driver`s Side Seat Adj.	Specia Functions	
Superb	2015-2018	NP	3C Lane Departure Assistance System	Read Fault Codes	
Superb	2015-2018	NP	3C Lane Departure Assistance System	Clear Fault Codes	
Superb	2015-2018	NP	3C Lane Departure Assistance System	Measuring Blocks	
Superb	2015-2018	NP	3C Lane Departure Assistance System	Output Tests	
Superb	2015-2018	NP	3C Lane Departure Assistance System	Specia Functions	
Superb	2015-2018	NP	42 Driver-Door Elect.	Read Fault Codes	
Superb	2015-2018	NP	42 Driver-Door Elect.	Clear Fault Codes	
Superb	2015-2018	NP	42 Driver-Door Elect.	Measuring Blocks	
Superb	2015-2018	NP	42 Driver-Door Elect.	Output Tests	
Superb	2015-2018	NP	42 Driver-Door Elect.	Specia Functions	
Superb	2015-2018	NP	44 Steering Assistance	Read Fault Codes	
Superb	2015-2018	NP	44 Steering Assistance	Clear Fault Codes	
Superb	2015-2018	NP	44 Steering Assistance	Measuring Blocks	
Superb	2015-2018	NP	44 Steering Assistance	Output Tests	
Superb	2015-2018	NP	44 Steering Assistance	Specia Functions	
Superb	2015-2018	NP	47 Soundsystem	Read Fault Codes	
Superb	2015-2018	NP	47 Soundsystem	Clear Fault Codes	
Superb	2015-2018	NP	47 Soundsystem	Measuring Blocks	
Superb	2015-2018	NP	47 Soundsystem	Output Tests	
Superb	2015-2018	NP	47 Soundsystem	Specia Functions	
Superb	2015-2018	NP	52 Passe.-Door Elect.	Read Fault Codes	
Superb	2015-2018	NP	52 Passe.-Door Elect.	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb	2015-2018	NP	52 Passe.-Door Elect.	Measuring Blocks	
Superb	2015-2018	NP	52 Passe.-Door Elect.	Output Tests	
Superb	2015-2018	NP	52 Passe.-Door Elect.	Specia Functions	
Superb	2015-2018	NP	55 Headlight Range Control	Read Fault Codes	
Superb	2015-2018	NP	55 Headlight Range Control	Clear Fault Codes	
Superb	2015-2018	NP	55 Headlight Range Control	Measuring Blocks	
Superb	2015-2018	NP	55 Headlight Range Control	Output Tests	
Superb	2015-2018	NP	55 Headlight Range Control	Specia Functions	
Superb	2015-2018	NP	57 TV-Tuner	Read Fault Codes	
Superb	2015-2018	NP	57 TV-Tuner	Clear Fault Codes	
Superb	2015-2018	NP	57 TV-Tuner	Measuring Blocks	
Superb	2015-2018	NP	57 TV-Tuner	Output Tests	
Superb	2015-2018	NP	57 TV-Tuner	Specia Functions	
Superb	2015-2018	NP	5F Information Electronic Equipment 1	Read Fault Codes	
Superb	2015-2018	NP	5F Information Electronic Equipment 1	Clear Fault Codes	
Superb	2015-2018	NP	5F Information Electronic Equipment 1	Measuring Blocks	
Superb	2015-2018	NP	5F Information Electronic Equipment 1	Output Tests	
Superb	2015-2018	NP	5F Information Electronic Equipment 1	Specia Functions	
Superb	2015-2018	NP	69 Trailer Function	Read Fault Codes	
Superb	2015-2018	NP	69 Trailer Function	Clear Fault Codes	
Superb	2015-2018	NP	69 Trailer Function	Measuring Blocks	
Superb	2015-2018	NP	69 Trailer Function	Output Tests	
Superb	2015-2018	NP	69 Trailer Function	Specia Functions	
Superb	2015-2018	NP	6C Rear Camera	Read Fault Codes	
Superb	2015-2018	NP	6C Rear Camera	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb	2015-2018	NP	6C Rear Camera	Measuring Blocks	
Superb	2015-2018	NP	6C Rear Camera	Output Tests	
Superb	2015-2018	NP	6C Rear Camera	Specia Functions	
Superb	2015-2018	NP	6D Electronic Equipment of Trunk Lid	Read Fault Codes	
Superb	2015-2018	NP	6D Electronic Equipment of Trunk Lid	Clear Fault Codes	
Superb	2015-2018	NP	6D Electronic Equipment of Trunk Lid	Measuring Blocks	
Superb	2015-2018	NP	6D Electronic Equipment of Trunk Lid	Output Tests	
Superb	2015-2018	NP	6D Electronic Equipment of Trunk Lid	Specia Functions	
Superb	2015-2018	NP	76 Parking Aid	Read Fault Codes	
Superb	2015-2018	NP	76 Parking Aid	Clear Fault Codes	
Superb	2015-2018	NP	76 Parking Aid	Measuring Blocks	
Superb	2015-2018	NP	76 Parking Aid	Output Tests	
Superb	2015-2018	NP	76 Parking Aid	Specia Functions	
Superb	2015-2018	NP	A5 Frt Sens.Drv.Assist	Read Fault Codes	
Superb	2015-2018	NP	A5 Frt Sens.Drv.Assist	Clear Fault Codes	
Superb	2015-2018	NP	A5 Frt Sens.Drv.Assist	Measuring Blocks	
Superb	2015-2018	NP	A5 Frt Sens.Drv.Assist	Output Tests	
Superb	2015-2018	NP	A5 Frt Sens.Drv.Assist	Specia Functions	
Superb	2015-2018	NP	B7 Access Start Interf	Read Fault Codes	
Superb	2015-2018	NP	B7 Access Start Interf	Clear Fault Codes	
Superb	2015-2018	NP	B7 Access Start Interf	Measuring Blocks	
Superb	2015-2018	NP	B7 Access Start Interf	Output Tests	
Superb	2015-2018	NP	B7 Access Start Interf	Specia Functions	
Superb	2015-2018	NP	BB Door Rear Drv Side	Read Fault Codes	
Superb	2015-2018	NP	BB Door Rear Drv Side	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb	2015-2018	NP	BB Door Rear Drv Side	Measuring Blocks	
Superb	2015-2018	NP	BB Door Rear Drv Side	Output Tests	
Superb	2015-2018	NP	BB Door Rear Drv Side	Specia Functions	
Superb	2015-2018	NP	BC Door Rear Pass Side	Read Fault Codes	
Superb	2015-2018	NP	BC Door Rear Pass Side	Clear Fault Codes	
Superb	2015-2018	NP	BC Door Rear Pass Side	Measuring Blocks	
Superb	2015-2018	NP	BC Door Rear Pass Side	Output Tests	
Superb	2015-2018	NP	BC Door Rear Pass Side	Specia Functions	
Superb I	2001-2003	3U	01 Engine Electronics	Read Fault Codes	
Superb I	2001-2003	3U	01 Engine Electronics	Clear Fault Codes	
Superb I	2001-2003	3U	01 Engine Electronics	Measuring Blocks	
Superb I	2001-2003	3U	01 Engine Electronics	Output Tests	
Superb I	2001-2003	3U	01 Engine Electronics	Specia Functions	
Superb I	2001-2003	3U	02 Transmission Electronics	Read Fault Codes	
Superb I	2001-2003	3U	02 Transmission Electronics	Clear Fault Codes	
Superb I	2001-2003	3U	02 Transmission Electronics	Measuring Blocks	
Superb I	2001-2003	3U	02 Transmission Electronics	Output Tests	
Superb I	2001-2003	3U	02 Transmission Electronics	Specia Functions	
Superb I	2001-2003	3U	03 Brake Electronics	Read Fault Codes	
Superb I	2001-2003	3U	03 Brake Electronics	Clear Fault Codes	
Superb I	2001-2003	3U	03 Brake Electronics	Measuring Blocks	
Superb I	2001-2003	3U	03 Brake Electronics	Output Tests	
Superb I	2001-2003	3U	03 Brake Electronics	Specia Functions	
Superb I	2001-2003	3U	08 AC/Heating Electronics	Read Fault Codes	
Superb I	2001-2003	3U	08 AC/Heating Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb I	2001-2003	3U	08 AC/Heating Electronics	Measuring Blocks	
Superb I	2001-2003	3U	08 AC/Heating Electronics	Output Tests	
Superb I	2001-2003	3U	08 AC/Heating Electronics	Specia Functions	
Superb I	2001-2003	3U	11 Engine Electronics 2	Read Fault Codes	
Superb I	2001-2003	3U	11 Engine Electronics 2	Clear Fault Codes	
Superb I	2001-2003	3U	11 Engine Electronics 2	Measuring Blocks	
Superb I	2001-2003	3U	11 Engine Electronics 2	Output Tests	
Superb I	2001-2003	3U	11 Engine Electronics 2	Specia Functions	
Superb I	2001-2003	3U	15 Airbags	Read Fault Codes	
Superb I	2001-2003	3U	15 Airbags	Clear Fault Codes	
Superb I	2001-2003	3U	15 Airbags	Measuring Blocks	
Superb I	2001-2003	3U	15 Airbags	Output Tests	
Superb I	2001-2003	3U	15 Airbags	Specia Functions	
Superb I	2001-2003	3U	16 Steering Wheel Electronics	Read Fault Codes	
Superb I	2001-2003	3U	16 Steering Wheel Electronics	Clear Fault Codes	
Superb I	2001-2003	3U	16 Steering Wheel Electronics	Measuring Blocks	
Superb I	2001-2003	3U	16 Steering Wheel Electronics	Output Tests	
Superb I	2001-2003	3U	16 Steering Wheel Electronics	Specia Functions	
Superb I	2001-2003	3U	17 Instrument Cluster	Read Fault Codes	
Superb I	2001-2003	3U	17 Instrument Cluster	Clear Fault Codes	
Superb I	2001-2003	3U	17 Instrument Cluster	Measuring Blocks	
Superb I	2001-2003	3U	17 Instrument Cluster	Output Tests	
Superb I	2001-2003	3U	17 Instrument Cluster	Specia Functions	
Superb I	2001-2003	3U	19 Gateway Data Bus	Read Fault Codes	
Superb I	2001-2003	3U	19 Gateway Data Bus	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb I	2001-2003	3U	19 Gateway Data Bus	Measuring Blocks	
Superb I	2001-2003	3U	19 Gateway Data Bus	Output Tests	
Superb I	2001-2003	3U	19 Gateway Data Bus	Specia Functions	
Superb I	2001-2003	3U	25 Immobilizer	Read Fault Codes	
Superb I	2001-2003	3U	25 Immobilizer	Clear Fault Codes	
Superb I	2001-2003	3U	25 Immobilizer	Measuring Blocks	
Superb I	2001-2003	3U	25 Immobilizer	Output Tests	
Superb I	2001-2003	3U	25 Immobilizer	Specia Functions	
Superb I	2001-2003	3U	36 Driver`s Side Seat Adj.	Read Fault Codes	
Superb I	2001-2003	3U	36 Driver`s Side Seat Adj.	Clear Fault Codes	
Superb I	2001-2003	3U	36 Driver`s Side Seat Adj.	Measuring Blocks	
Superb I	2001-2003	3U	36 Driver`s Side Seat Adj.	Output Tests	
Superb I	2001-2003	3U	36 Driver`s Side Seat Adj.	Specia Functions	
Superb I	2001-2003	3U	37 Navigation	Read Fault Codes	
Superb I	2001-2003	3U	37 Navigation	Clear Fault Codes	
Superb I	2001-2003	3U	37 Navigation	Measuring Blocks	
Superb I	2001-2003	3U	37 Navigation	Output Tests	
Superb I	2001-2003	3U	37 Navigation	Specia Functions	
Superb I	2001-2003	3U	46 Central Control Module	Read Fault Codes	
Superb I	2001-2003	3U	46 Central Control Module	Clear Fault Codes	
Superb I	2001-2003	3U	46 Central Control Module	Measuring Blocks	
Superb I	2001-2003	3U	46 Central Control Module	Output Tests	
Superb I	2001-2003	3U	46 Central Control Module	Specia Functions	
Superb I	2001-2003	3U	47 Soundsystem	Read Fault Codes	
Superb I	2001-2003	3U	47 Soundsystem	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb I	2001-2003	3U	47 Soundsystem	Measuring Blocks	
Superb I	2001-2003	3U	47 Soundsystem	Output Tests	
Superb I	2001-2003	3U	47 Soundsystem	Specia Functions	
Superb I	2001-2003	3U	51 Electric Drive	Read Fault Codes	
Superb I	2001-2003	3U	51 Electric Drive	Clear Fault Codes	
Superb I	2001-2003	3U	51 Electric Drive	Measuring Blocks	
Superb I	2001-2003	3U	51 Electric Drive	Output Tests	
Superb I	2001-2003	3U	51 Electric Drive	Specia Functions	
Superb I	2001-2003	3U	55 Headlight Range Control	Read Fault Codes	
Superb I	2001-2003	3U	55 Headlight Range Control	Clear Fault Codes	
Superb I	2001-2003	3U	55 Headlight Range Control	Measuring Blocks	
Superb I	2001-2003	3U	55 Headlight Range Control	Output Tests	
Superb I	2001-2003	3U	55 Headlight Range Control	Specia Functions	
Superb I	2001-2003	3U	56 Radio	Read Fault Codes	
Superb I	2001-2003	3U	56 Radio	Clear Fault Codes	
Superb I	2001-2003	3U	56 Radio	Measuring Blocks	
Superb I	2001-2003	3U	56 Radio	Output Tests	
Superb I	2001-2003	3U	56 Radio	Specia Functions	
Superb I	2001-2003	3U	76 Parking Aid	Read Fault Codes	
Superb I	2001-2003	3U	76 Parking Aid	Clear Fault Codes	
Superb I	2001-2003	3U	76 Parking Aid	Measuring Blocks	
Superb I	2001-2003	3U	76 Parking Aid	Output Tests	
Superb I	2001-2003	3U	76 Parking Aid	Specia Functions	
Superb I	2001-2003	3U	8C Hybrid Battery	Read Fault Codes	
Superb I	2001-2003	3U	8C Hybrid Battery	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb I	2001-2003	3U	8C Hybrid Battery	Measuring Blocks	
Superb I	2001-2003	3U	8C Hybrid Battery	Output Tests	
Superb I	2001-2003	3U	8C Hybrid Battery	Specia Functions	
Superb I	2004	3U	01 Engine Electronics	Read Fault Codes	
Superb I	2004	3U	01 Engine Electronics	Clear Fault Codes	
Superb I	2004	3U	01 Engine Electronics	Measuring Blocks	
Superb I	2004	3U	01 Engine Electronics	Output Tests	
Superb I	2004	3U	01 Engine Electronics	Specia Functions	
Superb I	2004	3U	02 Transmission Electronics	Read Fault Codes	
Superb I	2004	3U	02 Transmission Electronics	Clear Fault Codes	
Superb I	2004	3U	02 Transmission Electronics	Measuring Blocks	
Superb I	2004	3U	02 Transmission Electronics	Output Tests	
Superb I	2004	3U	02 Transmission Electronics	Specia Functions	
Superb I	2004	3U	03 Brake Electronics	Read Fault Codes	
Superb I	2004	3U	03 Brake Electronics	Clear Fault Codes	
Superb I	2004	3U	03 Brake Electronics	Measuring Blocks	
Superb I	2004	3U	03 Brake Electronics	Output Tests	
Superb I	2004	3U	03 Brake Electronics	Specia Functions	
Superb I	2004	3U	08 AC/Heating Electronics	Read Fault Codes	
Superb I	2004	3U	08 AC/Heating Electronics	Clear Fault Codes	
Superb I	2004	3U	08 AC/Heating Electronics	Measuring Blocks	
Superb I	2004	3U	08 AC/Heating Electronics	Output Tests	
Superb I	2004	3U	08 AC/Heating Electronics	Specia Functions	
Superb I	2004	3U	11 Engine Electronics 2	Read Fault Codes	
Superb I	2004	3U	11 Engine Electronics 2	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb I	2004	3U	11 Engine Electronics 2	Measuring Blocks	
Superb I	2004	3U	11 Engine Electronics 2	Output Tests	
Superb I	2004	3U	11 Engine Electronics 2	Specia Functions	
Superb I	2004	3U	15 Airbags	Read Fault Codes	
Superb I	2004	3U	15 Airbags	Clear Fault Codes	
Superb I	2004	3U	15 Airbags	Measuring Blocks	
Superb I	2004	3U	15 Airbags	Output Tests	
Superb I	2004	3U	15 Airbags	Specia Functions	
Superb I	2004	3U	16 Steering Wheel Electronics	Read Fault Codes	
Superb I	2004	3U	16 Steering Wheel Electronics	Clear Fault Codes	
Superb I	2004	3U	16 Steering Wheel Electronics	Measuring Blocks	
Superb I	2004	3U	16 Steering Wheel Electronics	Output Tests	
Superb I	2004	3U	16 Steering Wheel Electronics	Specia Functions	
Superb I	2004	3U	17 Instrument Cluster	Read Fault Codes	
Superb I	2004	3U	17 Instrument Cluster	Clear Fault Codes	
Superb I	2004	3U	17 Instrument Cluster	Measuring Blocks	
Superb I	2004	3U	17 Instrument Cluster	Output Tests	
Superb I	2004	3U	17 Instrument Cluster	Specia Functions	
Superb I	2004	3U	19 Gateway Data Bus	Read Fault Codes	
Superb I	2004	3U	19 Gateway Data Bus	Clear Fault Codes	
Superb I	2004	3U	19 Gateway Data Bus	Measuring Blocks	
Superb I	2004	3U	19 Gateway Data Bus	Output Tests	
Superb I	2004	3U	19 Gateway Data Bus	Specia Functions	
Superb I	2004	3U	25 Immobilizer	Read Fault Codes	
Superb I	2004	3U	25 Immobilizer	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb I	2004	3U	25 Immobilizer	Measuring Blocks	
Superb I	2004	3U	25 Immobilizer	Output Tests	
Superb I	2004	3U	25 Immobilizer	Specia Functions	
Superb I	2004	3U	36 Driver`s Side Seat Adj.	Read Fault Codes	
Superb I	2004	3U	36 Driver`s Side Seat Adj.	Clear Fault Codes	
Superb I	2004	3U	36 Driver`s Side Seat Adj.	Measuring Blocks	
Superb I	2004	3U	36 Driver`s Side Seat Adj.	Output Tests	
Superb I	2004	3U	36 Driver`s Side Seat Adj.	Specia Functions	
Superb I	2004	3U	37 Navigation	Read Fault Codes	
Superb I	2004	3U	37 Navigation	Clear Fault Codes	
Superb I	2004	3U	37 Navigation	Measuring Blocks	
Superb I	2004	3U	37 Navigation	Output Tests	
Superb I	2004	3U	37 Navigation	Specia Functions	
Superb I	2004	3U	46 Central Control Module	Read Fault Codes	
Superb I	2004	3U	46 Central Control Module	Clear Fault Codes	
Superb I	2004	3U	46 Central Control Module	Measuring Blocks	
Superb I	2004	3U	46 Central Control Module	Output Tests	
Superb I	2004	3U	46 Central Control Module	Specia Functions	
Superb I	2004	3U	47 Soundsystem	Read Fault Codes	
Superb I	2004	3U	47 Soundsystem	Clear Fault Codes	
Superb I	2004	3U	47 Soundsystem	Measuring Blocks	
Superb I	2004	3U	47 Soundsystem	Output Tests	
Superb I	2004	3U	47 Soundsystem	Specia Functions	
Superb I	2004	3U	51 Electric Drive	Read Fault Codes	
Superb I	2004	3U	51 Electric Drive	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb I	2004	3U	51 Electric Drive	Measuring Blocks	
Superb I	2004	3U	51 Electric Drive	Output Tests	
Superb I	2004	3U	51 Electric Drive	Specia Functions	
Superb I	2004	3U	55 Headlight Range Control	Read Fault Codes	
Superb I	2004	3U	55 Headlight Range Control	Clear Fault Codes	
Superb I	2004	3U	55 Headlight Range Control	Measuring Blocks	
Superb I	2004	3U	55 Headlight Range Control	Output Tests	
Superb I	2004	3U	55 Headlight Range Control	Specia Functions	
Superb I	2004	3U	56 Radio	Read Fault Codes	
Superb I	2004	3U	56 Radio	Clear Fault Codes	
Superb I	2004	3U	56 Radio	Measuring Blocks	
Superb I	2004	3U	56 Radio	Output Tests	
Superb I	2004	3U	56 Radio	Specia Functions	
Superb I	2004	3U	76 Parking Aid	Read Fault Codes	
Superb I	2004	3U	76 Parking Aid	Clear Fault Codes	
Superb I	2004	3U	76 Parking Aid	Measuring Blocks	
Superb I	2004	3U	76 Parking Aid	Output Tests	
Superb I	2004	3U	76 Parking Aid	Specia Functions	
Superb I	2004	3U	8C Hybrid Battery	Read Fault Codes	
Superb I	2004	3U	8C Hybrid Battery	Clear Fault Codes	
Superb I	2004	3U	8C Hybrid Battery	Measuring Blocks	
Superb I	2004	3U	8C Hybrid Battery	Output Tests	
Superb I	2004	3U	8C Hybrid Battery	Specia Functions	
Superb I	2005	3U	01 Engine Electronics	Read Fault Codes	
Superb I	2005	3U	01 Engine Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb I	2005	3U	01 Engine Electronics	Measuring Blocks	
Superb I	2005	3U	01 Engine Electronics	Output Tests	
Superb I	2005	3U	01 Engine Electronics	Specia Functions	
Superb I	2005	3U	02 Transmission Electronics	Read Fault Codes	
Superb I	2005	3U	02 Transmission Electronics	Clear Fault Codes	
Superb I	2005	3U	02 Transmission Electronics	Measuring Blocks	
Superb I	2005	3U	02 Transmission Electronics	Output Tests	
Superb I	2005	3U	02 Transmission Electronics	Specia Functions	
Superb I	2005	3U	03 Brake Electronics	Read Fault Codes	
Superb I	2005	3U	03 Brake Electronics	Clear Fault Codes	
Superb I	2005	3U	03 Brake Electronics	Measuring Blocks	
Superb I	2005	3U	03 Brake Electronics	Output Tests	
Superb I	2005	3U	03 Brake Electronics	Specia Functions	
Superb I	2005	3U	08 AC/Heating Electronics	Read Fault Codes	
Superb I	2005	3U	08 AC/Heating Electronics	Clear Fault Codes	
Superb I	2005	3U	08 AC/Heating Electronics	Measuring Blocks	
Superb I	2005	3U	08 AC/Heating Electronics	Output Tests	
Superb I	2005	3U	08 AC/Heating Electronics	Specia Functions	
Superb I	2005	3U	11 Engine Electronics 2	Read Fault Codes	
Superb I	2005	3U	11 Engine Electronics 2	Clear Fault Codes	
Superb I	2005	3U	11 Engine Electronics 2	Measuring Blocks	
Superb I	2005	3U	11 Engine Electronics 2	Output Tests	
Superb I	2005	3U	11 Engine Electronics 2	Specia Functions	
Superb I	2005	3U	15 Airbags	Read Fault Codes	
Superb I	2005	3U	15 Airbags	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb I	2005	3U	15 Airbags	Measuring Blocks	
Superb I	2005	3U	15 Airbags	Output Tests	
Superb I	2005	3U	15 Airbags	Specia Functions	
Superb I	2005	3U	16 Steering Wheel Electronics	Read Fault Codes	
Superb I	2005	3U	16 Steering Wheel Electronics	Clear Fault Codes	
Superb I	2005	3U	16 Steering Wheel Electronics	Measuring Blocks	
Superb I	2005	3U	16 Steering Wheel Electronics	Output Tests	
Superb I	2005	3U	16 Steering Wheel Electronics	Specia Functions	
Superb I	2005	3U	17 Instrument Cluster	Read Fault Codes	
Superb I	2005	3U	17 Instrument Cluster	Clear Fault Codes	
Superb I	2005	3U	17 Instrument Cluster	Measuring Blocks	
Superb I	2005	3U	17 Instrument Cluster	Output Tests	
Superb I	2005	3U	17 Instrument Cluster	Specia Functions	
Superb I	2005	3U	19 Gateway Data Bus	Read Fault Codes	
Superb I	2005	3U	19 Gateway Data Bus	Clear Fault Codes	
Superb I	2005	3U	19 Gateway Data Bus	Measuring Blocks	
Superb I	2005	3U	19 Gateway Data Bus	Output Tests	
Superb I	2005	3U	19 Gateway Data Bus	Specia Functions	
Superb I	2005	3U	25 Immobilizer	Read Fault Codes	
Superb I	2005	3U	25 Immobilizer	Clear Fault Codes	
Superb I	2005	3U	25 Immobilizer	Measuring Blocks	
Superb I	2005	3U	25 Immobilizer	Output Tests	
Superb I	2005	3U	25 Immobilizer	Specia Functions	
Superb I	2005	3U	36 Driver`s Side Seat Adj.	Read Fault Codes	
Superb I	2005	3U	36 Driver`s Side Seat Adj.	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb I	2005	3U	36 Driver`s Side Seat Adj.	Measuring Blocks	
Superb I	2005	3U	36 Driver`s Side Seat Adj.	Output Tests	
Superb I	2005	3U	36 Driver`s Side Seat Adj.	Specia Functions	
Superb I	2005	3U	37 Navigation	Read Fault Codes	
Superb I	2005	3U	37 Navigation	Clear Fault Codes	
Superb I	2005	3U	37 Navigation	Measuring Blocks	
Superb I	2005	3U	37 Navigation	Output Tests	
Superb I	2005	3U	37 Navigation	Specia Functions	
Superb I	2005	3U	46 Central Control Module	Read Fault Codes	
Superb I	2005	3U	46 Central Control Module	Clear Fault Codes	
Superb I	2005	3U	46 Central Control Module	Measuring Blocks	
Superb I	2005	3U	46 Central Control Module	Output Tests	
Superb I	2005	3U	46 Central Control Module	Specia Functions	
Superb I	2005	3U	47 Soundsystem	Read Fault Codes	
Superb I	2005	3U	47 Soundsystem	Clear Fault Codes	
Superb I	2005	3U	47 Soundsystem	Measuring Blocks	
Superb I	2005	3U	47 Soundsystem	Output Tests	
Superb I	2005	3U	47 Soundsystem	Specia Functions	
Superb I	2005	3U	51 Electric Drive	Read Fault Codes	
Superb I	2005	3U	51 Electric Drive	Clear Fault Codes	
Superb I	2005	3U	51 Electric Drive	Measuring Blocks	
Superb I	2005	3U	51 Electric Drive	Output Tests	
Superb I	2005	3U	51 Electric Drive	Specia Functions	
Superb I	2005	3U	55 Headlight Range Control	Read Fault Codes	
Superb I	2005	3U	55 Headlight Range Control	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb I	2005	3U	55 Headlight Range Control	Measuring Blocks	
Superb I	2005	3U	55 Headlight Range Control	Output Tests	
Superb I	2005	3U	55 Headlight Range Control	Specia Functions	
Superb I	2005	3U	56 Radio	Read Fault Codes	
Superb I	2005	3U	56 Radio	Clear Fault Codes	
Superb I	2005	3U	56 Radio	Measuring Blocks	
Superb I	2005	3U	56 Radio	Output Tests	
Superb I	2005	3U	56 Radio	Specia Functions	
Superb I	2005	3U	76 Parking Aid	Read Fault Codes	
Superb I	2005	3U	76 Parking Aid	Clear Fault Codes	
Superb I	2005	3U	76 Parking Aid	Measuring Blocks	
Superb I	2005	3U	76 Parking Aid	Output Tests	
Superb I	2005	3U	76 Parking Aid	Specia Functions	
Superb I	2005	3U	77 Telephone	Read Fault Codes	
Superb I	2005	3U	77 Telephone	Clear Fault Codes	
Superb I	2005	3U	77 Telephone	Measuring Blocks	
Superb I	2005	3U	77 Telephone	Output Tests	
Superb I	2005	3U	77 Telephone	Specia Functions	
Superb I	2005	3U	8C Hybrid Battery	Read Fault Codes	
Superb I	2005	3U	8C Hybrid Battery	Clear Fault Codes	
Superb I	2005	3U	8C Hybrid Battery	Measuring Blocks	
Superb I	2005	3U	8C Hybrid Battery	Output Tests	
Superb I	2005	3U	8C Hybrid Battery	Specia Functions	
Superb I	2006-2008	3U	01 Engine Electronics	Read Fault Codes	
Superb I	2006-2008	3U	01 Engine Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb I	2006-2008	3U	01 Engine Electronics	Measuring Blocks	
Superb I	2006-2008	3U	01 Engine Electronics	Output Tests	
Superb I	2006-2008	3U	01 Engine Electronics	Specia Functions	
Superb I	2006-2008	3U	02 Transmission Electronics	Read Fault Codes	
Superb I	2006-2008	3U	02 Transmission Electronics	Clear Fault Codes	
Superb I	2006-2008	3U	02 Transmission Electronics	Measuring Blocks	
Superb I	2006-2008	3U	02 Transmission Electronics	Output Tests	
Superb I	2006-2008	3U	02 Transmission Electronics	Specia Functions	
Superb I	2006-2008	3U	03 Brake Electronics	Read Fault Codes	
Superb I	2006-2008	3U	03 Brake Electronics	Clear Fault Codes	
Superb I	2006-2008	3U	03 Brake Electronics	Measuring Blocks	
Superb I	2006-2008	3U	03 Brake Electronics	Output Tests	
Superb I	2006-2008	3U	03 Brake Electronics	Specia Functions	
Superb I	2006-2008	3U	08 AC/Heating Electronics	Read Fault Codes	
Superb I	2006-2008	3U	08 AC/Heating Electronics	Clear Fault Codes	
Superb I	2006-2008	3U	08 AC/Heating Electronics	Measuring Blocks	
Superb I	2006-2008	3U	08 AC/Heating Electronics	Output Tests	
Superb I	2006-2008	3U	08 AC/Heating Electronics	Specia Functions	
Superb I	2006-2008	3U	11 Engine Electronics 2	Read Fault Codes	
Superb I	2006-2008	3U	11 Engine Electronics 2	Clear Fault Codes	
Superb I	2006-2008	3U	11 Engine Electronics 2	Measuring Blocks	
Superb I	2006-2008	3U	11 Engine Electronics 2	Output Tests	
Superb I	2006-2008	3U	11 Engine Electronics 2	Specia Functions	
Superb I	2006-2008	3U	15 Airbags	Read Fault Codes	
Superb I	2006-2008	3U	15 Airbags	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb I	2006-2008	3U	15 Airbags	Measuring Blocks	
Superb I	2006-2008	3U	15 Airbags	Output Tests	
Superb I	2006-2008	3U	15 Airbags	Specia Functions	
Superb I	2006-2008	3U	16 Steering Wheel Electronics	Read Fault Codes	
Superb I	2006-2008	3U	16 Steering Wheel Electronics	Clear Fault Codes	
Superb I	2006-2008	3U	16 Steering Wheel Electronics	Measuring Blocks	
Superb I	2006-2008	3U	16 Steering Wheel Electronics	Output Tests	
Superb I	2006-2008	3U	16 Steering Wheel Electronics	Specia Functions	
Superb I	2006-2008	3U	17 Instrument Cluster	Read Fault Codes	
Superb I	2006-2008	3U	17 Instrument Cluster	Clear Fault Codes	
Superb I	2006-2008	3U	17 Instrument Cluster	Measuring Blocks	
Superb I	2006-2008	3U	17 Instrument Cluster	Output Tests	
Superb I	2006-2008	3U	17 Instrument Cluster	Specia Functions	
Superb I	2006-2008	3U	19 Gateway Data Bus	Read Fault Codes	
Superb I	2006-2008	3U	19 Gateway Data Bus	Clear Fault Codes	
Superb I	2006-2008	3U	19 Gateway Data Bus	Measuring Blocks	
Superb I	2006-2008	3U	19 Gateway Data Bus	Output Tests	
Superb I	2006-2008	3U	19 Gateway Data Bus	Specia Functions	
Superb I	2006-2008	3U	25 Immobilizer	Read Fault Codes	
Superb I	2006-2008	3U	25 Immobilizer	Clear Fault Codes	
Superb I	2006-2008	3U	25 Immobilizer	Measuring Blocks	
Superb I	2006-2008	3U	25 Immobilizer	Output Tests	
Superb I	2006-2008	3U	25 Immobilizer	Specia Functions	
Superb I	2006-2008	3U	36 Driver`s Side Seat Adj.	Read Fault Codes	
Superb I	2006-2008	3U	36 Driver`s Side Seat Adj.	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb I	2006-2008	3U	36 Driver`s Side Seat Adj.	Measuring Blocks	
Superb I	2006-2008	3U	36 Driver`s Side Seat Adj.	Output Tests	
Superb I	2006-2008	3U	36 Driver`s Side Seat Adj.	Specia Functions	
Superb I	2006-2008	3U	37 Navigation	Read Fault Codes	
Superb I	2006-2008	3U	37 Navigation	Clear Fault Codes	
Superb I	2006-2008	3U	37 Navigation	Measuring Blocks	
Superb I	2006-2008	3U	37 Navigation	Output Tests	
Superb I	2006-2008	3U	37 Navigation	Specia Functions	
Superb I	2006-2008	3U	46 Central Control Module	Read Fault Codes	
Superb I	2006-2008	3U	46 Central Control Module	Clear Fault Codes	
Superb I	2006-2008	3U	46 Central Control Module	Measuring Blocks	
Superb I	2006-2008	3U	46 Central Control Module	Output Tests	
Superb I	2006-2008	3U	46 Central Control Module	Specia Functions	
Superb I	2006-2008	3U	47 Soundsystem	Read Fault Codes	
Superb I	2006-2008	3U	47 Soundsystem	Clear Fault Codes	
Superb I	2006-2008	3U	47 Soundsystem	Measuring Blocks	
Superb I	2006-2008	3U	47 Soundsystem	Output Tests	
Superb I	2006-2008	3U	47 Soundsystem	Specia Functions	
Superb I	2006-2008	3U	51 Electric Drive	Read Fault Codes	
Superb I	2006-2008	3U	51 Electric Drive	Clear Fault Codes	
Superb I	2006-2008	3U	51 Electric Drive	Measuring Blocks	
Superb I	2006-2008	3U	51 Electric Drive	Output Tests	
Superb I	2006-2008	3U	51 Electric Drive	Specia Functions	
Superb I	2006-2008	3U	55 Headlight Range Control	Read Fault Codes	
Superb I	2006-2008	3U	55 Headlight Range Control	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb I	2006-2008	3U	55 Headlight Range Control	Measuring Blocks	
Superb I	2006-2008	3U	55 Headlight Range Control	Output Tests	
Superb I	2006-2008	3U	55 Headlight Range Control	Specia Functions	
Superb I	2006-2008	3U	56 Radio	Read Fault Codes	
Superb I	2006-2008	3U	56 Radio	Clear Fault Codes	
Superb I	2006-2008	3U	56 Radio	Measuring Blocks	
Superb I	2006-2008	3U	56 Radio	Output Tests	
Superb I	2006-2008	3U	56 Radio	Specia Functions	
Superb I	2006-2008	3U	76 Parking Aid	Read Fault Codes	
Superb I	2006-2008	3U	76 Parking Aid	Clear Fault Codes	
Superb I	2006-2008	3U	76 Parking Aid	Measuring Blocks	
Superb I	2006-2008	3U	76 Parking Aid	Output Tests	
Superb I	2006-2008	3U	76 Parking Aid	Specia Functions	
Superb I	2006-2008	3U	77 Telephone	Read Fault Codes	
Superb I	2006-2008	3U	77 Telephone	Clear Fault Codes	
Superb I	2006-2008	3U	77 Telephone	Measuring Blocks	
Superb I	2006-2008	3U	77 Telephone	Output Tests	
Superb I	2006-2008	3U	77 Telephone	Specia Functions	
Superb I	2006-2008	3U	8C Hybrid Battery	Read Fault Codes	
Superb I	2006-2008	3U	8C Hybrid Battery	Clear Fault Codes	
Superb I	2006-2008	3U	8C Hybrid Battery	Measuring Blocks	
Superb I	2006-2008	3U	8C Hybrid Battery	Output Tests	
Superb I	2006-2008	3U	8C Hybrid Battery	Specia Functions	
Superb II	2008-2015	3T	01 Engine Electronics	Read Fault Codes	
Superb II	2008-2015	3T	01 Engine Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb II	2008-2015	3T	01 Engine Electronics	Measuring Blocks	
Superb II	2008-2015	3T	01 Engine Electronics	Output Tests	
Superb II	2008-2015	3T	01 Engine Electronics	Specia Functions	
Superb II	2008-2015	3T	02 Transmission Electronics	Read Fault Codes	
Superb II	2008-2015	3T	02 Transmission Electronics	Clear Fault Codes	
Superb II	2008-2015	3T	02 Transmission Electronics	Measuring Blocks	
Superb II	2008-2015	3T	02 Transmission Electronics	Output Tests	
Superb II	2008-2015	3T	02 Transmission Electronics	Specia Functions	
Superb II	2008-2015	3T	03 Brake Electronics	Read Fault Codes	
Superb II	2008-2015	3T	03 Brake Electronics	Clear Fault Codes	
Superb II	2008-2015	3T	03 Brake Electronics	Measuring Blocks	
Superb II	2008-2015	3T	03 Brake Electronics	Output Tests	
Superb II	2008-2015	3T	03 Brake Electronics	Specia Functions	
Superb II	2008-2015	3T	05 Access & Permissi.	Read Fault Codes	
Superb II	2008-2015	3T	05 Access & Permissi.	Clear Fault Codes	
Superb II	2008-2015	3T	05 Access & Permissi.	Measuring Blocks	
Superb II	2008-2015	3T	05 Access & Permissi.	Output Tests	
Superb II	2008-2015	3T	05 Access & Permissi.	Specia Functions	
Superb II	2008-2015	3T	08 AC/Heating Electronics	Read Fault Codes	
Superb II	2008-2015	3T	08 AC/Heating Electronics	Clear Fault Codes	
Superb II	2008-2015	3T	08 AC/Heating Electronics	Measuring Blocks	
Superb II	2008-2015	3T	08 AC/Heating Electronics	Output Tests	
Superb II	2008-2015	3T	08 AC/Heating Electronics	Specia Functions	
Superb II	2008-2015	3T	09 Electronic Ctrl Electronics	Read Fault Codes	
Superb II	2008-2015	3T	09 Electronic Ctrl Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb II	2008-2015	3T	09 Electronic Ctrl Electronics	Measuring Blocks	
Superb II	2008-2015	3T	09 Electronic Ctrl Electronics	Output Tests	
Superb II	2008-2015	3T	09 Electronic Ctrl Electronics	Specia Functions	
Superb II	2008-2015	3T	10 Parking Assist System 2	Read Fault Codes	
Superb II	2008-2015	3T	10 Parking Assist System 2	Clear Fault Codes	
Superb II	2008-2015	3T	10 Parking Assist System 2	Measuring Blocks	
Superb II	2008-2015	3T	10 Parking Assist System 2	Output Tests	
Superb II	2008-2015	3T	10 Parking Assist System 2	Specia Functions	
Superb II	2008-2015	3T	15 Airbags	Read Fault Codes	
Superb II	2008-2015	3T	15 Airbags	Clear Fault Codes	
Superb II	2008-2015	3T	15 Airbags	Measuring Blocks	
Superb II	2008-2015	3T	15 Airbags	Output Tests	
Superb II	2008-2015	3T	15 Airbags	Specia Functions	
Superb II	2008-2015	3T	16 Steering Wheel Electronics	Read Fault Codes	
Superb II	2008-2015	3T	16 Steering Wheel Electronics	Clear Fault Codes	
Superb II	2008-2015	3T	16 Steering Wheel Electronics	Measuring Blocks	
Superb II	2008-2015	3T	16 Steering Wheel Electronics	Output Tests	
Superb II	2008-2015	3T	16 Steering Wheel Electronics	Specia Functions	
Superb II	2008-2015	3T	17 Instrument Cluster	Read Fault Codes	
Superb II	2008-2015	3T	17 Instrument Cluster	Clear Fault Codes	
Superb II	2008-2015	3T	17 Instrument Cluster	Measuring Blocks	
Superb II	2008-2015	3T	17 Instrument Cluster	Output Tests	
Superb II	2008-2015	3T	17 Instrument Cluster	Specia Functions	
Superb II	2008-2015	3T	18 Aux Heating	Read Fault Codes	
Superb II	2008-2015	3T	18 Aux Heating	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb II	2008-2015	3T	18 Aux Heating	Measuring Blocks	
Superb II	2008-2015	3T	18 Aux Heating	Output Tests	
Superb II	2008-2015	3T	18 Aux Heating	Specia Functions	
Superb II	2008-2015	3T	19 Gateway Data Bus	Read Fault Codes	
Superb II	2008-2015	3T	19 Gateway Data Bus	Clear Fault Codes	
Superb II	2008-2015	3T	19 Gateway Data Bus	Measuring Blocks	
Superb II	2008-2015	3T	19 Gateway Data Bus	Output Tests	
Superb II	2008-2015	3T	19 Gateway Data Bus	Specia Functions	
Superb II	2008-2015	3T	22 4WD Electronics	Read Fault Codes	
Superb II	2008-2015	3T	22 4WD Electronics	Clear Fault Codes	
Superb II	2008-2015	3T	22 4WD Electronics	Measuring Blocks	
Superb II	2008-2015	3T	22 4WD Electronics	Output Tests	
Superb II	2008-2015	3T	22 4WD Electronics	Specia Functions	
Superb II	2008-2015	3T	25 Immobilizer	Read Fault Codes	
Superb II	2008-2015	3T	25 Immobilizer	Clear Fault Codes	
Superb II	2008-2015	3T	25 Immobilizer	Measuring Blocks	
Superb II	2008-2015	3T	25 Immobilizer	Output Tests	
Superb II	2008-2015	3T	25 Immobilizer	Specia Functions	
Superb II	2008-2015	3T	2B Steer Col Lock	Read Fault Codes	
Superb II	2008-2015	3T	2B Steer Col Lock	Clear Fault Codes	
Superb II	2008-2015	3T	2B Steer Col Lock	Measuring Blocks	
Superb II	2008-2015	3T	2B Steer Col Lock	Output Tests	
Superb II	2008-2015	3T	2B Steer Col Lock	Specia Functions	
Superb II	2008-2015	3T	2E Media Player Position 3	Read Fault Codes	
Superb II	2008-2015	3T	2E Media Player Position 3	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb II	2008-2015	3T	2E Media Player Position 3	Measuring Blocks	
Superb II	2008-2015	3T	2E Media Player Position 3	Output Tests	
Superb II	2008-2015	3T	2E Media Player Position 3	Specia Functions	
Superb II	2008-2015	3T	36 Driver`s Side Seat Adj.	Read Fault Codes	
Superb II	2008-2015	3T	36 Driver`s Side Seat Adj.	Clear Fault Codes	
Superb II	2008-2015	3T	36 Driver`s Side Seat Adj.	Measuring Blocks	
Superb II	2008-2015	3T	36 Driver`s Side Seat Adj.	Output Tests	
Superb II	2008-2015	3T	36 Driver`s Side Seat Adj.	Specia Functions	
Superb II	2008-2015	3T	37 Navigation	Read Fault Codes	
Superb II	2008-2015	3T	37 Navigation	Clear Fault Codes	
Superb II	2008-2015	3T	37 Navigation	Measuring Blocks	
Superb II	2008-2015	3T	37 Navigation	Output Tests	
Superb II	2008-2015	3T	37 Navigation	Specia Functions	
Superb II	2008-2015	3T	42 Driver-Door Elect.	Read Fault Codes	
Superb II	2008-2015	3T	42 Driver-Door Elect.	Clear Fault Codes	
Superb II	2008-2015	3T	42 Driver-Door Elect.	Measuring Blocks	
Superb II	2008-2015	3T	42 Driver-Door Elect.	Output Tests	
Superb II	2008-2015	3T	42 Driver-Door Elect.	Specia Functions	
Superb II	2008-2015	3T	44 Steering Assistance	Read Fault Codes	
Superb II	2008-2015	3T	44 Steering Assistance	Clear Fault Codes	
Superb II	2008-2015	3T	44 Steering Assistance	Measuring Blocks	
Superb II	2008-2015	3T	44 Steering Assistance	Output Tests	
Superb II	2008-2015	3T	44 Steering Assistance	Specia Functions	
Superb II	2008-2015	3T	47 Soundsystem	Read Fault Codes	
Superb II	2008-2015	3T	47 Soundsystem	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb II	2008-2015	3T	47 Soundsystem	Measuring Blocks	
Superb II	2008-2015	3T	47 Soundsystem	Output Tests	
Superb II	2008-2015	3T	47 Soundsystem	Specia Functions	
Superb II	2008-2015	3T	4F Electronic Central Electric II	Read Fault Codes	
Superb II	2008-2015	3T	4F Electronic Central Electric II	Clear Fault Codes	
Superb II	2008-2015	3T	4F Electronic Central Electric II	Measuring Blocks	
Superb II	2008-2015	3T	4F Electronic Central Electric II	Output Tests	
Superb II	2008-2015	3T	4F Electronic Central Electric II	Specia Functions	
Superb II	2008-2015	3T	52 Passe.-Door Elect.	Read Fault Codes	
Superb II	2008-2015	3T	52 Passe.-Door Elect.	Clear Fault Codes	
Superb II	2008-2015	3T	52 Passe.-Door Elect.	Measuring Blocks	
Superb II	2008-2015	3T	52 Passe.-Door Elect.	Output Tests	
Superb II	2008-2015	3T	52 Passe.-Door Elect.	Specia Functions	
Superb II	2008-2015	3T	55 Headlight Range Control	Read Fault Codes	
Superb II	2008-2015	3T	55 Headlight Range Control	Clear Fault Codes	
Superb II	2008-2015	3T	55 Headlight Range Control	Measuring Blocks	
Superb II	2008-2015	3T	55 Headlight Range Control	Output Tests	
Superb II	2008-2015	3T	55 Headlight Range Control	Specia Functions	
Superb II	2008-2015	3T	56 Radio	Read Fault Codes	
Superb II	2008-2015	3T	56 Radio	Clear Fault Codes	
Superb II	2008-2015	3T	56 Radio	Measuring Blocks	
Superb II	2008-2015	3T	56 Radio	Output Tests	
Superb II	2008-2015	3T	56 Radio	Specia Functions	
Superb II	2008-2015	3T	57 TV-Tuner	Read Fault Codes	
Superb II	2008-2015	3T	57 TV-Tuner	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb II	2008-2015	3T	57 TV-Tuner	Measuring Blocks	
Superb II	2008-2015	3T	57 TV-Tuner	Output Tests	
Superb II	2008-2015	3T	57 TV-Tuner	Specia Functions	
Superb II	2008-2015	3T	61 Battery Control	Read Fault Codes	
Superb II	2008-2015	3T	61 Battery Control	Clear Fault Codes	
Superb II	2008-2015	3T	61 Battery Control	Measuring Blocks	
Superb II	2008-2015	3T	61 Battery Control	Output Tests	
Superb II	2008-2015	3T	61 Battery Control	Specia Functions	
Superb II	2008-2015	3T	62 LR-Door Electroni.	Read Fault Codes	
Superb II	2008-2015	3T	62 LR-Door Electroni.	Clear Fault Codes	
Superb II	2008-2015	3T	62 LR-Door Electroni.	Measuring Blocks	
Superb II	2008-2015	3T	62 LR-Door Electroni.	Output Tests	
Superb II	2008-2015	3T	62 LR-Door Electroni.	Specia Functions	
Superb II	2008-2015	3T	69 Trailer Function	Read Fault Codes	
Superb II	2008-2015	3T	69 Trailer Function	Clear Fault Codes	
Superb II	2008-2015	3T	69 Trailer Function	Measuring Blocks	
Superb II	2008-2015	3T	69 Trailer Function	Output Tests	
Superb II	2008-2015	3T	69 Trailer Function	Specia Functions	
Superb II	2008-2015	3T	6D Electronic Equipment of Trunk Lid	Read Fault Codes	
Superb II	2008-2015	3T	6D Electronic Equipment of Trunk Lid	Clear Fault Codes	
Superb II	2008-2015	3T	6D Electronic Equipment of Trunk Lid	Measuring Blocks	
Superb II	2008-2015	3T	6D Electronic Equipment of Trunk Lid	Output Tests	
Superb II	2008-2015	3T	6D Electronic Equipment of Trunk Lid	Specia Functions	
Superb II	2008-2015	3T	72 RR-Door Electroni.	Read Fault Codes	
Superb II	2008-2015	3T	72 RR-Door Electroni.	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb II	2008-2015	3T	72 RR-Door Electroni.	Measuring Blocks	
Superb II	2008-2015	3T	72 RR-Door Electroni.	Output Tests	
Superb II	2008-2015	3T	72 RR-Door Electroni.	Specia Functions	
Superb II	2008-2015	3T	77 Telephone	Read Fault Codes	
Superb II	2008-2015	3T	77 Telephone	Clear Fault Codes	
Superb II	2008-2015	3T	77 Telephone	Measuring Blocks	
Superb II	2008-2015	3T	77 Telephone	Output Tests	
Superb II	2008-2015	3T	77 Telephone	Specia Functions	
Yeti	2010-2018	5L	01 Engine Electronics	Read Fault Codes	
Yeti	2010-2018	5L	01 Engine Electronics	Clear Fault Codes	
Yeti	2010-2018	5L	01 Engine Electronics	Measuring Blocks	
Yeti	2010-2018	5L	01 Engine Electronics	Output Tests	
Yeti	2010-2018	5L	01 Engine Electronics	Specia Functions	
Yeti	2010-2018	5L	02 Transmission Electronics	Read Fault Codes	
Yeti	2010-2018	5L	02 Transmission Electronics	Clear Fault Codes	
Yeti	2010-2018	5L	02 Transmission Electronics	Measuring Blocks	
Yeti	2010-2018	5L	02 Transmission Electronics	Output Tests	
Yeti	2010-2018	5L	02 Transmission Electronics	Specia Functions	
Yeti	2010-2018	5L	03 Brake Electronics	Read Fault Codes	
Yeti	2010-2018	5L	03 Brake Electronics	Clear Fault Codes	
Yeti	2010-2018	5L	03 Brake Electronics	Measuring Blocks	
Yeti	2010-2018	5L	03 Brake Electronics	Output Tests	
Yeti	2010-2018	5L	03 Brake Electronics	Specia Functions	
Yeti	2010-2018	5L	05 Access & Permissi.	Read Fault Codes	
Yeti	2010-2018	5L	05 Access & Permissi.	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Yeti	2010-2018	5L	05 Access & Permissi.	Measuring Blocks	
Yeti	2010-2018	5L	05 Access & Permissi.	Output Tests	
Yeti	2010-2018	5L	05 Access & Permissi.	Specia Functions	
Yeti	2010-2018	5L	06 Passene. Seat Adj.	Read Fault Codes	
Yeti	2010-2018	5L	06 Passene. Seat Adj.	Clear Fault Codes	
Yeti	2010-2018	5L	06 Passene. Seat Adj.	Measuring Blocks	
Yeti	2010-2018	5L	06 Passene. Seat Adj.	Output Tests	
Yeti	2010-2018	5L	06 Passene. Seat Adj.	Specia Functions	
Yeti	2010-2018	5L	08 AC/Heating Electronics	Read Fault Codes	
Yeti	2010-2018	5L	08 AC/Heating Electronics	Clear Fault Codes	
Yeti	2010-2018	5L	08 AC/Heating Electronics	Measuring Blocks	
Yeti	2010-2018	5L	08 AC/Heating Electronics	Output Tests	
Yeti	2010-2018	5L	08 AC/Heating Electronics	Specia Functions	
Yeti	2010-2018	5L	09 Electronic Ctrl Electronics	Read Fault Codes	
Yeti	2010-2018	5L	09 Electronic Ctrl Electronics	Clear Fault Codes	
Yeti	2010-2018	5L	09 Electronic Ctrl Electronics	Measuring Blocks	
Yeti	2010-2018	5L	09 Electronic Ctrl Electronics	Output Tests	
Yeti	2010-2018	5L	09 Electronic Ctrl Electronics	Specia Functions	
Yeti	2010-2018	5L	10 Parking Assist System 2	Read Fault Codes	
Yeti	2010-2018	5L	10 Parking Assist System 2	Clear Fault Codes	
Yeti	2010-2018	5L	10 Parking Assist System 2	Measuring Blocks	
Yeti	2010-2018	5L	10 Parking Assist System 2	Output Tests	
Yeti	2010-2018	5L	10 Parking Assist System 2	Specia Functions	
Yeti	2010-2018	5L	15 Airbags	Read Fault Codes	
Yeti	2010-2018	5L	15 Airbags	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Yeti	2010-2018	5L	15 Airbags	Measuring Blocks	
Yeti	2010-2018	5L	15 Airbags	Output Tests	
Yeti	2010-2018	5L	15 Airbags	Specia Functions	
Yeti	2010-2018	5L	16 Steering Wheel Electronics	Read Fault Codes	
Yeti	2010-2018	5L	16 Steering Wheel Electronics	Clear Fault Codes	
Yeti	2010-2018	5L	16 Steering Wheel Electronics	Measuring Blocks	
Yeti	2010-2018	5L	16 Steering Wheel Electronics	Output Tests	
Yeti	2010-2018	5L	16 Steering Wheel Electronics	Specia Functions	
Yeti	2010-2018	5L	17 Instrument Cluster	Read Fault Codes	
Yeti	2010-2018	5L	17 Instrument Cluster	Clear Fault Codes	
Yeti	2010-2018	5L	17 Instrument Cluster	Measuring Blocks	
Yeti	2010-2018	5L	17 Instrument Cluster	Output Tests	
Yeti	2010-2018	5L	17 Instrument Cluster	Specia Functions	
Yeti	2010-2018	5L	18 Aux Heating	Read Fault Codes	
Yeti	2010-2018	5L	18 Aux Heating	Clear Fault Codes	
Yeti	2010-2018	5L	18 Aux Heating	Measuring Blocks	
Yeti	2010-2018	5L	18 Aux Heating	Output Tests	
Yeti	2010-2018	5L	18 Aux Heating	Specia Functions	
Yeti	2010-2018	5L	19 Gateway Data Bus	Read Fault Codes	
Yeti	2010-2018	5L	19 Gateway Data Bus	Clear Fault Codes	
Yeti	2010-2018	5L	19 Gateway Data Bus	Measuring Blocks	
Yeti	2010-2018	5L	19 Gateway Data Bus	Output Tests	
Yeti	2010-2018	5L	19 Gateway Data Bus	Specia Functions	
Yeti	2010-2018	5L	22 4WD Electronics	Read Fault Codes	
Yeti	2010-2018	5L	22 4WD Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Yeti	2010-2018	5L	22 4WD Electronics	Measuring Blocks	
Yeti	2010-2018	5L	22 4WD Electronics	Output Tests	
Yeti	2010-2018	5L	22 4WD Electronics	Specia Functions	
Yeti	2010-2018	5L	25 Immobilizer	Read Fault Codes	
Yeti	2010-2018	5L	25 Immobilizer	Clear Fault Codes	
Yeti	2010-2018	5L	25 Immobilizer	Measuring Blocks	
Yeti	2010-2018	5L	25 Immobilizer	Output Tests	
Yeti	2010-2018	5L	25 Immobilizer	Specia Functions	
Yeti	2010-2018	5L	2B Steer Col Lock	Read Fault Codes	
Yeti	2010-2018	5L	2B Steer Col Lock	Clear Fault Codes	
Yeti	2010-2018	5L	2B Steer Col Lock	Measuring Blocks	
Yeti	2010-2018	5L	2B Steer Col Lock	Output Tests	
Yeti	2010-2018	5L	2B Steer Col Lock	Specia Functions	
Yeti	2010-2018	5L	2E Media Player Position 3	Read Fault Codes	
Yeti	2010-2018	5L	2E Media Player Position 3	Clear Fault Codes	
Yeti	2010-2018	5L	2E Media Player Position 3	Measuring Blocks	
Yeti	2010-2018	5L	2E Media Player Position 3	Output Tests	
Yeti	2010-2018	5L	2E Media Player Position 3	Specia Functions	
Yeti	2010-2018	5L	36 Driver`s Side Seat Adj.	Read Fault Codes	
Yeti	2010-2018	5L	36 Driver`s Side Seat Adj.	Clear Fault Codes	
Yeti	2010-2018	5L	36 Driver`s Side Seat Adj.	Measuring Blocks	
Yeti	2010-2018	5L	36 Driver`s Side Seat Adj.	Output Tests	
Yeti	2010-2018	5L	36 Driver`s Side Seat Adj.	Specia Functions	
Yeti	2010-2018	5L	37 Navigation	Read Fault Codes	
Yeti	2010-2018	5L	37 Navigation	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Yeti	2010-2018	5L	37 Navigation	Measuring Blocks	
Yeti	2010-2018	5L	37 Navigation	Output Tests	
Yeti	2010-2018	5L	37 Navigation	Specia Functions	
Yeti	2010-2018	5L	42 Driver-Door Elect.	Read Fault Codes	
Yeti	2010-2018	5L	42 Driver-Door Elect.	Clear Fault Codes	
Yeti	2010-2018	5L	42 Driver-Door Elect.	Measuring Blocks	
Yeti	2010-2018	5L	42 Driver-Door Elect.	Output Tests	
Yeti	2010-2018	5L	42 Driver-Door Elect.	Specia Functions	
Yeti	2010-2018	5L	44 Steering Assistance	Read Fault Codes	
Yeti	2010-2018	5L	44 Steering Assistance	Clear Fault Codes	
Yeti	2010-2018	5L	44 Steering Assistance	Measuring Blocks	
Yeti	2010-2018	5L	44 Steering Assistance	Output Tests	
Yeti	2010-2018	5L	44 Steering Assistance	Specia Functions	
Yeti	2010-2018	5L	46 Central Control Module	Read Fault Codes	
Yeti	2010-2018	5L	46 Central Control Module	Clear Fault Codes	
Yeti	2010-2018	5L	46 Central Control Module	Measuring Blocks	
Yeti	2010-2018	5L	46 Central Control Module	Output Tests	
Yeti	2010-2018	5L	46 Central Control Module	Specia Functions	
Yeti	2010-2018	5L	47 Soundsystem	Read Fault Codes	
Yeti	2010-2018	5L	47 Soundsystem	Clear Fault Codes	
Yeti	2010-2018	5L	47 Soundsystem	Measuring Blocks	
Yeti	2010-2018	5L	47 Soundsystem	Output Tests	
Yeti	2010-2018	5L	47 Soundsystem	Specia Functions	
Yeti	2010-2018	5L	4F Electronic Central Electric II	Read Fault Codes	
Yeti	2010-2018	5L	4F Electronic Central Electric II	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Yeti	2010-2018	5L	4F Electronic Central Electric II	Measuring Blocks	
Yeti	2010-2018	5L	4F Electronic Central Electric II	Output Tests	
Yeti	2010-2018	5L	4F Electronic Central Electric II	Specia Functions	
Yeti	2010-2018	5L	52 Passe.-Door Elect.	Read Fault Codes	
Yeti	2010-2018	5L	52 Passe.-Door Elect.	Clear Fault Codes	
Yeti	2010-2018	5L	52 Passe.-Door Elect.	Measuring Blocks	
Yeti	2010-2018	5L	52 Passe.-Door Elect.	Output Tests	
Yeti	2010-2018	5L	52 Passe.-Door Elect.	Specia Functions	
Yeti	2010-2018	5L	55 Headlight Range Control	Read Fault Codes	
Yeti	2010-2018	5L	55 Headlight Range Control	Clear Fault Codes	
Yeti	2010-2018	5L	55 Headlight Range Control	Measuring Blocks	
Yeti	2010-2018	5L	55 Headlight Range Control	Output Tests	
Yeti	2010-2018	5L	55 Headlight Range Control	Specia Functions	
Yeti	2010-2018	5L	56 Radio	Read Fault Codes	
Yeti	2010-2018	5L	56 Radio	Clear Fault Codes	
Yeti	2010-2018	5L	56 Radio	Measuring Blocks	
Yeti	2010-2018	5L	56 Radio	Output Tests	
Yeti	2010-2018	5L	56 Radio	Specia Functions	
Yeti	2010-2018	5L	5F Information Electronic Equipment 1	Read Fault Codes	
Yeti	2010-2018	5L	5F Information Electronic Equipment 1	Clear Fault Codes	
Yeti	2010-2018	5L	5F Information Electronic Equipment 1	Measuring Blocks	
Yeti	2010-2018	5L	5F Information Electronic Equipment 1	Output Tests	
Yeti	2010-2018	5L	5F Information Electronic Equipment 1	Specia Functions	
Yeti	2010-2018	5L	61 Battery Control	Read Fault Codes	
Yeti	2010-2018	5L	61 Battery Control	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Yeti	2010-2018	5L	61 Battery Control	Measuring Blocks	
Yeti	2010-2018	5L	61 Battery Control	Output Tests	
Yeti	2010-2018	5L	61 Battery Control	Specia Functions	
Yeti	2010-2018	5L	62 LR-Door Electroni.	Read Fault Codes	
Yeti	2010-2018	5L	62 LR-Door Electroni.	Clear Fault Codes	
Yeti	2010-2018	5L	62 LR-Door Electroni.	Measuring Blocks	
Yeti	2010-2018	5L	62 LR-Door Electroni.	Output Tests	
Yeti	2010-2018	5L	62 LR-Door Electroni.	Specia Functions	
Yeti	2010-2018	5L	69 Trailer Function	Read Fault Codes	
Yeti	2010-2018	5L	69 Trailer Function	Clear Fault Codes	
Yeti	2010-2018	5L	69 Trailer Function	Measuring Blocks	
Yeti	2010-2018	5L	69 Trailer Function	Output Tests	
Yeti	2010-2018	5L	69 Trailer Function	Specia Functions	
Yeti	2010-2018	5L	72 RR-Door Electroni.	Read Fault Codes	
Yeti	2010-2018	5L	72 RR-Door Electroni.	Clear Fault Codes	
Yeti	2010-2018	5L	72 RR-Door Electroni.	Measuring Blocks	
Yeti	2010-2018	5L	72 RR-Door Electroni.	Output Tests	
Yeti	2010-2018	5L	72 RR-Door Electroni.	Specia Functions	
Yeti	2010-2018	5L	76 Parking Aid	Read Fault Codes	
Yeti	2010-2018	5L	76 Parking Aid	Clear Fault Codes	
Yeti	2010-2018	5L	76 Parking Aid	Measuring Blocks	
Yeti	2010-2018	5L	76 Parking Aid	Output Tests	
Yeti	2010-2018	5L	76 Parking Aid	Specia Functions	
Yeti	2010-2018	5L	77 Telephone	Read Fault Codes	
Yeti	2010-2018	5L	77 Telephone	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Yeti	2010-2018	5L	77 Telephone	Measuring Blocks	
Yeti	2010-2018	5L	77 Telephone	Output Tests	
Yeti	2010-2018	5L	77 Telephone	Specia Functions	
Yeti	2010-2018	5L	7D Auxiliary Heater	Read Fault Codes	
Yeti	2010-2018	5L	7D Auxiliary Heater	Clear Fault Codes	
Yeti	2010-2018	5L	7D Auxiliary Heater	Measuring Blocks	
Yeti	2010-2018	5L	7D Auxiliary Heater	Output Tests	
Yeti	2010-2018	5L	7D Auxiliary Heater	Specia Functions	
Kodiaq	2017-2018	NS	01 Engine Electronics	Read Fault Codes	
Kodiaq	2017-2018	NS	01 Engine Electronics	Clear Fault Codes	
Kodiaq	2017-2018	NS	01 Engine Electronics	Measuring Blocks	
Kodiaq	2017-2018	NS	01 Engine Electronics	Output Tests	
Kodiaq	2017-2018	NS	01 Engine Electronics	Specia Functions	
Kodiaq	2017-2018	NS	02 Transmission Electronics	Read Fault Codes	
Kodiaq	2017-2018	NS	02 Transmission Electronics	Clear Fault Codes	
Kodiaq	2017-2018	NS	02 Transmission Electronics	Measuring Blocks	
Kodiaq	2017-2018	NS	02 Transmission Electronics	Output Tests	
Kodiaq	2017-2018	NS	02 Transmission Electronics	Specia Functions	
Kodiaq	2017-2018	NS	03 Brake Electronics	Read Fault Codes	
Kodiaq	2017-2018	NS	03 Brake Electronics	Clear Fault Codes	
Kodiaq	2017-2018	NS	03 Brake Electronics	Measuring Blocks	
Kodiaq	2017-2018	NS	03 Brake Electronics	Output Tests	
Kodiaq	2017-2018	NS	03 Brake Electronics	Specia Functions	
Kodiaq	2017-2018	NS	08 AC/Heating Electronics	Read Fault Codes	
Kodiaq	2017-2018	NS	08 AC/Heating Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Kodiaq	2017-2018	NS	08 AC/Heating Electronics	Measuring Blocks	
Kodiaq	2017-2018	NS	08 AC/Heating Electronics	Output Tests	
Kodiaq	2017-2018	NS	08 AC/Heating Electronics	Specia Functions	
Kodiaq	2017-2018	NS	09 Electronic Ctrl Electronics	Read Fault Codes	
Kodiaq	2017-2018	NS	09 Electronic Ctrl Electronics	Clear Fault Codes	
Kodiaq	2017-2018	NS	09 Electronic Ctrl Electronics	Measuring Blocks	
Kodiaq	2017-2018	NS	09 Electronic Ctrl Electronics	Output Tests	
Kodiaq	2017-2018	NS	09 Electronic Ctrl Electronics	Specia Functions	
Kodiaq	2017-2018	NS	13 Distance Control	Read Fault Codes	
Kodiaq	2017-2018	NS	13 Distance Control	Clear Fault Codes	
Kodiaq	2017-2018	NS	13 Distance Control	Measuring Blocks	
Kodiaq	2017-2018	NS	13 Distance Control	Output Tests	
Kodiaq	2017-2018	NS	13 Distance Control	Specia Functions	
Kodiaq	2017-2018	NS	15 Airbags	Read Fault Codes	
Kodiaq	2017-2018	NS	15 Airbags	Clear Fault Codes	
Kodiaq	2017-2018	NS	15 Airbags	Measuring Blocks	
Kodiaq	2017-2018	NS	15 Airbags	Output Tests	
Kodiaq	2017-2018	NS	15 Airbags	Specia Functions	
Kodiaq	2017-2018	NS	16 Steering Wheel Electronics	Read Fault Codes	
Kodiaq	2017-2018	NS	16 Steering Wheel Electronics	Clear Fault Codes	
Kodiaq	2017-2018	NS	16 Steering Wheel Electronics	Measuring Blocks	
Kodiaq	2017-2018	NS	16 Steering Wheel Electronics	Output Tests	
Kodiaq	2017-2018	NS	16 Steering Wheel Electronics	Specia Functions	
Kodiaq	2017-2018	NS	17 Instrument Cluster	Read Fault Codes	
Kodiaq	2017-2018	NS	17 Instrument Cluster	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Kodiaq	2017-2018	NS	17 Instrument Cluster	Measuring Blocks	
Kodiaq	2017-2018	NS	17 Instrument Cluster	Output Tests	
Kodiaq	2017-2018	NS	17 Instrument Cluster	Specia Functions	
Kodiaq	2017-2018	NS	18 Aux Heating	Read Fault Codes	
Kodiaq	2017-2018	NS	18 Aux Heating	Clear Fault Codes	
Kodiaq	2017-2018	NS	18 Aux Heating	Measuring Blocks	
Kodiaq	2017-2018	NS	18 Aux Heating	Output Tests	
Kodiaq	2017-2018	NS	18 Aux Heating	Specia Functions	
Kodiaq	2017-2018	NS	19 Gateway Data Bus	Read Fault Codes	
Kodiaq	2017-2018	NS	19 Gateway Data Bus	Clear Fault Codes	
Kodiaq	2017-2018	NS	19 Gateway Data Bus	Measuring Blocks	
Kodiaq	2017-2018	NS	19 Gateway Data Bus	Output Tests	
Kodiaq	2017-2018	NS	19 Gateway Data Bus	Specia Functions	
Kodiaq	2017-2018	NS	20 High Beam Assistance Device	Read Fault Codes	
Kodiaq	2017-2018	NS	20 High Beam Assistance Device	Clear Fault Codes	
Kodiaq	2017-2018	NS	20 High Beam Assistance Device	Measuring Blocks	
Kodiaq	2017-2018	NS	20 High Beam Assistance Device	Output Tests	
Kodiaq	2017-2018	NS	20 High Beam Assistance Device	Specia Functions	
Kodiaq	2017-2018	NS	22 4WD Electronics	Read Fault Codes	
Kodiaq	2017-2018	NS	22 4WD Electronics	Clear Fault Codes	
Kodiaq	2017-2018	NS	22 4WD Electronics	Measuring Blocks	
Kodiaq	2017-2018	NS	22 4WD Electronics	Output Tests	
Kodiaq	2017-2018	NS	22 4WD Electronics	Specia Functions	
Kodiaq	2017-2018	NS	2B Steer Col Lock	Read Fault Codes	
Kodiaq	2017-2018	NS	2B Steer Col Lock	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Kodiaq	2017-2018	NS	2B Steer Col Lock	Measuring Blocks	
Kodiaq	2017-2018	NS	2B Steer Col Lock	Output Tests	
Kodiaq	2017-2018	NS	2B Steer Col Lock	Specia Functions	
Kodiaq	2017-2018	NS	32 Locking Electronisc	Read Fault Codes	
Kodiaq	2017-2018	NS	32 Locking Electronisc	Clear Fault Codes	
Kodiaq	2017-2018	NS	32 Locking Electronisc	Measuring Blocks	
Kodiaq	2017-2018	NS	32 Locking Electronisc	Output Tests	
Kodiaq	2017-2018	NS	32 Locking Electronisc	Specia Functions	
Kodiaq	2017-2018	NS	36 Driver`s Side Seat Adj.	Read Fault Codes	
Kodiaq	2017-2018	NS	36 Driver`s Side Seat Adj.	Clear Fault Codes	
Kodiaq	2017-2018	NS	36 Driver`s Side Seat Adj.	Measuring Blocks	
Kodiaq	2017-2018	NS	36 Driver`s Side Seat Adj.	Output Tests	
Kodiaq	2017-2018	NS	36 Driver`s Side Seat Adj.	Specia Functions	
Kodiaq	2017-2018	NS	3C Lane Departure Assistance System	Read Fault Codes	
Kodiaq	2017-2018	NS	3C Lane Departure Assistance System	Clear Fault Codes	
Kodiaq	2017-2018	NS	3C Lane Departure Assistance System	Measuring Blocks	
Kodiaq	2017-2018	NS	3C Lane Departure Assistance System	Output Tests	
Kodiaq	2017-2018	NS	3C Lane Departure Assistance System	Specia Functions	
Kodiaq	2017-2018	NS	42 Driver-Door Elect.	Read Fault Codes	
Kodiaq	2017-2018	NS	42 Driver-Door Elect.	Clear Fault Codes	
Kodiaq	2017-2018	NS	42 Driver-Door Elect.	Measuring Blocks	
Kodiaq	2017-2018	NS	42 Driver-Door Elect.	Output Tests	
Kodiaq	2017-2018	NS	42 Driver-Door Elect.	Specia Functions	
Kodiaq	2017-2018	NS	44 Steering Assistance	Read Fault Codes	
Kodiaq	2017-2018	NS	44 Steering Assistance	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Kodiaq	2017-2018	NS	44 Steering Assistance	Measuring Blocks	
Kodiaq	2017-2018	NS	44 Steering Assistance	Output Tests	
Kodiaq	2017-2018	NS	44 Steering Assistance	Specia Functions	
Kodiaq	2017-2018	NS	47 Soundsystem	Read Fault Codes	
Kodiaq	2017-2018	NS	47 Soundsystem	Clear Fault Codes	
Kodiaq	2017-2018	NS	47 Soundsystem	Measuring Blocks	
Kodiaq	2017-2018	NS	47 Soundsystem	Output Tests	
Kodiaq	2017-2018	NS	47 Soundsystem	Specia Functions	
Kodiaq	2017-2018	NS	52 Passe.-Door Elect.	Read Fault Codes	
Kodiaq	2017-2018	NS	52 Passe.-Door Elect.	Clear Fault Codes	
Kodiaq	2017-2018	NS	52 Passe.-Door Elect.	Measuring Blocks	
Kodiaq	2017-2018	NS	52 Passe.-Door Elect.	Output Tests	
Kodiaq	2017-2018	NS	52 Passe.-Door Elect.	Specia Functions	
Kodiaq	2017-2018	NS	55 Headlight Range Control	Read Fault Codes	
Kodiaq	2017-2018	NS	55 Headlight Range Control	Clear Fault Codes	
Kodiaq	2017-2018	NS	55 Headlight Range Control	Measuring Blocks	
Kodiaq	2017-2018	NS	55 Headlight Range Control	Output Tests	
Kodiaq	2017-2018	NS	55 Headlight Range Control	Specia Functions	
Kodiaq	2017-2018	NS	57 TV-Tuner	Read Fault Codes	
Kodiaq	2017-2018	NS	57 TV-Tuner	Clear Fault Codes	
Kodiaq	2017-2018	NS	57 TV-Tuner	Measuring Blocks	
Kodiaq	2017-2018	NS	57 TV-Tuner	Output Tests	
Kodiaq	2017-2018	NS	57 TV-Tuner	Specia Functions	
Kodiaq	2017-2018	NS	5F Information Electronic Equipment 1	Read Fault Codes	
Kodiaq	2017-2018	NS	5F Information Electronic Equipment 1	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Kodiaq	2017-2018	NS	5F Information Electronic Equipment 1	Measuring Blocks	
Kodiaq	2017-2018	NS	5F Information Electronic Equipment 1	Output Tests	
Kodiaq	2017-2018	NS	5F Information Electronic Equipment 1	Specia Functions	
Kodiaq	2017-2018	NS	65 Tyre Pressure Monitoring	Read Fault Codes	
Kodiaq	2017-2018	NS	65 Tyre Pressure Monitoring	Clear Fault Codes	
Kodiaq	2017-2018	NS	65 Tyre Pressure Monitoring	Measuring Blocks	
Kodiaq	2017-2018	NS	65 Tyre Pressure Monitoring	Output Tests	
Kodiaq	2017-2018	NS	65 Tyre Pressure Monitoring	Specia Functions	
Kodiaq	2017-2018	NS	69 Trailer Function	Read Fault Codes	
Kodiaq	2017-2018	NS	69 Trailer Function	Clear Fault Codes	
Kodiaq	2017-2018	NS	69 Trailer Function	Measuring Blocks	
Kodiaq	2017-2018	NS	69 Trailer Function	Output Tests	
Kodiaq	2017-2018	NS	69 Trailer Function	Specia Functions	
Kodiaq	2017-2018	NS	6C Rear Camera	Read Fault Codes	
Kodiaq	2017-2018	NS	6C Rear Camera	Clear Fault Codes	
Kodiaq	2017-2018	NS	6C Rear Camera	Measuring Blocks	
Kodiaq	2017-2018	NS	6C Rear Camera	Output Tests	
Kodiaq	2017-2018	NS	6C Rear Camera	Specia Functions	
Kodiaq	2017-2018	NS	6D Electronic Equipment of Trunk Lid	Read Fault Codes	
Kodiaq	2017-2018	NS	6D Electronic Equipment of Trunk Lid	Clear Fault Codes	
Kodiaq	2017-2018	NS	6D Electronic Equipment of Trunk Lid	Measuring Blocks	
Kodiaq	2017-2018	NS	6D Electronic Equipment of Trunk Lid	Output Tests	
Kodiaq	2017-2018	NS	6D Electronic Equipment of Trunk Lid	Specia Functions	
Kodiaq	2017-2018	NS	76 Parking Aid	Read Fault Codes	
Kodiaq	2017-2018	NS	76 Parking Aid	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Kodiaq	2017-2018	NS	76 Parking Aid	Measuring Blocks	
Kodiaq	2017-2018	NS	76 Parking Aid	Output Tests	
Kodiaq	2017-2018	NS	76 Parking Aid	Specia Functions	
Kodiaq	2017-2018	NS	A5 Frt Sens.Drv.Assist	Read Fault Codes	
Kodiaq	2017-2018	NS	A5 Frt Sens.Drv.Assist	Clear Fault Codes	
Kodiaq	2017-2018	NS	A5 Frt Sens.Drv.Assist	Measuring Blocks	
Kodiaq	2017-2018	NS	A5 Frt Sens.Drv.Assist	Output Tests	
Kodiaq	2017-2018	NS	A5 Frt Sens.Drv.Assist	Specia Functions	
Kodiaq	2017-2018	NS	A9 Struct.Borne Sound	Read Fault Codes	
Kodiaq	2017-2018	NS	A9 Struct.Borne Sound	Clear Fault Codes	
Kodiaq	2017-2018	NS	A9 Struct.Borne Sound	Measuring Blocks	
Kodiaq	2017-2018	NS	A9 Struct.Borne Sound	Output Tests	
Kodiaq	2017-2018	NS	A9 Struct.Borne Sound	Specia Functions	
Kodiaq	2017-2018	NS	B7 Access Start Interf	Read Fault Codes	
Kodiaq	2017-2018	NS	B7 Access Start Interf	Clear Fault Codes	
Kodiaq	2017-2018	NS	B7 Access Start Interf	Measuring Blocks	
Kodiaq	2017-2018	NS	B7 Access Start Interf	Output Tests	
Kodiaq	2017-2018	NS	B7 Access Start Interf	Specia Functions	
Yeti	2018	NU	01 Engine Electronics	Read Fault Codes	
Yeti	2018	NU	01 Engine Electronics	Clear Fault Codes	
Yeti	2018	NU	01 Engine Electronics	Measuring Blocks	
Yeti	2018	NU	01 Engine Electronics	Output Tests	
Yeti	2018	NU	01 Engine Electronics	Specia Functions	
Yeti	2018	NU	02 Transmission Electronics	Read Fault Codes	
Yeti	2018	NU	02 Transmission Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Yeti	2018	NU	02 Transmission Electronics	Measuring Blocks	
Yeti	2018	NU	02 Transmission Electronics	Output Tests	
Yeti	2018	NU	02 Transmission Electronics	Specia Functions	
Yeti	2018	NU	03 Brake Electronics	Read Fault Codes	
Yeti	2018	NU	03 Brake Electronics	Clear Fault Codes	
Yeti	2018	NU	03 Brake Electronics	Measuring Blocks	
Yeti	2018	NU	03 Brake Electronics	Output Tests	
Yeti	2018	NU	03 Brake Electronics	Specia Functions	
Yeti	2018	NU	08 AC/Heating Electronics	Read Fault Codes	
Yeti	2018	NU	08 AC/Heating Electronics	Clear Fault Codes	
Yeti	2018	NU	08 AC/Heating Electronics	Measuring Blocks	
Yeti	2018	NU	08 AC/Heating Electronics	Output Tests	
Yeti	2018	NU	08 AC/Heating Electronics	Specia Functions	
Yeti	2018	NU	09 Electronic Ctrl Electronics	Read Fault Codes	
Yeti	2018	NU	09 Electronic Ctrl Electronics	Clear Fault Codes	
Yeti	2018	NU	09 Electronic Ctrl Electronics	Measuring Blocks	
Yeti	2018	NU	09 Electronic Ctrl Electronics	Output Tests	
Yeti	2018	NU	09 Electronic Ctrl Electronics	Specia Functions	
Yeti	2018	NU	13 Distance Control	Read Fault Codes	
Yeti	2018	NU	13 Distance Control	Clear Fault Codes	
Yeti	2018	NU	13 Distance Control	Measuring Blocks	
Yeti	2018	NU	13 Distance Control	Output Tests	
Yeti	2018	NU	13 Distance Control	Specia Functions	
Yeti	2018	NU	15 Airbags	Read Fault Codes	
Yeti	2018	NU	15 Airbags	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Yeti	2018	NU	15 Airbags	Measuring Blocks	
Yeti	2018	NU	15 Airbags	Output Tests	
Yeti	2018	NU	15 Airbags	Specia Functions	
Yeti	2018	NU	16 Steering Wheel Electronics	Read Fault Codes	
Yeti	2018	NU	16 Steering Wheel Electronics	Clear Fault Codes	
Yeti	2018	NU	16 Steering Wheel Electronics	Measuring Blocks	
Yeti	2018	NU	16 Steering Wheel Electronics	Output Tests	
Yeti	2018	NU	16 Steering Wheel Electronics	Specia Functions	
Yeti	2018	NU	17 Instrument Cluster	Read Fault Codes	
Yeti	2018	NU	17 Instrument Cluster	Clear Fault Codes	
Yeti	2018	NU	17 Instrument Cluster	Measuring Blocks	
Yeti	2018	NU	17 Instrument Cluster	Output Tests	
Yeti	2018	NU	17 Instrument Cluster	Specia Functions	
Yeti	2018	NU	18 Aux Heating	Read Fault Codes	
Yeti	2018	NU	18 Aux Heating	Clear Fault Codes	
Yeti	2018	NU	18 Aux Heating	Measuring Blocks	
Yeti	2018	NU	18 Aux Heating	Output Tests	
Yeti	2018	NU	18 Aux Heating	Specia Functions	
Yeti	2018	NU	19 Gateway Data Bus	Read Fault Codes	
Yeti	2018	NU	19 Gateway Data Bus	Clear Fault Codes	
Yeti	2018	NU	19 Gateway Data Bus	Measuring Blocks	
Yeti	2018	NU	19 Gateway Data Bus	Output Tests	
Yeti	2018	NU	19 Gateway Data Bus	Specia Functions	
Yeti	2018	NU	20 High Beam Assistance Device	Read Fault Codes	
Yeti	2018	NU	20 High Beam Assistance Device	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Yeti	2018	NU	20 High Beam Assistance Device	Measuring Blocks	
Yeti	2018	NU	20 High Beam Assistance Device	Output Tests	
Yeti	2018	NU	20 High Beam Assistance Device	Specia Functions	
Yeti	2018	NU	22 4WD Electronics	Read Fault Codes	
Yeti	2018	NU	22 4WD Electronics	Clear Fault Codes	
Yeti	2018	NU	22 4WD Electronics	Measuring Blocks	
Yeti	2018	NU	22 4WD Electronics	Output Tests	
Yeti	2018	NU	22 4WD Electronics	Specia Functions	
Yeti	2018	NU	2B Steer Col Lock	Read Fault Codes	
Yeti	2018	NU	2B Steer Col Lock	Clear Fault Codes	
Yeti	2018	NU	2B Steer Col Lock	Measuring Blocks	
Yeti	2018	NU	2B Steer Col Lock	Output Tests	
Yeti	2018	NU	2B Steer Col Lock	Specia Functions	
Yeti	2018	NU	32 Locking Electronisc	Read Fault Codes	
Yeti	2018	NU	32 Locking Electronisc	Clear Fault Codes	
Yeti	2018	NU	32 Locking Electronisc	Measuring Blocks	
Yeti	2018	NU	32 Locking Electronisc	Output Tests	
Yeti	2018	NU	32 Locking Electronisc	Specia Functions	
Yeti	2018	NU	36 Driver`s Side Seat Adj.	Read Fault Codes	
Yeti	2018	NU	36 Driver`s Side Seat Adj.	Clear Fault Codes	
Yeti	2018	NU	36 Driver`s Side Seat Adj.	Measuring Blocks	
Yeti	2018	NU	36 Driver`s Side Seat Adj.	Output Tests	
Yeti	2018	NU	36 Driver`s Side Seat Adj.	Specia Functions	
Yeti	2018	NU	3C Lane Departure Assistance System	Read Fault Codes	
Yeti	2018	NU	3C Lane Departure Assistance System	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Yeti	2018	NU	3C Lane Departure Assistance System	Measuring Blocks	
Yeti	2018	NU	3C Lane Departure Assistance System	Output Tests	
Yeti	2018	NU	3C Lane Departure Assistance System	Specia Functions	
Yeti	2018	NU	42 Driver-Door Elect.	Read Fault Codes	
Yeti	2018	NU	42 Driver-Door Elect.	Clear Fault Codes	
Yeti	2018	NU	42 Driver-Door Elect.	Measuring Blocks	
Yeti	2018	NU	42 Driver-Door Elect.	Output Tests	
Yeti	2018	NU	42 Driver-Door Elect.	Specia Functions	
Yeti	2018	NU	44 Steering Assistance	Read Fault Codes	
Yeti	2018	NU	44 Steering Assistance	Clear Fault Codes	
Yeti	2018	NU	44 Steering Assistance	Measuring Blocks	
Yeti	2018	NU	44 Steering Assistance	Output Tests	
Yeti	2018	NU	44 Steering Assistance	Specia Functions	
Yeti	2018	NU	47 Soundsystem	Read Fault Codes	
Yeti	2018	NU	47 Soundsystem	Clear Fault Codes	
Yeti	2018	NU	47 Soundsystem	Measuring Blocks	
Yeti	2018	NU	47 Soundsystem	Output Tests	
Yeti	2018	NU	47 Soundsystem	Specia Functions	
Yeti	2018	NU	52 Passe.-Door Elect.	Read Fault Codes	
Yeti	2018	NU	52 Passe.-Door Elect.	Clear Fault Codes	
Yeti	2018	NU	52 Passe.-Door Elect.	Measuring Blocks	
Yeti	2018	NU	52 Passe.-Door Elect.	Output Tests	
Yeti	2018	NU	52 Passe.-Door Elect.	Specia Functions	
Yeti	2018	NU	55 Headlight Range Control	Read Fault Codes	
Yeti	2018	NU	55 Headlight Range Control	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Yeti	2018	NU	55 Headlight Range Control	Measuring Blocks	
Yeti	2018	NU	55 Headlight Range Control	Output Tests	
Yeti	2018	NU	55 Headlight Range Control	Specia Functions	
Yeti	2018	NU	57 TV-Tuner	Read Fault Codes	
Yeti	2018	NU	57 TV-Tuner	Clear Fault Codes	
Yeti	2018	NU	57 TV-Tuner	Measuring Blocks	
Yeti	2018	NU	57 TV-Tuner	Output Tests	
Yeti	2018	NU	57 TV-Tuner	Specia Functions	
Yeti	2018	NU	5F Information Electronic Equipment 1	Read Fault Codes	
Yeti	2018	NU	5F Information Electronic Equipment 1	Clear Fault Codes	
Yeti	2018	NU	5F Information Electronic Equipment 1	Measuring Blocks	
Yeti	2018	NU	5F Information Electronic Equipment 1	Output Tests	
Yeti	2018	NU	5F Information Electronic Equipment 1	Specia Functions	
Yeti	2018	NU	65 Tyre Pressure Monitoring	Read Fault Codes	
Yeti	2018	NU	65 Tyre Pressure Monitoring	Clear Fault Codes	
Yeti	2018	NU	65 Tyre Pressure Monitoring	Measuring Blocks	
Yeti	2018	NU	65 Tyre Pressure Monitoring	Output Tests	
Yeti	2018	NU	65 Tyre Pressure Monitoring	Specia Functions	
Yeti	2018	NU	69 Trailer Function	Read Fault Codes	
Yeti	2018	NU	69 Trailer Function	Clear Fault Codes	
Yeti	2018	NU	69 Trailer Function	Measuring Blocks	
Yeti	2018	NU	69 Trailer Function	Output Tests	
Yeti	2018	NU	69 Trailer Function	Specia Functions	
Yeti	2018	NU	6C Rear Camera	Read Fault Codes	
Yeti	2018	NU	6C Rear Camera	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Yeti	2018	NU	6C Rear Camera	Measuring Blocks	
Yeti	2018	NU	6C Rear Camera	Output Tests	
Yeti	2018	NU	6C Rear Camera	Specia Functions	
Yeti	2018	NU	6D Electronic Equipment of Trunk Lid	Read Fault Codes	
Yeti	2018	NU	6D Electronic Equipment of Trunk Lid	Clear Fault Codes	
Yeti	2018	NU	6D Electronic Equipment of Trunk Lid	Measuring Blocks	
Yeti	2018	NU	6D Electronic Equipment of Trunk Lid	Output Tests	
Yeti	2018	NU	6D Electronic Equipment of Trunk Lid	Specia Functions	
Yeti	2018	NU	76 Parking Aid	Read Fault Codes	
Yeti	2018	NU	76 Parking Aid	Clear Fault Codes	
Yeti	2018	NU	76 Parking Aid	Measuring Blocks	
Yeti	2018	NU	76 Parking Aid	Output Tests	
Yeti	2018	NU	76 Parking Aid	Specia Functions	
Yeti	2018	NU	A5 Frt Sens.Drv.Assist	Read Fault Codes	
Yeti	2018	NU	A5 Frt Sens.Drv.Assist	Clear Fault Codes	
Yeti	2018	NU	A5 Frt Sens.Drv.Assist	Measuring Blocks	
Yeti	2018	NU	A5 Frt Sens.Drv.Assist	Output Tests	
Yeti	2018	NU	A5 Frt Sens.Drv.Assist	Specia Functions	
Yeti	2018	NU	A9 Struct.Borne Sound	Read Fault Codes	
Yeti	2018	NU	A9 Struct.Borne Sound	Clear Fault Codes	
Yeti	2018	NU	A9 Struct.Borne Sound	Measuring Blocks	
Yeti	2018	NU	A9 Struct.Borne Sound	Output Tests	
Yeti	2018	NU	A9 Struct.Borne Sound	Specia Functions	
Yeti	2018	NU	B7 Access Start Interf	Read Fault Codes	
Yeti	2018	NU	B7 Access Start Interf	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Yeti	2018	NU	B7 Access Start Interf	Measuring Blocks	
Yeti	2018	NU	B7 Access Start Interf	Output Tests	
Yeti	2018	NU	B7 Access Start Interf	Specia Functions	
Octavia	2007-2009	1Z	01 Engine Electronics	Read Fault Codes	
Octavia	2007-2009	1Z	01 Engine Electronics	Clear Fault Codes	
Octavia	2007-2009	1Z	01 Engine Electronics	Measuring Blocks	
Octavia	2007-2009	1Z	01 Engine Electronics	Output Tests	
Octavia	2007-2009	1Z	01 Engine Electronics	Specia Functions	
Octavia	2007-2009	1Z	02 Transmission Electronics	Read Fault Codes	
Octavia	2007-2009	1Z	02 Transmission Electronics	Clear Fault Codes	
Octavia	2007-2009	1Z	02 Transmission Electronics	Measuring Blocks	
Octavia	2007-2009	1Z	02 Transmission Electronics	Output Tests	
Octavia	2007-2009	1Z	02 Transmission Electronics	Specia Functions	
Octavia	2007-2009	1Z	03 Brake Electronics	Read Fault Codes	
Octavia	2007-2009	1Z	03 Brake Electronics	Clear Fault Codes	
Octavia	2007-2009	1Z	03 Brake Electronics	Measuring Blocks	
Octavia	2007-2009	1Z	03 Brake Electronics	Output Tests	
Octavia	2007-2009	1Z	03 Brake Electronics	Specia Functions	
Octavia	2007-2009	1Z	08 AC/Heating Electronics	Read Fault Codes	
Octavia	2007-2009	1Z	08 AC/Heating Electronics	Clear Fault Codes	
Octavia	2007-2009	1Z	08 AC/Heating Electronics	Measuring Blocks	
Octavia	2007-2009	1Z	08 AC/Heating Electronics	Output Tests	
Octavia	2007-2009	1Z	08 AC/Heating Electronics	Specia Functions	
Octavia	2007-2009	1Z	09 Electronic Ctrl Electronics	Read Fault Codes	
Octavia	2007-2009	1Z	09 Electronic Ctrl Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia	2007-2009	1Z	09 Electronic Ctrl Electronics	Measuring Blocks	
Octavia	2007-2009	1Z	09 Electronic Ctrl Electronics	Output Tests	
Octavia	2007-2009	1Z	09 Electronic Ctrl Electronics	Specia Functions	
Octavia	2007-2009	1Z	15 Airbags	Read Fault Codes	
Octavia	2007-2009	1Z	15 Airbags	Clear Fault Codes	
Octavia	2007-2009	1Z	15 Airbags	Measuring Blocks	
Octavia	2007-2009	1Z	15 Airbags	Output Tests	
Octavia	2007-2009	1Z	15 Airbags	Specia Functions	
Octavia	2007-2009	1Z	16 Steering Wheel Electronics	Read Fault Codes	
Octavia	2007-2009	1Z	16 Steering Wheel Electronics	Clear Fault Codes	
Octavia	2007-2009	1Z	16 Steering Wheel Electronics	Measuring Blocks	
Octavia	2007-2009	1Z	16 Steering Wheel Electronics	Output Tests	
Octavia	2007-2009	1Z	16 Steering Wheel Electronics	Specia Functions	
Octavia	2007-2009	1Z	17 Instrument Cluster	Read Fault Codes	
Octavia	2007-2009	1Z	17 Instrument Cluster	Clear Fault Codes	
Octavia	2007-2009	1Z	17 Instrument Cluster	Measuring Blocks	
Octavia	2007-2009	1Z	17 Instrument Cluster	Output Tests	
Octavia	2007-2009	1Z	17 Instrument Cluster	Specia Functions	
Octavia	2007-2009	1Z	18 Aux Heating	Read Fault Codes	
Octavia	2007-2009	1Z	18 Aux Heating	Clear Fault Codes	
Octavia	2007-2009	1Z	18 Aux Heating	Measuring Blocks	
Octavia	2007-2009	1Z	18 Aux Heating	Output Tests	
Octavia	2007-2009	1Z	18 Aux Heating	Specia Functions	
Octavia	2007-2009	1Z	19 Gateway Data Bus	Read Fault Codes	
Octavia	2007-2009	1Z	19 Gateway Data Bus	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia	2007-2009	1Z	19 Gateway Data Bus	Measuring Blocks	
Octavia	2007-2009	1Z	19 Gateway Data Bus	Output Tests	
Octavia	2007-2009	1Z	19 Gateway Data Bus	Specia Functions	
Octavia	2007-2009	1Z	22 4WD Electronics	Read Fault Codes	
Octavia	2007-2009	1Z	22 4WD Electronics	Clear Fault Codes	
Octavia	2007-2009	1Z	22 4WD Electronics	Measuring Blocks	
Octavia	2007-2009	1Z	22 4WD Electronics	Output Tests	
Octavia	2007-2009	1Z	22 4WD Electronics	Specia Functions	
Octavia	2007-2009	1Z	25 Immobilizer	Read Fault Codes	
Octavia	2007-2009	1Z	25 Immobilizer	Clear Fault Codes	
Octavia	2007-2009	1Z	25 Immobilizer	Measuring Blocks	
Octavia	2007-2009	1Z	25 Immobilizer	Output Tests	
Octavia	2007-2009	1Z	25 Immobilizer	Specia Functions	
Octavia	2007-2009	1Z	36 Driver`s Side Seat Adj.	Read Fault Codes	
Octavia	2007-2009	1Z	36 Driver`s Side Seat Adj.	Clear Fault Codes	
Octavia	2007-2009	1Z	36 Driver`s Side Seat Adj.	Measuring Blocks	
Octavia	2007-2009	1Z	36 Driver`s Side Seat Adj.	Output Tests	
Octavia	2007-2009	1Z	36 Driver`s Side Seat Adj.	Specia Functions	
Octavia	2007-2009	1Z	37 Navigation	Read Fault Codes	
Octavia	2007-2009	1Z	37 Navigation	Clear Fault Codes	
Octavia	2007-2009	1Z	37 Navigation	Measuring Blocks	
Octavia	2007-2009	1Z	37 Navigation	Output Tests	
Octavia	2007-2009	1Z	37 Navigation	Specia Functions	
Octavia	2007-2009	1Z	42 Driver-Door Elect.	Read Fault Codes	
Octavia	2007-2009	1Z	42 Driver-Door Elect.	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia	2007-2009	1Z	42 Driver-Door Elect.	Measuring Blocks	
Octavia	2007-2009	1Z	42 Driver-Door Elect.	Output Tests	
Octavia	2007-2009	1Z	42 Driver-Door Elect.	Specia Functions	
Octavia	2007-2009	1Z	44 Steering Assistance	Read Fault Codes	
Octavia	2007-2009	1Z	44 Steering Assistance	Clear Fault Codes	
Octavia	2007-2009	1Z	44 Steering Assistance	Measuring Blocks	
Octavia	2007-2009	1Z	44 Steering Assistance	Output Tests	
Octavia	2007-2009	1Z	44 Steering Assistance	Specia Functions	
Octavia	2007-2009	1Z	46 Central Control Module	Read Fault Codes	
Octavia	2007-2009	1Z	46 Central Control Module	Clear Fault Codes	
Octavia	2007-2009	1Z	46 Central Control Module	Measuring Blocks	
Octavia	2007-2009	1Z	46 Central Control Module	Output Tests	
Octavia	2007-2009	1Z	46 Central Control Module	Specia Functions	
Octavia	2007-2009	1Z	47 Soundsystem	Read Fault Codes	
Octavia	2007-2009	1Z	47 Soundsystem	Clear Fault Codes	
Octavia	2007-2009	1Z	47 Soundsystem	Measuring Blocks	
Octavia	2007-2009	1Z	47 Soundsystem	Output Tests	
Octavia	2007-2009	1Z	47 Soundsystem	Specia Functions	
Octavia	2007-2009	1Z	52 Passe.-Door Elect.	Read Fault Codes	
Octavia	2007-2009	1Z	52 Passe.-Door Elect.	Clear Fault Codes	
Octavia	2007-2009	1Z	52 Passe.-Door Elect.	Measuring Blocks	
Octavia	2007-2009	1Z	52 Passe.-Door Elect.	Output Tests	
Octavia	2007-2009	1Z	52 Passe.-Door Elect.	Specia Functions	
Octavia	2007-2009	1Z	55 Headlight Range Control	Read Fault Codes	
Octavia	2007-2009	1Z	55 Headlight Range Control	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia	2007-2009	1Z	55 Headlight Range Control	Measuring Blocks	
Octavia	2007-2009	1Z	55 Headlight Range Control	Output Tests	
Octavia	2007-2009	1Z	55 Headlight Range Control	Specia Functions	
Octavia	2007-2009	1Z	56 Radio	Read Fault Codes	
Octavia	2007-2009	1Z	56 Radio	Clear Fault Codes	
Octavia	2007-2009	1Z	56 Radio	Measuring Blocks	
Octavia	2007-2009	1Z	56 Radio	Output Tests	
Octavia	2007-2009	1Z	56 Radio	Specia Functions	
Octavia	2007-2009	1Z	62 LR-Door Electroni.	Read Fault Codes	
Octavia	2007-2009	1Z	62 LR-Door Electroni.	Clear Fault Codes	
Octavia	2007-2009	1Z	62 LR-Door Electroni.	Measuring Blocks	
Octavia	2007-2009	1Z	62 LR-Door Electroni.	Output Tests	
Octavia	2007-2009	1Z	62 LR-Door Electroni.	Specia Functions	
Octavia	2007-2009	1Z	69 Trailer Function	Read Fault Codes	
Octavia	2007-2009	1Z	69 Trailer Function	Clear Fault Codes	
Octavia	2007-2009	1Z	69 Trailer Function	Measuring Blocks	
Octavia	2007-2009	1Z	69 Trailer Function	Output Tests	
Octavia	2007-2009	1Z	69 Trailer Function	Specia Functions	
Octavia	2007-2009	1Z	72 RR-Door Electroni.	Read Fault Codes	
Octavia	2007-2009	1Z	72 RR-Door Electroni.	Clear Fault Codes	
Octavia	2007-2009	1Z	72 RR-Door Electroni.	Measuring Blocks	
Octavia	2007-2009	1Z	72 RR-Door Electroni.	Output Tests	
Octavia	2007-2009	1Z	72 RR-Door Electroni.	Specia Functions	
Octavia	2007-2009	1Z	76 Parking Aid	Read Fault Codes	
Octavia	2007-2009	1Z	76 Parking Aid	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia	2007-2009	1Z	76 Parking Aid	Measuring Blocks	
Octavia	2007-2009	1Z	76 Parking Aid	Output Tests	
Octavia	2007-2009	1Z	76 Parking Aid	Specia Functions	
Octavia	2007-2009	1Z	77 Telephone	Read Fault Codes	
Octavia	2007-2009	1Z	77 Telephone	Clear Fault Codes	
Octavia	2007-2009	1Z	77 Telephone	Measuring Blocks	
Octavia	2007-2009	1Z	77 Telephone	Output Tests	
Octavia	2007-2009	1Z	77 Telephone	Specia Functions	
Octavia	2007-2009	1Z	7D Auxiliary Heater	Read Fault Codes	
Octavia	2007-2009	1Z	7D Auxiliary Heater	Clear Fault Codes	
Octavia	2007-2009	1Z	7D Auxiliary Heater	Measuring Blocks	
Octavia	2007-2009	1Z	7D Auxiliary Heater	Output Tests	
Octavia	2007-2009	1Z	7D Auxiliary Heater	Specia Functions	
Fabia	2008-2016	55	01 Engine Electronics	Read Fault Codes	
Fabia	2008-2016	55	01 Engine Electronics	Clear Fault Codes	
Fabia	2008-2016	55	01 Engine Electronics	Measuring Blocks	
Fabia	2008-2016	55	01 Engine Electronics	Output Tests	
Fabia	2008-2016	55	01 Engine Electronics	Specia Functions	
Fabia	2008-2016	55	02 Transmission Electronics	Read Fault Codes	
Fabia	2008-2016	55	02 Transmission Electronics	Clear Fault Codes	
Fabia	2008-2016	55	02 Transmission Electronics	Measuring Blocks	
Fabia	2008-2016	55	02 Transmission Electronics	Output Tests	
Fabia	2008-2016	55	02 Transmission Electronics	Specia Functions	
Fabia	2008-2016	55	03 Brake Electronics	Read Fault Codes	
Fabia	2008-2016	55	03 Brake Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia	2008-2016	55	03 Brake Electronics	Measuring Blocks	
Fabia	2008-2016	55	03 Brake Electronics	Output Tests	
Fabia	2008-2016	55	03 Brake Electronics	Specia Functions	
Fabia	2008-2016	55	08 AC/Heating Electronics	Read Fault Codes	
Fabia	2008-2016	55	08 AC/Heating Electronics	Clear Fault Codes	
Fabia	2008-2016	55	08 AC/Heating Electronics	Measuring Blocks	
Fabia	2008-2016	55	08 AC/Heating Electronics	Output Tests	
Fabia	2008-2016	55	08 AC/Heating Electronics	Specia Functions	
Fabia	2008-2016	55	09 Electronic Ctrl Electronics	Read Fault Codes	
Fabia	2008-2016	55	09 Electronic Ctrl Electronics	Clear Fault Codes	
Fabia	2008-2016	55	09 Electronic Ctrl Electronics	Measuring Blocks	
Fabia	2008-2016	55	09 Electronic Ctrl Electronics	Output Tests	
Fabia	2008-2016	55	09 Electronic Ctrl Electronics	Specia Functions	
Fabia	2008-2016	55	15 Airbags	Read Fault Codes	
Fabia	2008-2016	55	15 Airbags	Clear Fault Codes	
Fabia	2008-2016	55	15 Airbags	Measuring Blocks	
Fabia	2008-2016	55	15 Airbags	Output Tests	
Fabia	2008-2016	55	15 Airbags	Specia Functions	
Fabia	2008-2016	55	17 Instrument Cluster	Read Fault Codes	
Fabia	2008-2016	55	17 Instrument Cluster	Clear Fault Codes	
Fabia	2008-2016	55	17 Instrument Cluster	Measuring Blocks	
Fabia	2008-2016	55	17 Instrument Cluster	Output Tests	
Fabia	2008-2016	55	17 Instrument Cluster	Specia Functions	
Fabia	2008-2016	55	19 Gateway Data Bus	Read Fault Codes	
Fabia	2008-2016	55	19 Gateway Data Bus	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia	2008-2016	55	19 Gateway Data Bus	Measuring Blocks	
Fabia	2008-2016	55	19 Gateway Data Bus	Output Tests	
Fabia	2008-2016	55	19 Gateway Data Bus	Specia Functions	
Fabia	2008-2016	55	25 Immobilizer	Read Fault Codes	
Fabia	2008-2016	55	25 Immobilizer	Clear Fault Codes	
Fabia	2008-2016	55	25 Immobilizer	Measuring Blocks	
Fabia	2008-2016	55	25 Immobilizer	Output Tests	
Fabia	2008-2016	55	25 Immobilizer	Specia Functions	
Fabia	2008-2016	55	44 Steering Assistance	Read Fault Codes	
Fabia	2008-2016	55	44 Steering Assistance	Clear Fault Codes	
Fabia	2008-2016	55	44 Steering Assistance	Measuring Blocks	
Fabia	2008-2016	55	44 Steering Assistance	Output Tests	
Fabia	2008-2016	55	44 Steering Assistance	Specia Functions	
Rapid Spaceback	2014-2018	60	01 Engine Electronics	Read Fault Codes	
Rapid Spaceback	2014-2018	60	01 Engine Electronics	Clear Fault Codes	
Rapid Spaceback	2014-2018	60	01 Engine Electronics	Measuring Blocks	
Rapid Spaceback	2014-2018	60	01 Engine Electronics	Output Tests	
Rapid Spaceback	2014-2018	60	01 Engine Electronics	Specia Functions	
Rapid Spaceback	2014-2018	60	02 Transmission Electronics	Read Fault Codes	
Rapid Spaceback	2014-2018	60	02 Transmission Electronics	Clear Fault Codes	
Rapid Spaceback	2014-2018	60	02 Transmission Electronics	Measuring Blocks	
Rapid Spaceback	2014-2018	60	02 Transmission Electronics	Output Tests	
Rapid Spaceback	2014-2018	60	02 Transmission Electronics	Specia Functions	
Rapid Spaceback	2014-2018	60	03 Brake Electronics	Read Fault Codes	
Rapid Spaceback	2014-2018	60	03 Brake Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Rapid Spaceback	2014-2018	60	03 Brake Electronics	Measuring Blocks	
Rapid Spaceback	2014-2018	60	03 Brake Electronics	Output Tests	
Rapid Spaceback	2014-2018	60	03 Brake Electronics	Specia Functions	
Rapid Spaceback	2014-2018	60	04 Steering Position	Read Fault Codes	
Rapid Spaceback	2014-2018	60	04 Steering Position	Clear Fault Codes	
Rapid Spaceback	2014-2018	60	04 Steering Position	Measuring Blocks	
Rapid Spaceback	2014-2018	60	04 Steering Position	Output Tests	
Rapid Spaceback	2014-2018	60	04 Steering Position	Specia Functions	
Rapid Spaceback	2014-2018	60	08 AC/Heating Electronics	Read Fault Codes	
Rapid Spaceback	2014-2018	60	08 AC/Heating Electronics	Clear Fault Codes	
Rapid Spaceback	2014-2018	60	08 AC/Heating Electronics	Measuring Blocks	
Rapid Spaceback	2014-2018	60	08 AC/Heating Electronics	Output Tests	
Rapid Spaceback	2014-2018	60	08 AC/Heating Electronics	Specia Functions	
Rapid Spaceback	2014-2018	60	09 Electronic Ctrl Electronics	Read Fault Codes	
Rapid Spaceback	2014-2018	60	09 Electronic Ctrl Electronics	Clear Fault Codes	
Rapid Spaceback	2014-2018	60	09 Electronic Ctrl Electronics	Measuring Blocks	
Rapid Spaceback	2014-2018	60	09 Electronic Ctrl Electronics	Output Tests	
Rapid Spaceback	2014-2018	60	09 Electronic Ctrl Electronics	Specia Functions	
Rapid Spaceback	2014-2018	60	15 Airbags	Read Fault Codes	
Rapid Spaceback	2014-2018	60	15 Airbags	Clear Fault Codes	
Rapid Spaceback	2014-2018	60	15 Airbags	Measuring Blocks	
Rapid Spaceback	2014-2018	60	15 Airbags	Output Tests	
Rapid Spaceback	2014-2018	60	15 Airbags	Specia Functions	
Rapid Spaceback	2014-2018	60	17 Instrument Cluster	Read Fault Codes	
Rapid Spaceback	2014-2018	60	17 Instrument Cluster	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Rapid Spaceback	2014-2018	60	17 Instrument Cluster	Measuring Blocks	
Rapid Spaceback	2014-2018	60	17 Instrument Cluster	Output Tests	
Rapid Spaceback	2014-2018	60	17 Instrument Cluster	Specia Functions	
Rapid Spaceback	2014-2018	60	19 Gateway Data Bus	Read Fault Codes	
Rapid Spaceback	2014-2018	60	19 Gateway Data Bus	Clear Fault Codes	
Rapid Spaceback	2014-2018	60	19 Gateway Data Bus	Measuring Blocks	
Rapid Spaceback	2014-2018	60	19 Gateway Data Bus	Output Tests	
Rapid Spaceback	2014-2018	60	19 Gateway Data Bus	Specia Functions	
Rapid Spaceback	2014-2018	60	25 Immobilizer	Read Fault Codes	
Rapid Spaceback	2014-2018	60	25 Immobilizer	Clear Fault Codes	
Rapid Spaceback	2014-2018	60	25 Immobilizer	Measuring Blocks	
Rapid Spaceback	2014-2018	60	25 Immobilizer	Output Tests	
Rapid Spaceback	2014-2018	60	25 Immobilizer	Specia Functions	
Rapid Spaceback	2014-2018	60	37 Navigation	Read Fault Codes	
Rapid Spaceback	2014-2018	60	37 Navigation	Clear Fault Codes	
Rapid Spaceback	2014-2018	60	37 Navigation	Measuring Blocks	
Rapid Spaceback	2014-2018	60	37 Navigation	Output Tests	
Rapid Spaceback	2014-2018	60	37 Navigation	Specia Functions	
Rapid Spaceback	2014-2018	60	44 Steering Assistance	Read Fault Codes	
Rapid Spaceback	2014-2018	60	44 Steering Assistance	Clear Fault Codes	
Rapid Spaceback	2014-2018	60	44 Steering Assistance	Measuring Blocks	
Rapid Spaceback	2014-2018	60	44 Steering Assistance	Output Tests	
Rapid Spaceback	2014-2018	60	44 Steering Assistance	Specia Functions	
Rapid Spaceback	2014-2018	60	56 Radio	Read Fault Codes	
Rapid Spaceback	2014-2018	60	56 Radio	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Rapid Spaceback	2014-2018	60	56 Radio	Measuring Blocks	
Rapid Spaceback	2014-2018	60	56 Radio	Output Tests	
Rapid Spaceback	2014-2018	60	56 Radio	Specia Functions	
Rapid Spaceback	2014-2018	60	61 Battery Control	Read Fault Codes	
Rapid Spaceback	2014-2018	60	61 Battery Control	Clear Fault Codes	
Rapid Spaceback	2014-2018	60	61 Battery Control	Measuring Blocks	
Rapid Spaceback	2014-2018	60	61 Battery Control	Output Tests	
Rapid Spaceback	2014-2018	60	61 Battery Control	Specia Functions	
Rapid	2013-2018	NG	01 Engine Electronics	Read Fault Codes	
Rapid	2013-2018	NG	01 Engine Electronics	Clear Fault Codes	
Rapid	2013-2018	NG	01 Engine Electronics	Measuring Blocks	
Rapid	2013-2018	NG	01 Engine Electronics	Output Tests	
Rapid	2013-2018	NG	01 Engine Electronics	Specia Functions	
Rapid	2013-2018	NG	02 Transmission Electronics	Read Fault Codes	
Rapid	2013-2018	NG	02 Transmission Electronics	Clear Fault Codes	
Rapid	2013-2018	NG	02 Transmission Electronics	Measuring Blocks	
Rapid	2013-2018	NG	02 Transmission Electronics	Output Tests	
Rapid	2013-2018	NG	02 Transmission Electronics	Specia Functions	
Rapid	2013-2018	NG	03 Brake Electronics	Read Fault Codes	
Rapid	2013-2018	NG	03 Brake Electronics	Clear Fault Codes	
Rapid	2013-2018	NG	03 Brake Electronics	Measuring Blocks	
Rapid	2013-2018	NG	03 Brake Electronics	Output Tests	
Rapid	2013-2018	NG	03 Brake Electronics	Specia Functions	
Rapid	2013-2018	NG	04 Steering Position	Read Fault Codes	
Rapid	2013-2018	NG	04 Steering Position	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Rapid	2013-2018	NG	04 Steering Position	Measuring Blocks	
Rapid	2013-2018	NG	04 Steering Position	Output Tests	
Rapid	2013-2018	NG	04 Steering Position	Specia Functions	
Rapid	2013-2018	NG	08 AC/Heating Electronics	Read Fault Codes	
Rapid	2013-2018	NG	08 AC/Heating Electronics	Clear Fault Codes	
Rapid	2013-2018	NG	08 AC/Heating Electronics	Measuring Blocks	
Rapid	2013-2018	NG	08 AC/Heating Electronics	Output Tests	
Rapid	2013-2018	NG	08 AC/Heating Electronics	Specia Functions	
Rapid	2013-2018	NG	09 Electronic Ctrl Electronics	Read Fault Codes	
Rapid	2013-2018	NG	09 Electronic Ctrl Electronics	Clear Fault Codes	
Rapid	2013-2018	NG	09 Electronic Ctrl Electronics	Measuring Blocks	
Rapid	2013-2018	NG	09 Electronic Ctrl Electronics	Output Tests	
Rapid	2013-2018	NG	09 Electronic Ctrl Electronics	Specia Functions	
Rapid	2013-2018	NG	15 Airbags	Read Fault Codes	
Rapid	2013-2018	NG	15 Airbags	Clear Fault Codes	
Rapid	2013-2018	NG	15 Airbags	Measuring Blocks	
Rapid	2013-2018	NG	15 Airbags	Output Tests	
Rapid	2013-2018	NG	15 Airbags	Specia Functions	
Rapid	2013-2018	NG	17 Instrument Cluster	Read Fault Codes	
Rapid	2013-2018	NG	17 Instrument Cluster	Clear Fault Codes	
Rapid	2013-2018	NG	17 Instrument Cluster	Measuring Blocks	
Rapid	2013-2018	NG	17 Instrument Cluster	Output Tests	
Rapid	2013-2018	NG	17 Instrument Cluster	Specia Functions	
Rapid	2013-2018	NG	19 Gateway Data Bus	Read Fault Codes	
Rapid	2013-2018	NG	19 Gateway Data Bus	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Rapid	2013-2018	NG	19 Gateway Data Bus	Measuring Blocks	
Rapid	2013-2018	NG	19 Gateway Data Bus	Output Tests	
Rapid	2013-2018	NG	19 Gateway Data Bus	Specia Functions	
Rapid	2013-2018	NG	25 Immobilizer	Read Fault Codes	
Rapid	2013-2018	NG	25 Immobilizer	Clear Fault Codes	
Rapid	2013-2018	NG	25 Immobilizer	Measuring Blocks	
Rapid	2013-2018	NG	25 Immobilizer	Output Tests	
Rapid	2013-2018	NG	25 Immobilizer	Specia Functions	
Rapid	2013-2018	NG	37 Navigation	Read Fault Codes	
Rapid	2013-2018	NG	37 Navigation	Clear Fault Codes	
Rapid	2013-2018	NG	37 Navigation	Measuring Blocks	
Rapid	2013-2018	NG	37 Navigation	Output Tests	
Rapid	2013-2018	NG	37 Navigation	Specia Functions	
Rapid	2013-2018	NG	44 Steering Assistance	Read Fault Codes	
Rapid	2013-2018	NG	44 Steering Assistance	Clear Fault Codes	
Rapid	2013-2018	NG	44 Steering Assistance	Measuring Blocks	
Rapid	2013-2018	NG	44 Steering Assistance	Output Tests	
Rapid	2013-2018	NG	44 Steering Assistance	Specia Functions	
Rapid	2013-2018	NG	56 Radio	Read Fault Codes	
Rapid	2013-2018	NG	56 Radio	Clear Fault Codes	
Rapid	2013-2018	NG	56 Radio	Measuring Blocks	
Rapid	2013-2018	NG	56 Radio	Output Tests	
Rapid	2013-2018	NG	56 Radio	Specia Functions	
Rapid	2013-2018	NG	61 Battery Control	Read Fault Codes	
Rapid	2013-2018	NG	61 Battery Control	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Rapid	2013-2018	NG	61 Battery Control	Measuring Blocks	
Rapid	2013-2018	NG	61 Battery Control	Output Tests	
Rapid	2013-2018	NG	61 Battery Control	Specia Functions	
Octavia	2013-2018	5E	01 Engine Electronics	Read Fault Codes	
Octavia	2013-2018	5E	01 Engine Electronics	Clear Fault Codes	
Octavia	2013-2018	5E	01 Engine Electronics	Measuring Blocks	
Octavia	2013-2018	5E	01 Engine Electronics	Output Tests	
Octavia	2013-2018	5E	01 Engine Electronics	Specia Functions	
Octavia	2013-2018	5E	02 Transmission Electronics	Read Fault Codes	
Octavia	2013-2018	5E	02 Transmission Electronics	Clear Fault Codes	
Octavia	2013-2018	5E	02 Transmission Electronics	Measuring Blocks	
Octavia	2013-2018	5E	02 Transmission Electronics	Output Tests	
Octavia	2013-2018	5E	02 Transmission Electronics	Specia Functions	
Octavia	2013-2018	5E	03 Brake Electronics	Read Fault Codes	
Octavia	2013-2018	5E	03 Brake Electronics	Clear Fault Codes	
Octavia	2013-2018	5E	03 Brake Electronics	Measuring Blocks	
Octavia	2013-2018	5E	03 Brake Electronics	Output Tests	
Octavia	2013-2018	5E	03 Brake Electronics	Specia Functions	
Octavia	2013-2018	5E	06 Passene. Seat Adj.	Read Fault Codes	
Octavia	2013-2018	5E	06 Passene. Seat Adj.	Clear Fault Codes	
Octavia	2013-2018	5E	06 Passene. Seat Adj.	Measuring Blocks	
Octavia	2013-2018	5E	06 Passene. Seat Adj.	Output Tests	
Octavia	2013-2018	5E	06 Passene. Seat Adj.	Specia Functions	
Octavia	2013-2018	5E	08 AC/Heating Electronics	Read Fault Codes	
Octavia	2013-2018	5E	08 AC/Heating Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia	2013-2018	5E	08 AC/Heating Electronics	Measuring Blocks	
Octavia	2013-2018	5E	08 AC/Heating Electronics	Output Tests	
Octavia	2013-2018	5E	08 AC/Heating Electronics	Specia Functions	
Octavia	2013-2018	5E	09 Electronic Ctrl Electronics	Read Fault Codes	
Octavia	2013-2018	5E	09 Electronic Ctrl Electronics	Clear Fault Codes	
Octavia	2013-2018	5E	09 Electronic Ctrl Electronics	Measuring Blocks	
Octavia	2013-2018	5E	09 Electronic Ctrl Electronics	Output Tests	
Octavia	2013-2018	5E	09 Electronic Ctrl Electronics	Specia Functions	
Octavia	2013-2018	5E	13 Distance Control	Read Fault Codes	
Octavia	2013-2018	5E	13 Distance Control	Clear Fault Codes	
Octavia	2013-2018	5E	13 Distance Control	Measuring Blocks	
Octavia	2013-2018	5E	13 Distance Control	Output Tests	
Octavia	2013-2018	5E	13 Distance Control	Specia Functions	
Octavia	2013-2018	5E	15 Airbags	Read Fault Codes	
Octavia	2013-2018	5E	15 Airbags	Clear Fault Codes	
Octavia	2013-2018	5E	15 Airbags	Measuring Blocks	
Octavia	2013-2018	5E	15 Airbags	Output Tests	
Octavia	2013-2018	5E	15 Airbags	Specia Functions	
Octavia	2013-2018	5E	16 Steering Wheel Electronics	Read Fault Codes	
Octavia	2013-2018	5E	16 Steering Wheel Electronics	Clear Fault Codes	
Octavia	2013-2018	5E	16 Steering Wheel Electronics	Measuring Blocks	
Octavia	2013-2018	5E	16 Steering Wheel Electronics	Output Tests	
Octavia	2013-2018	5E	16 Steering Wheel Electronics	Specia Functions	
Octavia	2013-2018	5E	17 Instrument Cluster	Read Fault Codes	
Octavia	2013-2018	5E	17 Instrument Cluster	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia	2013-2018	5E	17 Instrument Cluster	Measuring Blocks	
Octavia	2013-2018	5E	17 Instrument Cluster	Output Tests	
Octavia	2013-2018	5E	17 Instrument Cluster	Specia Functions	
Octavia	2013-2018	5E	19 Gateway Data Bus	Read Fault Codes	
Octavia	2013-2018	5E	19 Gateway Data Bus	Clear Fault Codes	
Octavia	2013-2018	5E	19 Gateway Data Bus	Measuring Blocks	
Octavia	2013-2018	5E	19 Gateway Data Bus	Output Tests	
Octavia	2013-2018	5E	19 Gateway Data Bus	Specia Functions	
Octavia	2013-2018	5E	20 High Beam Assistance Device	Read Fault Codes	
Octavia	2013-2018	5E	20 High Beam Assistance Device	Clear Fault Codes	
Octavia	2013-2018	5E	20 High Beam Assistance Device	Measuring Blocks	
Octavia	2013-2018	5E	20 High Beam Assistance Device	Output Tests	
Octavia	2013-2018	5E	20 High Beam Assistance Device	Specia Functions	
Octavia	2013-2018	5E	22 4WD Electronics	Read Fault Codes	
Octavia	2013-2018	5E	22 4WD Electronics	Clear Fault Codes	
Octavia	2013-2018	5E	22 4WD Electronics	Measuring Blocks	
Octavia	2013-2018	5E	22 4WD Electronics	Output Tests	
Octavia	2013-2018	5E	22 4WD Electronics	Specia Functions	
Octavia	2013-2018	5E	2B Steer Col Lock	Read Fault Codes	
Octavia	2013-2018	5E	2B Steer Col Lock	Clear Fault Codes	
Octavia	2013-2018	5E	2B Steer Col Lock	Measuring Blocks	
Octavia	2013-2018	5E	2B Steer Col Lock	Output Tests	
Octavia	2013-2018	5E	2B Steer Col Lock	Specia Functions	
Octavia	2013-2018	5E	36 Driver`s Side Seat Adj.	Read Fault Codes	
Octavia	2013-2018	5E	36 Driver`s Side Seat Adj.	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia	2013-2018	5E	36 Driver`s Side Seat Adj.	Measuring Blocks	
Octavia	2013-2018	5E	36 Driver`s Side Seat Adj.	Output Tests	
Octavia	2013-2018	5E	36 Driver`s Side Seat Adj.	Specia Functions	
Octavia	2013-2018	5E	3C Lane Departure Assistance System	Read Fault Codes	
Octavia	2013-2018	5E	3C Lane Departure Assistance System	Clear Fault Codes	
Octavia	2013-2018	5E	3C Lane Departure Assistance System	Measuring Blocks	
Octavia	2013-2018	5E	3C Lane Departure Assistance System	Output Tests	
Octavia	2013-2018	5E	3C Lane Departure Assistance System	Specia Functions	
Octavia	2013-2018	5E	42 Driver-Door Elect.	Read Fault Codes	
Octavia	2013-2018	5E	42 Driver-Door Elect.	Clear Fault Codes	
Octavia	2013-2018	5E	42 Driver-Door Elect.	Measuring Blocks	
Octavia	2013-2018	5E	42 Driver-Door Elect.	Output Tests	
Octavia	2013-2018	5E	42 Driver-Door Elect.	Specia Functions	
Octavia	2013-2018	5E	44 Steering Assistance	Read Fault Codes	
Octavia	2013-2018	5E	44 Steering Assistance	Clear Fault Codes	
Octavia	2013-2018	5E	44 Steering Assistance	Measuring Blocks	
Octavia	2013-2018	5E	44 Steering Assistance	Output Tests	
Octavia	2013-2018	5E	44 Steering Assistance	Specia Functions	
Octavia	2013-2018	5E	4B Multifunction Module	Read Fault Codes	
Octavia	2013-2018	5E	4B Multifunction Module	Clear Fault Codes	
Octavia	2013-2018	5E	4B Multifunction Module	Measuring Blocks	
Octavia	2013-2018	5E	4B Multifunction Module	Output Tests	
Octavia	2013-2018	5E	4B Multifunction Module	Specia Functions	
Octavia	2013-2018	5E	52 Passe.-Door Elect.	Read Fault Codes	
Octavia	2013-2018	5E	52 Passe.-Door Elect.	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia	2013-2018	5E	52 Passe.-Door Elect.	Measuring Blocks	
Octavia	2013-2018	5E	52 Passe.-Door Elect.	Output Tests	
Octavia	2013-2018	5E	52 Passe.-Door Elect.	Specia Functions	
Octavia	2013-2018	5E	55 Headlight Range Control	Read Fault Codes	
Octavia	2013-2018	5E	55 Headlight Range Control	Clear Fault Codes	
Octavia	2013-2018	5E	55 Headlight Range Control	Measuring Blocks	
Octavia	2013-2018	5E	55 Headlight Range Control	Output Tests	
Octavia	2013-2018	5E	55 Headlight Range Control	Specia Functions	
Octavia	2013-2018	5E	5F Information Electronic Equipment 1	Read Fault Codes	
Octavia	2013-2018	5E	5F Information Electronic Equipment 1	Clear Fault Codes	
Octavia	2013-2018	5E	5F Information Electronic Equipment 1	Measuring Blocks	
Octavia	2013-2018	5E	5F Information Electronic Equipment 1	Output Tests	
Octavia	2013-2018	5E	5F Information Electronic Equipment 1	Specia Functions	
Octavia	2013-2018	5E	6D Electronic Equipment of Trunk Lid	Read Fault Codes	
Octavia	2013-2018	5E	6D Electronic Equipment of Trunk Lid	Clear Fault Codes	
Octavia	2013-2018	5E	6D Electronic Equipment of Trunk Lid	Measuring Blocks	
Octavia	2013-2018	5E	6D Electronic Equipment of Trunk Lid	Output Tests	
Octavia	2013-2018	5E	6D Electronic Equipment of Trunk Lid	Specia Functions	
Octavia	2013-2018	5E	76 Parking Aid	Read Fault Codes	
Octavia	2013-2018	5E	76 Parking Aid	Clear Fault Codes	
Octavia	2013-2018	5E	76 Parking Aid	Measuring Blocks	
Octavia	2013-2018	5E	76 Parking Aid	Output Tests	
Octavia	2013-2018	5E	76 Parking Aid	Specia Functions	
Octavia	2013-2018	5E	A5 Frt Sens.Drv.Assist	Read Fault Codes	
Octavia	2013-2018	5E	A5 Frt Sens.Drv.Assist	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia	2013-2018	5E	A5 Frt Sens.Drv.Assist	Measuring Blocks	
Octavia	2013-2018	5E	A5 Frt Sens.Drv.Assist	Output Tests	
Octavia	2013-2018	5E	A5 Frt Sens.Drv.Assist	Specia Functions	
Octavia	2013-2018	5E	B7 Access Start Interf	Read Fault Codes	
Octavia	2013-2018	5E	B7 Access Start Interf	Clear Fault Codes	
Octavia	2013-2018	5E	B7 Access Start Interf	Measuring Blocks	
Octavia	2013-2018	5E	B7 Access Start Interf	Output Tests	
Octavia	2013-2018	5E	B7 Access Start Interf	Specia Functions	
Octavia	2013-2018	5E	CA Control Module For Sunroof	Read Fault Codes	
Octavia	2013-2018	5E	CA Control Module For Sunroof	Clear Fault Codes	
Octavia	2013-2018	5E	CA Control Module For Sunroof	Measuring Blocks	
Octavia	2013-2018	5E	CA Control Module For Sunroof	Output Tests	
Octavia	2013-2018	5E	CA Control Module For Sunroof	Specia Functions	
Octavia	2013-2018	5E	D6 Light Control Left 2	Read Fault Codes	
Octavia	2013-2018	5E	D6 Light Control Left 2	Clear Fault Codes	
Octavia	2013-2018	5E	D6 Light Control Left 2	Measuring Blocks	
Octavia	2013-2018	5E	D6 Light Control Left 2	Output Tests	
Octavia	2013-2018	5E	D6 Light Control Left 2	Specia Functions	
Octavia	2013-2018	5E	D7 Light Control Right 2	Read Fault Codes	
Octavia	2013-2018	5E	D7 Light Control Right 2	Clear Fault Codes	
Octavia	2013-2018	5E	D7 Light Control Right 2	Measuring Blocks	
Octavia	2013-2018	5E	D7 Light Control Right 2	Output Tests	
Octavia	2013-2018	5E	D7 Light Control Right 2	Specia Functions	
Kodiaq	2017-2018	OZ	01 Engine Electronics	Read Fault Codes	
Kodiaq	2017-2018	OZ	01 Engine Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Kodiaq	2017-2018	OZ	01 Engine Electronics	Measuring Blocks	
Kodiaq	2017-2018	OZ	01 Engine Electronics	Output Tests	
Kodiaq	2017-2018	OZ	01 Engine Electronics	Specia Functions	
Kodiaq	2017-2018	OZ	02 Transmission Electronics	Read Fault Codes	
Kodiaq	2017-2018	OZ	02 Transmission Electronics	Clear Fault Codes	
Kodiaq	2017-2018	OZ	02 Transmission Electronics	Measuring Blocks	
Kodiaq	2017-2018	OZ	02 Transmission Electronics	Output Tests	
Kodiaq	2017-2018	OZ	02 Transmission Electronics	Specia Functions	
Kodiaq	2017-2018	OZ	03 Brake Electronics	Read Fault Codes	
Kodiaq	2017-2018	OZ	03 Brake Electronics	Clear Fault Codes	
Kodiaq	2017-2018	OZ	03 Brake Electronics	Measuring Blocks	
Kodiaq	2017-2018	OZ	03 Brake Electronics	Output Tests	
Kodiaq	2017-2018	OZ	03 Brake Electronics	Specia Functions	
Kodiaq	2017-2018	OZ	06 Passene. Seat Adj.	Read Fault Codes	
Kodiaq	2017-2018	OZ	06 Passene. Seat Adj.	Clear Fault Codes	
Kodiaq	2017-2018	OZ	06 Passene. Seat Adj.	Measuring Blocks	
Kodiaq	2017-2018	OZ	06 Passene. Seat Adj.	Output Tests	
Kodiaq	2017-2018	OZ	06 Passene. Seat Adj.	Specia Functions	
Kodiaq	2017-2018	OZ	08 AC/Heating Electronics	Read Fault Codes	
Kodiaq	2017-2018	OZ	08 AC/Heating Electronics	Clear Fault Codes	
Kodiaq	2017-2018	OZ	08 AC/Heating Electronics	Measuring Blocks	
Kodiaq	2017-2018	OZ	08 AC/Heating Electronics	Output Tests	
Kodiaq	2017-2018	OZ	08 AC/Heating Electronics	Specia Functions	
Kodiaq	2017-2018	OZ	09 Electronic Ctrl Electronics	Read Fault Codes	
Kodiaq	2017-2018	OZ	09 Electronic Ctrl Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Kodiaq	2017-2018	OZ	09 Electronic Ctrl Electronics	Measuring Blocks	
Kodiaq	2017-2018	OZ	09 Electronic Ctrl Electronics	Output Tests	
Kodiaq	2017-2018	OZ	09 Electronic Ctrl Electronics	Specia Functions	
Kodiaq	2017-2018	OZ	13 Distance Control	Read Fault Codes	
Kodiaq	2017-2018	OZ	13 Distance Control	Clear Fault Codes	
Kodiaq	2017-2018	OZ	13 Distance Control	Measuring Blocks	
Kodiaq	2017-2018	OZ	13 Distance Control	Output Tests	
Kodiaq	2017-2018	OZ	13 Distance Control	Specia Functions	
Kodiaq	2017-2018	OZ	15 Airbags	Read Fault Codes	
Kodiaq	2017-2018	OZ	15 Airbags	Clear Fault Codes	
Kodiaq	2017-2018	OZ	15 Airbags	Measuring Blocks	
Kodiaq	2017-2018	OZ	15 Airbags	Output Tests	
Kodiaq	2017-2018	OZ	15 Airbags	Specia Functions	
Kodiaq	2017-2018	OZ	16 Steering Wheel Electronics	Read Fault Codes	
Kodiaq	2017-2018	OZ	16 Steering Wheel Electronics	Clear Fault Codes	
Kodiaq	2017-2018	OZ	16 Steering Wheel Electronics	Measuring Blocks	
Kodiaq	2017-2018	OZ	16 Steering Wheel Electronics	Output Tests	
Kodiaq	2017-2018	OZ	16 Steering Wheel Electronics	Specia Functions	
Kodiaq	2017-2018	OZ	17 Instrument Cluster	Read Fault Codes	
Kodiaq	2017-2018	OZ	17 Instrument Cluster	Clear Fault Codes	
Kodiaq	2017-2018	OZ	17 Instrument Cluster	Measuring Blocks	
Kodiaq	2017-2018	OZ	17 Instrument Cluster	Output Tests	
Kodiaq	2017-2018	OZ	17 Instrument Cluster	Specia Functions	
Kodiaq	2017-2018	OZ	19 Gateway Data Bus	Read Fault Codes	
Kodiaq	2017-2018	OZ	19 Gateway Data Bus	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Kodiaq	2017-2018	OZ	19 Gateway Data Bus	Measuring Blocks	
Kodiaq	2017-2018	OZ	19 Gateway Data Bus	Output Tests	
Kodiaq	2017-2018	OZ	19 Gateway Data Bus	Specia Functions	
Kodiaq	2017-2018	OZ	20 High Beam Assistance Device	Read Fault Codes	
Kodiaq	2017-2018	OZ	20 High Beam Assistance Device	Clear Fault Codes	
Kodiaq	2017-2018	OZ	20 High Beam Assistance Device	Measuring Blocks	
Kodiaq	2017-2018	OZ	20 High Beam Assistance Device	Output Tests	
Kodiaq	2017-2018	OZ	20 High Beam Assistance Device	Specia Functions	
Kodiaq	2017-2018	OZ	22 4WD Electronics	Read Fault Codes	
Kodiaq	2017-2018	OZ	22 4WD Electronics	Clear Fault Codes	
Kodiaq	2017-2018	OZ	22 4WD Electronics	Measuring Blocks	
Kodiaq	2017-2018	OZ	22 4WD Electronics	Output Tests	
Kodiaq	2017-2018	OZ	22 4WD Electronics	Specia Functions	
Kodiaq	2017-2018	OZ	2B Steer Col Lock	Read Fault Codes	
Kodiaq	2017-2018	OZ	2B Steer Col Lock	Clear Fault Codes	
Kodiaq	2017-2018	OZ	2B Steer Col Lock	Measuring Blocks	
Kodiaq	2017-2018	OZ	2B Steer Col Lock	Output Tests	
Kodiaq	2017-2018	OZ	2B Steer Col Lock	Specia Functions	
Kodiaq	2017-2018	OZ	36 Driver`s Side Seat Adj.	Read Fault Codes	
Kodiaq	2017-2018	OZ	36 Driver`s Side Seat Adj.	Clear Fault Codes	
Kodiaq	2017-2018	OZ	36 Driver`s Side Seat Adj.	Measuring Blocks	
Kodiaq	2017-2018	OZ	36 Driver`s Side Seat Adj.	Output Tests	
Kodiaq	2017-2018	OZ	36 Driver`s Side Seat Adj.	Specia Functions	
Kodiaq	2017-2018	OZ	3C Lane Departure Assistance System	Read Fault Codes	
Kodiaq	2017-2018	OZ	3C Lane Departure Assistance System	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Kodiaq	2017-2018	OZ	3C Lane Departure Assistance System	Measuring Blocks	
Kodiaq	2017-2018	OZ	3C Lane Departure Assistance System	Output Tests	
Kodiaq	2017-2018	OZ	3C Lane Departure Assistance System	Specia Functions	
Kodiaq	2017-2018	OZ	42 Driver-Door Elect.	Read Fault Codes	
Kodiaq	2017-2018	OZ	42 Driver-Door Elect.	Clear Fault Codes	
Kodiaq	2017-2018	OZ	42 Driver-Door Elect.	Measuring Blocks	
Kodiaq	2017-2018	OZ	42 Driver-Door Elect.	Output Tests	
Kodiaq	2017-2018	OZ	42 Driver-Door Elect.	Specia Functions	
Kodiaq	2017-2018	OZ	44 Steering Assistance	Read Fault Codes	
Kodiaq	2017-2018	OZ	44 Steering Assistance	Clear Fault Codes	
Kodiaq	2017-2018	OZ	44 Steering Assistance	Measuring Blocks	
Kodiaq	2017-2018	OZ	44 Steering Assistance	Output Tests	
Kodiaq	2017-2018	OZ	44 Steering Assistance	Specia Functions	
Kodiaq	2017-2018	OZ	4B Multifunction Module	Read Fault Codes	
Kodiaq	2017-2018	OZ	4B Multifunction Module	Clear Fault Codes	
Kodiaq	2017-2018	OZ	4B Multifunction Module	Measuring Blocks	
Kodiaq	2017-2018	OZ	4B Multifunction Module	Output Tests	
Kodiaq	2017-2018	OZ	4B Multifunction Module	Specia Functions	
Kodiaq	2017-2018	OZ	52 Passe.-Door Elect.	Read Fault Codes	
Kodiaq	2017-2018	OZ	52 Passe.-Door Elect.	Clear Fault Codes	
Kodiaq	2017-2018	OZ	52 Passe.-Door Elect.	Measuring Blocks	
Kodiaq	2017-2018	OZ	52 Passe.-Door Elect.	Output Tests	
Kodiaq	2017-2018	OZ	52 Passe.-Door Elect.	Specia Functions	
Kodiaq	2017-2018	OZ	55 Headlight Range Control	Read Fault Codes	
Kodiaq	2017-2018	OZ	55 Headlight Range Control	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Kodiaq	2017-2018	OZ	55 Headlight Range Control	Measuring Blocks	
Kodiaq	2017-2018	OZ	55 Headlight Range Control	Output Tests	
Kodiaq	2017-2018	OZ	55 Headlight Range Control	Specia Functions	
Kodiaq	2017-2018	OZ	5F Information Electronic Equipment 1	Read Fault Codes	
Kodiaq	2017-2018	OZ	5F Information Electronic Equipment 1	Clear Fault Codes	
Kodiaq	2017-2018	OZ	5F Information Electronic Equipment 1	Measuring Blocks	
Kodiaq	2017-2018	OZ	5F Information Electronic Equipment 1	Output Tests	
Kodiaq	2017-2018	OZ	5F Information Electronic Equipment 1	Specia Functions	
Kodiaq	2017-2018	OZ	6D Electronic Equipment of Trunk Lid	Read Fault Codes	
Kodiaq	2017-2018	OZ	6D Electronic Equipment of Trunk Lid	Clear Fault Codes	
Kodiaq	2017-2018	OZ	6D Electronic Equipment of Trunk Lid	Measuring Blocks	
Kodiaq	2017-2018	OZ	6D Electronic Equipment of Trunk Lid	Output Tests	
Kodiaq	2017-2018	OZ	6D Electronic Equipment of Trunk Lid	Specia Functions	
Kodiaq	2017-2018	OZ	76 Parking Aid	Read Fault Codes	
Kodiaq	2017-2018	OZ	76 Parking Aid	Clear Fault Codes	
Kodiaq	2017-2018	OZ	76 Parking Aid	Measuring Blocks	
Kodiaq	2017-2018	OZ	76 Parking Aid	Output Tests	
Kodiaq	2017-2018	OZ	76 Parking Aid	Specia Functions	
Kodiaq	2017-2018	OZ	A5 Frt Sens.Drv.Assist	Read Fault Codes	
Kodiaq	2017-2018	OZ	A5 Frt Sens.Drv.Assist	Clear Fault Codes	
Kodiaq	2017-2018	OZ	A5 Frt Sens.Drv.Assist	Measuring Blocks	
Kodiaq	2017-2018	OZ	A5 Frt Sens.Drv.Assist	Output Tests	
Kodiaq	2017-2018	OZ	A5 Frt Sens.Drv.Assist	Specia Functions	
Kodiaq	2017-2018	OZ	B7 Access Start Interf	Read Fault Codes	
Kodiaq	2017-2018	OZ	B7 Access Start Interf	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Kodiaq	2017-2018	OZ	B7 Access Start Interf	Measuring Blocks	
Kodiaq	2017-2018	OZ	B7 Access Start Interf	Output Tests	
Kodiaq	2017-2018	OZ	B7 Access Start Interf	Specia Functions	
Kodiaq	2017-2018	OZ	CA Control Module For Sunroof	Read Fault Codes	
Kodiaq	2017-2018	OZ	CA Control Module For Sunroof	Clear Fault Codes	
Kodiaq	2017-2018	OZ	CA Control Module For Sunroof	Measuring Blocks	
Kodiaq	2017-2018	OZ	CA Control Module For Sunroof	Output Tests	
Kodiaq	2017-2018	OZ	CA Control Module For Sunroof	Specia Functions	
Kodiaq	2017-2018	OZ	D6 Light Control Left 2	Read Fault Codes	
Kodiaq	2017-2018	OZ	D6 Light Control Left 2	Clear Fault Codes	
Kodiaq	2017-2018	OZ	D6 Light Control Left 2	Measuring Blocks	
Kodiaq	2017-2018	OZ	D6 Light Control Left 2	Output Tests	
Kodiaq	2017-2018	OZ	D6 Light Control Left 2	Specia Functions	
Kodiaq	2017-2018	OZ	D7 Light Control Right 2	Read Fault Codes	
Kodiaq	2017-2018	OZ	D7 Light Control Right 2	Clear Fault Codes	
Kodiaq	2017-2018	OZ	D7 Light Control Right 2	Measuring Blocks	
Kodiaq	2017-2018	OZ	D7 Light Control Right 2	Output Tests	
Kodiaq	2017-2018	OZ	D7 Light Control Right 2	Specia Functions	
Octavia	2010-2014	1Z	01 Engine Electronics	Read Fault Codes	
Octavia	2010-2014	1Z	01 Engine Electronics	Clear Fault Codes	
Octavia	2010-2014	1Z	01 Engine Electronics	Measuring Blocks	
Octavia	2010-2014	1Z	01 Engine Electronics	Output Tests	
Octavia	2010-2014	1Z	01 Engine Electronics	Specia Functions	
Octavia	2010-2014	1Z	02 Transmission Electronics	Read Fault Codes	
Octavia	2010-2014	1Z	02 Transmission Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia	2010-2014	1Z	02 Transmission Electronics	Measuring Blocks	
Octavia	2010-2014	1Z	02 Transmission Electronics	Output Tests	
Octavia	2010-2014	1Z	02 Transmission Electronics	Specia Functions	
Octavia	2010-2014	1Z	03 Brake Electronics	Read Fault Codes	
Octavia	2010-2014	1Z	03 Brake Electronics	Clear Fault Codes	
Octavia	2010-2014	1Z	03 Brake Electronics	Measuring Blocks	
Octavia	2010-2014	1Z	03 Brake Electronics	Output Tests	
Octavia	2010-2014	1Z	03 Brake Electronics	Specia Functions	
Octavia	2010-2014	1Z	05 Access & Permissi.	Read Fault Codes	
Octavia	2010-2014	1Z	05 Access & Permissi.	Clear Fault Codes	
Octavia	2010-2014	1Z	05 Access & Permissi.	Measuring Blocks	
Octavia	2010-2014	1Z	05 Access & Permissi.	Output Tests	
Octavia	2010-2014	1Z	05 Access & Permissi.	Specia Functions	
Octavia	2010-2014	1Z	08 AC/Heating Electronics	Read Fault Codes	
Octavia	2010-2014	1Z	08 AC/Heating Electronics	Clear Fault Codes	
Octavia	2010-2014	1Z	08 AC/Heating Electronics	Measuring Blocks	
Octavia	2010-2014	1Z	08 AC/Heating Electronics	Output Tests	
Octavia	2010-2014	1Z	08 AC/Heating Electronics	Specia Functions	
Octavia	2010-2014	1Z	09 Electronic Ctrl Electronics	Read Fault Codes	
Octavia	2010-2014	1Z	09 Electronic Ctrl Electronics	Clear Fault Codes	
Octavia	2010-2014	1Z	09 Electronic Ctrl Electronics	Measuring Blocks	
Octavia	2010-2014	1Z	09 Electronic Ctrl Electronics	Output Tests	
Octavia	2010-2014	1Z	09 Electronic Ctrl Electronics	Specia Functions	
Octavia	2010-2014	1Z	10 Parking Assist System 2	Read Fault Codes	
Octavia	2010-2014	1Z	10 Parking Assist System 2	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia	2010-2014	1Z	10 Parking Assist System 2	Measuring Blocks	
Octavia	2010-2014	1Z	10 Parking Assist System 2	Output Tests	
Octavia	2010-2014	1Z	10 Parking Assist System 2	Specia Functions	
Octavia	2010-2014	1Z	15 Airbags	Read Fault Codes	
Octavia	2010-2014	1Z	15 Airbags	Clear Fault Codes	
Octavia	2010-2014	1Z	15 Airbags	Measuring Blocks	
Octavia	2010-2014	1Z	15 Airbags	Output Tests	
Octavia	2010-2014	1Z	15 Airbags	Specia Functions	
Octavia	2010-2014	1Z	16 Steering Wheel Electronics	Read Fault Codes	
Octavia	2010-2014	1Z	16 Steering Wheel Electronics	Clear Fault Codes	
Octavia	2010-2014	1Z	16 Steering Wheel Electronics	Measuring Blocks	
Octavia	2010-2014	1Z	16 Steering Wheel Electronics	Output Tests	
Octavia	2010-2014	1Z	16 Steering Wheel Electronics	Specia Functions	
Octavia	2010-2014	1Z	17 Instrument Cluster	Read Fault Codes	
Octavia	2010-2014	1Z	17 Instrument Cluster	Clear Fault Codes	
Octavia	2010-2014	1Z	17 Instrument Cluster	Measuring Blocks	
Octavia	2010-2014	1Z	17 Instrument Cluster	Output Tests	
Octavia	2010-2014	1Z	17 Instrument Cluster	Specia Functions	
Octavia	2010-2014	1Z	19 Gateway Data Bus	Read Fault Codes	
Octavia	2010-2014	1Z	19 Gateway Data Bus	Clear Fault Codes	
Octavia	2010-2014	1Z	19 Gateway Data Bus	Measuring Blocks	
Octavia	2010-2014	1Z	19 Gateway Data Bus	Output Tests	
Octavia	2010-2014	1Z	19 Gateway Data Bus	Specia Functions	
Octavia	2010-2014	1Z	22 4WD Electronics	Read Fault Codes	
Octavia	2010-2014	1Z	22 4WD Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia	2010-2014	1Z	22 4WD Electronics	Measuring Blocks	
Octavia	2010-2014	1Z	22 4WD Electronics	Output Tests	
Octavia	2010-2014	1Z	22 4WD Electronics	Specia Functions	
Octavia	2010-2014	1Z	25 Immobilizer	Read Fault Codes	
Octavia	2010-2014	1Z	25 Immobilizer	Clear Fault Codes	
Octavia	2010-2014	1Z	25 Immobilizer	Measuring Blocks	
Octavia	2010-2014	1Z	25 Immobilizer	Output Tests	
Octavia	2010-2014	1Z	25 Immobilizer	Specia Functions	
Octavia	2010-2014	1Z	2B Steer Col Lock	Read Fault Codes	
Octavia	2010-2014	1Z	2B Steer Col Lock	Clear Fault Codes	
Octavia	2010-2014	1Z	2B Steer Col Lock	Measuring Blocks	
Octavia	2010-2014	1Z	2B Steer Col Lock	Output Tests	
Octavia	2010-2014	1Z	2B Steer Col Lock	Specia Functions	
Octavia	2010-2014	1Z	36 Driver`s Side Seat Adj.	Read Fault Codes	
Octavia	2010-2014	1Z	36 Driver`s Side Seat Adj.	Clear Fault Codes	
Octavia	2010-2014	1Z	36 Driver`s Side Seat Adj.	Measuring Blocks	
Octavia	2010-2014	1Z	36 Driver`s Side Seat Adj.	Output Tests	
Octavia	2010-2014	1Z	36 Driver`s Side Seat Adj.	Specia Functions	
Octavia	2010-2014	1Z	37 Navigation	Read Fault Codes	
Octavia	2010-2014	1Z	37 Navigation	Clear Fault Codes	
Octavia	2010-2014	1Z	37 Navigation	Measuring Blocks	
Octavia	2010-2014	1Z	37 Navigation	Output Tests	
Octavia	2010-2014	1Z	37 Navigation	Specia Functions	
Octavia	2010-2014	1Z	42 Driver-Door Elect.	Read Fault Codes	
Octavia	2010-2014	1Z	42 Driver-Door Elect.	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia	2010-2014	1Z	42 Driver-Door Elect.	Measuring Blocks	
Octavia	2010-2014	1Z	42 Driver-Door Elect.	Output Tests	
Octavia	2010-2014	1Z	42 Driver-Door Elect.	Specia Functions	
Octavia	2010-2014	1Z	44 Steering Assistance	Read Fault Codes	
Octavia	2010-2014	1Z	44 Steering Assistance	Clear Fault Codes	
Octavia	2010-2014	1Z	44 Steering Assistance	Measuring Blocks	
Octavia	2010-2014	1Z	44 Steering Assistance	Output Tests	
Octavia	2010-2014	1Z	44 Steering Assistance	Specia Functions	
Octavia	2010-2014	1Z	46 Central Control Module	Read Fault Codes	
Octavia	2010-2014	1Z	46 Central Control Module	Clear Fault Codes	
Octavia	2010-2014	1Z	46 Central Control Module	Measuring Blocks	
Octavia	2010-2014	1Z	46 Central Control Module	Output Tests	
Octavia	2010-2014	1Z	46 Central Control Module	Specia Functions	
Octavia	2010-2014	1Z	52 Passe.-Door Elect.	Read Fault Codes	
Octavia	2010-2014	1Z	52 Passe.-Door Elect.	Clear Fault Codes	
Octavia	2010-2014	1Z	52 Passe.-Door Elect.	Measuring Blocks	
Octavia	2010-2014	1Z	52 Passe.-Door Elect.	Output Tests	
Octavia	2010-2014	1Z	52 Passe.-Door Elect.	Specia Functions	
Octavia	2010-2014	1Z	55 Headlight Range Control	Read Fault Codes	
Octavia	2010-2014	1Z	55 Headlight Range Control	Clear Fault Codes	
Octavia	2010-2014	1Z	55 Headlight Range Control	Measuring Blocks	
Octavia	2010-2014	1Z	55 Headlight Range Control	Output Tests	
Octavia	2010-2014	1Z	55 Headlight Range Control	Specia Functions	
Octavia	2010-2014	1Z	56 Radio	Read Fault Codes	
Octavia	2010-2014	1Z	56 Radio	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Octavia	2010-2014	1Z	56 Radio	Measuring Blocks	
Octavia	2010-2014	1Z	56 Radio	Output Tests	
Octavia	2010-2014	1Z	56 Radio	Specia Functions	
Octavia	2010-2014	1Z	62 LR-Door Electroni.	Read Fault Codes	
Octavia	2010-2014	1Z	62 LR-Door Electroni.	Clear Fault Codes	
Octavia	2010-2014	1Z	62 LR-Door Electroni.	Measuring Blocks	
Octavia	2010-2014	1Z	62 LR-Door Electroni.	Output Tests	
Octavia	2010-2014	1Z	62 LR-Door Electroni.	Specia Functions	
Octavia	2010-2014	1Z	72 RR-Door Electroni.	Read Fault Codes	
Octavia	2010-2014	1Z	72 RR-Door Electroni.	Clear Fault Codes	
Octavia	2010-2014	1Z	72 RR-Door Electroni.	Measuring Blocks	
Octavia	2010-2014	1Z	72 RR-Door Electroni.	Output Tests	
Octavia	2010-2014	1Z	72 RR-Door Electroni.	Specia Functions	
Octavia	2010-2014	1Z	77 Telephone	Read Fault Codes	
Octavia	2010-2014	1Z	77 Telephone	Clear Fault Codes	
Octavia	2010-2014	1Z	77 Telephone	Measuring Blocks	
Octavia	2010-2014	1Z	77 Telephone	Output Tests	
Octavia	2010-2014	1Z	77 Telephone	Specia Functions	
Superb	2009-2016	3T	01 Engine Electronics	Read Fault Codes	
Superb	2009-2016	3T	01 Engine Electronics	Clear Fault Codes	
Superb	2009-2016	3T	01 Engine Electronics	Measuring Blocks	
Superb	2009-2016	3T	01 Engine Electronics	Output Tests	
Superb	2009-2016	3T	01 Engine Electronics	Specia Functions	
Superb	2009-2016	3T	02 Transmission Electronics	Read Fault Codes	
Superb	2009-2016	3T	02 Transmission Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb	2009-2016	3T	02 Transmission Electronics	Measuring Blocks	
Superb	2009-2016	3T	02 Transmission Electronics	Output Tests	
Superb	2009-2016	3T	02 Transmission Electronics	Specia Functions	
Superb	2009-2016	3T	03 Brake Electronics	Read Fault Codes	
Superb	2009-2016	3T	03 Brake Electronics	Clear Fault Codes	
Superb	2009-2016	3T	03 Brake Electronics	Measuring Blocks	
Superb	2009-2016	3T	03 Brake Electronics	Output Tests	
Superb	2009-2016	3T	03 Brake Electronics	Specia Functions	
Superb	2009-2016	3T	05 Access & Permissi.	Read Fault Codes	
Superb	2009-2016	3T	05 Access & Permissi.	Clear Fault Codes	
Superb	2009-2016	3T	05 Access & Permissi.	Measuring Blocks	
Superb	2009-2016	3T	05 Access & Permissi.	Output Tests	
Superb	2009-2016	3T	05 Access & Permissi.	Specia Functions	
Superb	2009-2016	3T	08 AC/Heating Electronics	Read Fault Codes	
Superb	2009-2016	3T	08 AC/Heating Electronics	Clear Fault Codes	
Superb	2009-2016	3T	08 AC/Heating Electronics	Measuring Blocks	
Superb	2009-2016	3T	08 AC/Heating Electronics	Output Tests	
Superb	2009-2016	3T	08 AC/Heating Electronics	Specia Functions	
Superb	2009-2016	3T	09 Electronic Ctrl Electronics	Read Fault Codes	
Superb	2009-2016	3T	09 Electronic Ctrl Electronics	Clear Fault Codes	
Superb	2009-2016	3T	09 Electronic Ctrl Electronics	Measuring Blocks	
Superb	2009-2016	3T	09 Electronic Ctrl Electronics	Output Tests	
Superb	2009-2016	3T	09 Electronic Ctrl Electronics	Specia Functions	
Superb	2009-2016	3T	10 Parking Assist System 2	Read Fault Codes	
Superb	2009-2016	3T	10 Parking Assist System 2	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb	2009-2016	3T	10 Parking Assist System 2	Measuring Blocks	
Superb	2009-2016	3T	10 Parking Assist System 2	Output Tests	
Superb	2009-2016	3T	10 Parking Assist System 2	Specia Functions	
Superb	2009-2016	3T	15 Airbags	Read Fault Codes	
Superb	2009-2016	3T	15 Airbags	Clear Fault Codes	
Superb	2009-2016	3T	15 Airbags	Measuring Blocks	
Superb	2009-2016	3T	15 Airbags	Output Tests	
Superb	2009-2016	3T	15 Airbags	Specia Functions	
Superb	2009-2016	3T	16 Steering Wheel Electronics	Read Fault Codes	
Superb	2009-2016	3T	16 Steering Wheel Electronics	Clear Fault Codes	
Superb	2009-2016	3T	16 Steering Wheel Electronics	Measuring Blocks	
Superb	2009-2016	3T	16 Steering Wheel Electronics	Output Tests	
Superb	2009-2016	3T	16 Steering Wheel Electronics	Specia Functions	
Superb	2009-2016	3T	17 Instrument Cluster	Read Fault Codes	
Superb	2009-2016	3T	17 Instrument Cluster	Clear Fault Codes	
Superb	2009-2016	3T	17 Instrument Cluster	Measuring Blocks	
Superb	2009-2016	3T	17 Instrument Cluster	Output Tests	
Superb	2009-2016	3T	17 Instrument Cluster	Specia Functions	
Superb	2009-2016	3T	19 Gateway Data Bus	Read Fault Codes	
Superb	2009-2016	3T	19 Gateway Data Bus	Clear Fault Codes	
Superb	2009-2016	3T	19 Gateway Data Bus	Measuring Blocks	
Superb	2009-2016	3T	19 Gateway Data Bus	Output Tests	
Superb	2009-2016	3T	19 Gateway Data Bus	Specia Functions	
Superb	2009-2016	3T	22 4WD Electronics	Read Fault Codes	
Superb	2009-2016	3T	22 4WD Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb	2009-2016	3T	22 4WD Electronics	Measuring Blocks	
Superb	2009-2016	3T	22 4WD Electronics	Output Tests	
Superb	2009-2016	3T	22 4WD Electronics	Specia Functions	
Superb	2009-2016	3T	25 Immobilizer	Read Fault Codes	
Superb	2009-2016	3T	25 Immobilizer	Clear Fault Codes	
Superb	2009-2016	3T	25 Immobilizer	Measuring Blocks	
Superb	2009-2016	3T	25 Immobilizer	Output Tests	
Superb	2009-2016	3T	25 Immobilizer	Specia Functions	
Superb	2009-2016	3T	2B Steer Col Lock	Read Fault Codes	
Superb	2009-2016	3T	2B Steer Col Lock	Clear Fault Codes	
Superb	2009-2016	3T	2B Steer Col Lock	Measuring Blocks	
Superb	2009-2016	3T	2B Steer Col Lock	Output Tests	
Superb	2009-2016	3T	2B Steer Col Lock	Specia Functions	
Superb	2009-2016	3T	36 Driver`s Side Seat Adj.	Read Fault Codes	
Superb	2009-2016	3T	36 Driver`s Side Seat Adj.	Clear Fault Codes	
Superb	2009-2016	3T	36 Driver`s Side Seat Adj.	Measuring Blocks	
Superb	2009-2016	3T	36 Driver`s Side Seat Adj.	Output Tests	
Superb	2009-2016	3T	36 Driver`s Side Seat Adj.	Specia Functions	
Superb	2009-2016	3T	37 Navigation	Read Fault Codes	
Superb	2009-2016	3T	37 Navigation	Clear Fault Codes	
Superb	2009-2016	3T	37 Navigation	Measuring Blocks	
Superb	2009-2016	3T	37 Navigation	Output Tests	
Superb	2009-2016	3T	37 Navigation	Specia Functions	
Superb	2009-2016	3T	42 Driver-Door Elect.	Read Fault Codes	
Superb	2009-2016	3T	42 Driver-Door Elect.	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb	2009-2016	3T	42 Driver-Door Elect.	Measuring Blocks	
Superb	2009-2016	3T	42 Driver-Door Elect.	Output Tests	
Superb	2009-2016	3T	42 Driver-Door Elect.	Specia Functions	
Superb	2009-2016	3T	44 Steering Assistance	Read Fault Codes	
Superb	2009-2016	3T	44 Steering Assistance	Clear Fault Codes	
Superb	2009-2016	3T	44 Steering Assistance	Measuring Blocks	
Superb	2009-2016	3T	44 Steering Assistance	Output Tests	
Superb	2009-2016	3T	44 Steering Assistance	Specia Functions	
Superb	2009-2016	3T	46 Central Control Module	Read Fault Codes	
Superb	2009-2016	3T	46 Central Control Module	Clear Fault Codes	
Superb	2009-2016	3T	46 Central Control Module	Measuring Blocks	
Superb	2009-2016	3T	46 Central Control Module	Output Tests	
Superb	2009-2016	3T	46 Central Control Module	Specia Functions	
Superb	2009-2016	3T	52 Passe.-Door Elect.	Read Fault Codes	
Superb	2009-2016	3T	52 Passe.-Door Elect.	Clear Fault Codes	
Superb	2009-2016	3T	52 Passe.-Door Elect.	Measuring Blocks	
Superb	2009-2016	3T	52 Passe.-Door Elect.	Output Tests	
Superb	2009-2016	3T	52 Passe.-Door Elect.	Specia Functions	
Superb	2009-2016	3T	55 Headlight Range Control	Read Fault Codes	
Superb	2009-2016	3T	55 Headlight Range Control	Clear Fault Codes	
Superb	2009-2016	3T	55 Headlight Range Control	Measuring Blocks	
Superb	2009-2016	3T	55 Headlight Range Control	Output Tests	
Superb	2009-2016	3T	55 Headlight Range Control	Specia Functions	
Superb	2009-2016	3T	56 Radio	Read Fault Codes	
Superb	2009-2016	3T	56 Radio	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb	2009-2016	3T	56 Radio	Measuring Blocks	
Superb	2009-2016	3T	56 Radio	Output Tests	
Superb	2009-2016	3T	56 Radio	Specia Functions	
Superb	2009-2016	3T	62 LR-Door Electroni.	Read Fault Codes	
Superb	2009-2016	3T	62 LR-Door Electroni.	Clear Fault Codes	
Superb	2009-2016	3T	62 LR-Door Electroni.	Measuring Blocks	
Superb	2009-2016	3T	62 LR-Door Electroni.	Output Tests	
Superb	2009-2016	3T	62 LR-Door Electroni.	Specia Functions	
Superb	2009-2016	3T	72 RR-Door Electroni.	Read Fault Codes	
Superb	2009-2016	3T	72 RR-Door Electroni.	Clear Fault Codes	
Superb	2009-2016	3T	72 RR-Door Electroni.	Measuring Blocks	
Superb	2009-2016	3T	72 RR-Door Electroni.	Output Tests	
Superb	2009-2016	3T	72 RR-Door Electroni.	Specia Functions	
Superb	2009-2016	3T	77 Telephone	Read Fault Codes	
Superb	2009-2016	3T	77 Telephone	Clear Fault Codes	
Superb	2009-2016	3T	77 Telephone	Measuring Blocks	
Superb	2009-2016	3T	77 Telephone	Output Tests	
Superb	2009-2016	3T	77 Telephone	Specia Functions	
Yeti	2013-2018	5L	01 Engine Electronics	Read Fault Codes	
Yeti	2013-2018	5L	01 Engine Electronics	Clear Fault Codes	
Yeti	2013-2018	5L	01 Engine Electronics	Measuring Blocks	
Yeti	2013-2018	5L	01 Engine Electronics	Output Tests	
Yeti	2013-2018	5L	01 Engine Electronics	Specia Functions	
Yeti	2013-2018	5L	02 Transmission Electronics	Read Fault Codes	
Yeti	2013-2018	5L	02 Transmission Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Yeti	2013-2018	5L	02 Transmission Electronics	Measuring Blocks	
Yeti	2013-2018	5L	02 Transmission Electronics	Output Tests	
Yeti	2013-2018	5L	02 Transmission Electronics	Specia Functions	
Yeti	2013-2018	5L	03 Brake Electronics	Read Fault Codes	
Yeti	2013-2018	5L	03 Brake Electronics	Clear Fault Codes	
Yeti	2013-2018	5L	03 Brake Electronics	Measuring Blocks	
Yeti	2013-2018	5L	03 Brake Electronics	Output Tests	
Yeti	2013-2018	5L	03 Brake Electronics	Specia Functions	
Yeti	2013-2018	5L	05 Access & Permissi.	Read Fault Codes	
Yeti	2013-2018	5L	05 Access & Permissi.	Clear Fault Codes	
Yeti	2013-2018	5L	05 Access & Permissi.	Measuring Blocks	
Yeti	2013-2018	5L	05 Access & Permissi.	Output Tests	
Yeti	2013-2018	5L	05 Access & Permissi.	Specia Functions	
Yeti	2013-2018	5L	08 AC/Heating Electronics	Read Fault Codes	
Yeti	2013-2018	5L	08 AC/Heating Electronics	Clear Fault Codes	
Yeti	2013-2018	5L	08 AC/Heating Electronics	Measuring Blocks	
Yeti	2013-2018	5L	08 AC/Heating Electronics	Output Tests	
Yeti	2013-2018	5L	08 AC/Heating Electronics	Specia Functions	
Yeti	2013-2018	5L	09 Electronic Ctrl Electronics	Read Fault Codes	
Yeti	2013-2018	5L	09 Electronic Ctrl Electronics	Clear Fault Codes	
Yeti	2013-2018	5L	09 Electronic Ctrl Electronics	Measuring Blocks	
Yeti	2013-2018	5L	09 Electronic Ctrl Electronics	Output Tests	
Yeti	2013-2018	5L	09 Electronic Ctrl Electronics	Specia Functions	
Yeti	2013-2018	5L	10 Parking Assist System 2	Read Fault Codes	
Yeti	2013-2018	5L	10 Parking Assist System 2	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Yeti	2013-2018	5L	10 Parking Assist System 2	Measuring Blocks	
Yeti	2013-2018	5L	10 Parking Assist System 2	Output Tests	
Yeti	2013-2018	5L	10 Parking Assist System 2	Specia Functions	
Yeti	2013-2018	5L	15 Airbags	Read Fault Codes	
Yeti	2013-2018	5L	15 Airbags	Clear Fault Codes	
Yeti	2013-2018	5L	15 Airbags	Measuring Blocks	
Yeti	2013-2018	5L	15 Airbags	Output Tests	
Yeti	2013-2018	5L	15 Airbags	Specia Functions	
Yeti	2013-2018	5L	16 Steering Wheel Electronics	Read Fault Codes	
Yeti	2013-2018	5L	16 Steering Wheel Electronics	Clear Fault Codes	
Yeti	2013-2018	5L	16 Steering Wheel Electronics	Measuring Blocks	
Yeti	2013-2018	5L	16 Steering Wheel Electronics	Output Tests	
Yeti	2013-2018	5L	16 Steering Wheel Electronics	Specia Functions	
Yeti	2013-2018	5L	17 Instrument Cluster	Read Fault Codes	
Yeti	2013-2018	5L	17 Instrument Cluster	Clear Fault Codes	
Yeti	2013-2018	5L	17 Instrument Cluster	Measuring Blocks	
Yeti	2013-2018	5L	17 Instrument Cluster	Output Tests	
Yeti	2013-2018	5L	17 Instrument Cluster	Specia Functions	
Yeti	2013-2018	5L	19 Gateway Data Bus	Read Fault Codes	
Yeti	2013-2018	5L	19 Gateway Data Bus	Clear Fault Codes	
Yeti	2013-2018	5L	19 Gateway Data Bus	Measuring Blocks	
Yeti	2013-2018	5L	19 Gateway Data Bus	Output Tests	
Yeti	2013-2018	5L	19 Gateway Data Bus	Specia Functions	
Yeti	2013-2018	5L	22 4WD Electronics	Read Fault Codes	
Yeti	2013-2018	5L	22 4WD Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Yeti	2013-2018	5L	22 4WD Electronics	Measuring Blocks	
Yeti	2013-2018	5L	22 4WD Electronics	Output Tests	
Yeti	2013-2018	5L	22 4WD Electronics	Specia Functions	
Yeti	2013-2018	5L	25 Immobilizer	Read Fault Codes	
Yeti	2013-2018	5L	25 Immobilizer	Clear Fault Codes	
Yeti	2013-2018	5L	25 Immobilizer	Measuring Blocks	
Yeti	2013-2018	5L	25 Immobilizer	Output Tests	
Yeti	2013-2018	5L	25 Immobilizer	Specia Functions	
Yeti	2013-2018	5L	2B Steer Col Lock	Read Fault Codes	
Yeti	2013-2018	5L	2B Steer Col Lock	Clear Fault Codes	
Yeti	2013-2018	5L	2B Steer Col Lock	Measuring Blocks	
Yeti	2013-2018	5L	2B Steer Col Lock	Output Tests	
Yeti	2013-2018	5L	2B Steer Col Lock	Specia Functions	
Yeti	2013-2018	5L	36 Driver`s Side Seat Adj.	Read Fault Codes	
Yeti	2013-2018	5L	36 Driver`s Side Seat Adj.	Clear Fault Codes	
Yeti	2013-2018	5L	36 Driver`s Side Seat Adj.	Measuring Blocks	
Yeti	2013-2018	5L	36 Driver`s Side Seat Adj.	Output Tests	
Yeti	2013-2018	5L	36 Driver`s Side Seat Adj.	Specia Functions	
Yeti	2013-2018	5L	37 Navigation	Read Fault Codes	
Yeti	2013-2018	5L	37 Navigation	Clear Fault Codes	
Yeti	2013-2018	5L	37 Navigation	Measuring Blocks	
Yeti	2013-2018	5L	37 Navigation	Output Tests	
Yeti	2013-2018	5L	37 Navigation	Specia Functions	
Yeti	2013-2018	5L	42 Driver-Door Elect.	Read Fault Codes	
Yeti	2013-2018	5L	42 Driver-Door Elect.	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Yeti	2013-2018	5L	42 Driver-Door Elect.	Measuring Blocks	
Yeti	2013-2018	5L	42 Driver-Door Elect.	Output Tests	
Yeti	2013-2018	5L	42 Driver-Door Elect.	Specia Functions	
Yeti	2013-2018	5L	44 Steering Assistance	Read Fault Codes	
Yeti	2013-2018	5L	44 Steering Assistance	Clear Fault Codes	
Yeti	2013-2018	5L	44 Steering Assistance	Measuring Blocks	
Yeti	2013-2018	5L	44 Steering Assistance	Output Tests	
Yeti	2013-2018	5L	44 Steering Assistance	Specia Functions	
Yeti	2013-2018	5L	46 Central Control Module	Read Fault Codes	
Yeti	2013-2018	5L	46 Central Control Module	Clear Fault Codes	
Yeti	2013-2018	5L	46 Central Control Module	Measuring Blocks	
Yeti	2013-2018	5L	46 Central Control Module	Output Tests	
Yeti	2013-2018	5L	46 Central Control Module	Specia Functions	
Yeti	2013-2018	5L	52 Passe.-Door Elect.	Read Fault Codes	
Yeti	2013-2018	5L	52 Passe.-Door Elect.	Clear Fault Codes	
Yeti	2013-2018	5L	52 Passe.-Door Elect.	Measuring Blocks	
Yeti	2013-2018	5L	52 Passe.-Door Elect.	Output Tests	
Yeti	2013-2018	5L	52 Passe.-Door Elect.	Specia Functions	
Yeti	2013-2018	5L	55 Headlight Range Control	Read Fault Codes	
Yeti	2013-2018	5L	55 Headlight Range Control	Clear Fault Codes	
Yeti	2013-2018	5L	55 Headlight Range Control	Measuring Blocks	
Yeti	2013-2018	5L	55 Headlight Range Control	Output Tests	
Yeti	2013-2018	5L	55 Headlight Range Control	Specia Functions	
Yeti	2013-2018	5L	56 Radio	Read Fault Codes	
Yeti	2013-2018	5L	56 Radio	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Yeti	2013-2018	5L	56 Radio	Measuring Blocks	
Yeti	2013-2018	5L	56 Radio	Output Tests	
Yeti	2013-2018	5L	56 Radio	Specia Functions	
Yeti	2013-2018	5L	62 LR-Door Electroni.	Read Fault Codes	
Yeti	2013-2018	5L	62 LR-Door Electroni.	Clear Fault Codes	
Yeti	2013-2018	5L	62 LR-Door Electroni.	Measuring Blocks	
Yeti	2013-2018	5L	62 LR-Door Electroni.	Output Tests	
Yeti	2013-2018	5L	62 LR-Door Electroni.	Specia Functions	
Yeti	2013-2018	5L	72 RR-Door Electroni.	Read Fault Codes	
Yeti	2013-2018	5L	72 RR-Door Electroni.	Clear Fault Codes	
Yeti	2013-2018	5L	72 RR-Door Electroni.	Measuring Blocks	
Yeti	2013-2018	5L	72 RR-Door Electroni.	Output Tests	
Yeti	2013-2018	5L	72 RR-Door Electroni.	Specia Functions	
Yeti	2013-2018	5L	77 Telephone	Read Fault Codes	
Yeti	2013-2018	5L	77 Telephone	Clear Fault Codes	
Yeti	2013-2018	5L	77 Telephone	Measuring Blocks	
Yeti	2013-2018	5L	77 Telephone	Output Tests	
Yeti	2013-2018	5L	77 Telephone	Specia Functions	
Fabia	2015-2018	0F	01 Engine Electronics	Read Fault Codes	
Fabia	2015-2018	0F	01 Engine Electronics	Clear Fault Codes	
Fabia	2015-2018	0F	01 Engine Electronics	Measuring Blocks	
Fabia	2015-2018	0F	01 Engine Electronics	Output Tests	
Fabia	2015-2018	0F	01 Engine Electronics	Specia Functions	
Fabia	2015-2018	0F	02 Transmission Electronics	Read Fault Codes	
Fabia	2015-2018	0F	02 Transmission Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia	2015-2018	0F	02 Transmission Electronics	Measuring Blocks	
Fabia	2015-2018	0F	02 Transmission Electronics	Output Tests	
Fabia	2015-2018	0F	02 Transmission Electronics	Specia Functions	
Fabia	2015-2018	0F	03 Brake Electronics	Read Fault Codes	
Fabia	2015-2018	0F	03 Brake Electronics	Clear Fault Codes	
Fabia	2015-2018	0F	03 Brake Electronics	Measuring Blocks	
Fabia	2015-2018	0F	03 Brake Electronics	Output Tests	
Fabia	2015-2018	0F	03 Brake Electronics	Specia Functions	
Fabia	2015-2018	0F	04 Steering Position	Read Fault Codes	
Fabia	2015-2018	0F	04 Steering Position	Clear Fault Codes	
Fabia	2015-2018	0F	04 Steering Position	Measuring Blocks	
Fabia	2015-2018	0F	04 Steering Position	Output Tests	
Fabia	2015-2018	0F	04 Steering Position	Specia Functions	
Fabia	2015-2018	0F	08 AC/Heating Electronics	Read Fault Codes	
Fabia	2015-2018	0F	08 AC/Heating Electronics	Clear Fault Codes	
Fabia	2015-2018	0F	08 AC/Heating Electronics	Measuring Blocks	
Fabia	2015-2018	0F	08 AC/Heating Electronics	Output Tests	
Fabia	2015-2018	0F	08 AC/Heating Electronics	Specia Functions	
Fabia	2015-2018	0F	09 Electronic Ctrl Electronics	Read Fault Codes	
Fabia	2015-2018	0F	09 Electronic Ctrl Electronics	Clear Fault Codes	
Fabia	2015-2018	0F	09 Electronic Ctrl Electronics	Measuring Blocks	
Fabia	2015-2018	0F	09 Electronic Ctrl Electronics	Output Tests	
Fabia	2015-2018	0F	09 Electronic Ctrl Electronics	Specia Functions	
Fabia	2015-2018	0F	15 Airbags	Read Fault Codes	
Fabia	2015-2018	0F	15 Airbags	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Fabia	2015-2018	0F	15 Airbags	Measuring Blocks	
Fabia	2015-2018	0F	15 Airbags	Output Tests	
Fabia	2015-2018	0F	15 Airbags	Specia Functions	
Fabia	2015-2018	0F	17 Instrument Cluster	Read Fault Codes	
Fabia	2015-2018	0F	17 Instrument Cluster	Clear Fault Codes	
Fabia	2015-2018	0F	17 Instrument Cluster	Measuring Blocks	
Fabia	2015-2018	0F	17 Instrument Cluster	Output Tests	
Fabia	2015-2018	0F	17 Instrument Cluster	Specia Functions	
Fabia	2015-2018	0F	19 Gateway Data Bus	Read Fault Codes	
Fabia	2015-2018	0F	19 Gateway Data Bus	Clear Fault Codes	
Fabia	2015-2018	0F	19 Gateway Data Bus	Measuring Blocks	
Fabia	2015-2018	0F	19 Gateway Data Bus	Output Tests	
Fabia	2015-2018	0F	19 Gateway Data Bus	Specia Functions	
Fabia	2015-2018	0F	25 Immobilizer	Read Fault Codes	
Fabia	2015-2018	0F	25 Immobilizer	Clear Fault Codes	
Fabia	2015-2018	0F	25 Immobilizer	Measuring Blocks	
Fabia	2015-2018	0F	25 Immobilizer	Output Tests	
Fabia	2015-2018	0F	25 Immobilizer	Specia Functions	
Fabia	2015-2018	0F	44 Steering Assistance	Read Fault Codes	
Fabia	2015-2018	0F	44 Steering Assistance	Clear Fault Codes	
Fabia	2015-2018	0F	44 Steering Assistance	Measuring Blocks	
Fabia	2015-2018	0F	44 Steering Assistance	Output Tests	
Fabia	2015-2018	0F	44 Steering Assistance	Specia Functions	
Superb	2015-2018	3V	01 Engine Electronics	Read Fault Codes	
Superb	2015-2018	3V	01 Engine Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb	2015-2018	3V	01 Engine Electronics	Measuring Blocks	
Superb	2015-2018	3V	01 Engine Electronics	Output Tests	
Superb	2015-2018	3V	01 Engine Electronics	Specia Functions	
Superb	2015-2018	3V	02 Transmission Electronics	Read Fault Codes	
Superb	2015-2018	3V	02 Transmission Electronics	Clear Fault Codes	
Superb	2015-2018	3V	02 Transmission Electronics	Measuring Blocks	
Superb	2015-2018	3V	02 Transmission Electronics	Output Tests	
Superb	2015-2018	3V	02 Transmission Electronics	Specia Functions	
Superb	2015-2018	3V	03 Brake Electronics	Read Fault Codes	
Superb	2015-2018	3V	03 Brake Electronics	Clear Fault Codes	
Superb	2015-2018	3V	03 Brake Electronics	Measuring Blocks	
Superb	2015-2018	3V	03 Brake Electronics	Output Tests	
Superb	2015-2018	3V	03 Brake Electronics	Specia Functions	
Superb	2015-2018	3V	06 Passene. Seat Adj.	Read Fault Codes	
Superb	2015-2018	3V	06 Passene. Seat Adj.	Clear Fault Codes	
Superb	2015-2018	3V	06 Passene. Seat Adj.	Measuring Blocks	
Superb	2015-2018	3V	06 Passene. Seat Adj.	Output Tests	
Superb	2015-2018	3V	06 Passene. Seat Adj.	Specia Functions	
Superb	2015-2018	3V	08 AC/Heating Electronics	Read Fault Codes	
Superb	2015-2018	3V	08 AC/Heating Electronics	Clear Fault Codes	
Superb	2015-2018	3V	08 AC/Heating Electronics	Measuring Blocks	
Superb	2015-2018	3V	08 AC/Heating Electronics	Output Tests	
Superb	2015-2018	3V	08 AC/Heating Electronics	Specia Functions	
Superb	2015-2018	3V	09 Electronic Ctrl Electronics	Read Fault Codes	
Superb	2015-2018	3V	09 Electronic Ctrl Electronics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb	2015-2018	3V	09 Electronic Ctrl Electronics	Measuring Blocks	
Superb	2015-2018	3V	09 Electronic Ctrl Electronics	Output Tests	
Superb	2015-2018	3V	09 Electronic Ctrl Electronics	Specia Functions	
Superb	2015-2018	3V	13 Distance Control	Read Fault Codes	
Superb	2015-2018	3V	13 Distance Control	Clear Fault Codes	
Superb	2015-2018	3V	13 Distance Control	Measuring Blocks	
Superb	2015-2018	3V	13 Distance Control	Output Tests	
Superb	2015-2018	3V	13 Distance Control	Specia Functions	
Superb	2015-2018	3V	15 Airbags	Read Fault Codes	
Superb	2015-2018	3V	15 Airbags	Clear Fault Codes	
Superb	2015-2018	3V	15 Airbags	Measuring Blocks	
Superb	2015-2018	3V	15 Airbags	Output Tests	
Superb	2015-2018	3V	15 Airbags	Specia Functions	
Superb	2015-2018	3V	16 Steering Wheel Electronics	Read Fault Codes	
Superb	2015-2018	3V	16 Steering Wheel Electronics	Clear Fault Codes	
Superb	2015-2018	3V	16 Steering Wheel Electronics	Measuring Blocks	
Superb	2015-2018	3V	16 Steering Wheel Electronics	Output Tests	
Superb	2015-2018	3V	16 Steering Wheel Electronics	Specia Functions	
Superb	2015-2018	3V	17 Instrument Cluster	Read Fault Codes	
Superb	2015-2018	3V	17 Instrument Cluster	Clear Fault Codes	
Superb	2015-2018	3V	17 Instrument Cluster	Measuring Blocks	
Superb	2015-2018	3V	17 Instrument Cluster	Output Tests	
Superb	2015-2018	3V	17 Instrument Cluster	Specia Functions	
Superb	2015-2018	3V	19 Gateway Data Bus	Read Fault Codes	
Superb	2015-2018	3V	19 Gateway Data Bus	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb	2015-2018	3V	19 Gateway Data Bus	Measuring Blocks	
Superb	2015-2018	3V	19 Gateway Data Bus	Output Tests	
Superb	2015-2018	3V	19 Gateway Data Bus	Specia Functions	
Superb	2015-2018	3V	2B Steer Col Lock	Read Fault Codes	
Superb	2015-2018	3V	2B Steer Col Lock	Clear Fault Codes	
Superb	2015-2018	3V	2B Steer Col Lock	Measuring Blocks	
Superb	2015-2018	3V	2B Steer Col Lock	Output Tests	
Superb	2015-2018	3V	2B Steer Col Lock	Specia Functions	
Superb	2015-2018	3V	36 Driver`s Side Seat Adj.	Read Fault Codes	
Superb	2015-2018	3V	36 Driver`s Side Seat Adj.	Clear Fault Codes	
Superb	2015-2018	3V	36 Driver`s Side Seat Adj.	Measuring Blocks	
Superb	2015-2018	3V	36 Driver`s Side Seat Adj.	Output Tests	
Superb	2015-2018	3V	36 Driver`s Side Seat Adj.	Specia Functions	
Superb	2015-2018	3V	3C Lane Departure Assistance System	Read Fault Codes	
Superb	2015-2018	3V	3C Lane Departure Assistance System	Clear Fault Codes	
Superb	2015-2018	3V	3C Lane Departure Assistance System	Measuring Blocks	
Superb	2015-2018	3V	3C Lane Departure Assistance System	Output Tests	
Superb	2015-2018	3V	3C Lane Departure Assistance System	Specia Functions	
Superb	2015-2018	3V	42 Driver-Door Elect.	Read Fault Codes	
Superb	2015-2018	3V	42 Driver-Door Elect.	Clear Fault Codes	
Superb	2015-2018	3V	42 Driver-Door Elect.	Measuring Blocks	
Superb	2015-2018	3V	42 Driver-Door Elect.	Output Tests	
Superb	2015-2018	3V	42 Driver-Door Elect.	Specia Functions	
Superb	2015-2018	3V	44 Steering Assistance	Read Fault Codes	
Superb	2015-2018	3V	44 Steering Assistance	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb	2015-2018	3V	44 Steering Assistance	Measuring Blocks	
Superb	2015-2018	3V	44 Steering Assistance	Output Tests	
Superb	2015-2018	3V	44 Steering Assistance	Specia Functions	
Superb	2015-2018	3V	47 Soundsystem	Read Fault Codes	
Superb	2015-2018	3V	47 Soundsystem	Clear Fault Codes	
Superb	2015-2018	3V	47 Soundsystem	Measuring Blocks	
Superb	2015-2018	3V	47 Soundsystem	Output Tests	
Superb	2015-2018	3V	47 Soundsystem	Specia Functions	
Superb	2015-2018	3V	4B Multifunction Module	Read Fault Codes	
Superb	2015-2018	3V	4B Multifunction Module	Clear Fault Codes	
Superb	2015-2018	3V	4B Multifunction Module	Measuring Blocks	
Superb	2015-2018	3V	4B Multifunction Module	Output Tests	
Superb	2015-2018	3V	4B Multifunction Module	Specia Functions	
Superb	2015-2018	3V	52 Passe.-Door Elect.	Read Fault Codes	
Superb	2015-2018	3V	52 Passe.-Door Elect.	Clear Fault Codes	
Superb	2015-2018	3V	52 Passe.-Door Elect.	Measuring Blocks	
Superb	2015-2018	3V	52 Passe.-Door Elect.	Output Tests	
Superb	2015-2018	3V	52 Passe.-Door Elect.	Specia Functions	
Superb	2015-2018	3V	55 Headlight Range Control	Read Fault Codes	
Superb	2015-2018	3V	55 Headlight Range Control	Clear Fault Codes	
Superb	2015-2018	3V	55 Headlight Range Control	Measuring Blocks	
Superb	2015-2018	3V	55 Headlight Range Control	Output Tests	
Superb	2015-2018	3V	55 Headlight Range Control	Specia Functions	
Superb	2015-2018	3V	5F Information Electronic Equipment 1	Read Fault Codes	
Superb	2015-2018	3V	5F Information Electronic Equipment 1	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb	2015-2018	3V	5F Information Electronic Equipment 1	Measuring Blocks	
Superb	2015-2018	3V	5F Information Electronic Equipment 1	Output Tests	
Superb	2015-2018	3V	5F Information Electronic Equipment 1	Specia Functions	
Superb	2015-2018	3V	6C Rear Camera	Read Fault Codes	
Superb	2015-2018	3V	6C Rear Camera	Clear Fault Codes	
Superb	2015-2018	3V	6C Rear Camera	Measuring Blocks	
Superb	2015-2018	3V	6C Rear Camera	Output Tests	
Superb	2015-2018	3V	6C Rear Camera	Specia Functions	
Superb	2015-2018	3V	6D Electronic Equipment of Trunk Lid	Read Fault Codes	
Superb	2015-2018	3V	6D Electronic Equipment of Trunk Lid	Clear Fault Codes	
Superb	2015-2018	3V	6D Electronic Equipment of Trunk Lid	Measuring Blocks	
Superb	2015-2018	3V	6D Electronic Equipment of Trunk Lid	Output Tests	
Superb	2015-2018	3V	6D Electronic Equipment of Trunk Lid	Specia Functions	
Superb	2015-2018	3V	76 Parking Aid	Read Fault Codes	
Superb	2015-2018	3V	76 Parking Aid	Clear Fault Codes	
Superb	2015-2018	3V	76 Parking Aid	Measuring Blocks	
Superb	2015-2018	3V	76 Parking Aid	Output Tests	
Superb	2015-2018	3V	76 Parking Aid	Specia Functions	
Superb	2015-2018	3V	A5 Frt Sens.Drv.Assist	Read Fault Codes	
Superb	2015-2018	3V	A5 Frt Sens.Drv.Assist	Clear Fault Codes	
Superb	2015-2018	3V	A5 Frt Sens.Drv.Assist	Measuring Blocks	
Superb	2015-2018	3V	A5 Frt Sens.Drv.Assist	Output Tests	
Superb	2015-2018	3V	A5 Frt Sens.Drv.Assist	Specia Functions	
Superb	2015-2018	3V	B7 Access Start Interf	Read Fault Codes	
Superb	2015-2018	3V	B7 Access Start Interf	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Superb	2015-2018	3V	B7 Access Start Interf	Measuring Blocks	
Superb	2015-2018	3V	B7 Access Start Interf	Output Tests	
Superb	2015-2018	3V	B7 Access Start Interf	Specia Functions	
Superb	2015-2018	3V	BB Door Rear Drv Side	Read Fault Codes	
Superb	2015-2018	3V	BB Door Rear Drv Side	Clear Fault Codes	
Superb	2015-2018	3V	BB Door Rear Drv Side	Measuring Blocks	
Superb	2015-2018	3V	BB Door Rear Drv Side	Output Tests	
Superb	2015-2018	3V	BB Door Rear Drv Side	Specia Functions	
Superb	2015-2018	3V	BC Door Rear Pass Side	Read Fault Codes	
Superb	2015-2018	3V	BC Door Rear Pass Side	Clear Fault Codes	
Superb	2015-2018	3V	BC Door Rear Pass Side	Measuring Blocks	
Superb	2015-2018	3V	BC Door Rear Pass Side	Output Tests	
Superb	2015-2018	3V	BC Door Rear Pass Side	Specia Functions	
Superb	2015-2018	3V	CA Control Module For Sunroof	Read Fault Codes	
Superb	2015-2018	3V	CA Control Module For Sunroof	Clear Fault Codes	
Superb	2015-2018	3V	CA Control Module For Sunroof	Measuring Blocks	
Superb	2015-2018	3V	CA Control Module For Sunroof	Output Tests	
Superb	2015-2018	3V	CA Control Module For Sunroof	Specia Functions	
Superb	2015-2018	3V	DD Control Module 2 For Sunroof	Read Fault Codes	
Superb	2015-2018	3V	DD Control Module 2 For Sunroof	Clear Fault Codes	
Superb	2015-2018	3V	DD Control Module 2 For Sunroof	Measuring Blocks	
Superb	2015-2018	3V	DD Control Module 2 For Sunroof	Output Tests	
Superb	2015-2018	3V	DD Control Module 2 For Sunroof	Specia Functions	
Karoq	2018	NU	01 Engine Control Module 1	Read Fault Codes	
Karoq	2018	NU	01 Engine Control Module 1	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Karoq	2018	NU	01 Engine Control Module 1	Measuring Blocks	
Karoq	2018	NU	01 Engine Control Module 1	Output Tests	
Karoq	2018	NU	01 Engine Control Module 1	Specia Functions	
Karoq	2018	NU	02 Transmission Control Module	Read Fault Codes	
Karoq	2018	NU	02 Transmission Control Module	Clear Fault Codes	
Karoq	2018	NU	02 Transmission Control Module	Measuring Blocks	
Karoq	2018	NU	02 Transmission Control Module	Output Tests	
Karoq	2018	NU	02 Transmission Control Module	Specia Functions	
Karoq	2018	NU	03 Brakes 1	Read Fault Codes	
Karoq	2018	NU	03 Brakes 1	Clear Fault Codes	
Karoq	2018	NU	03 Brakes 1	Measuring Blocks	
Karoq	2018	NU	03 Brakes 1	Output Tests	
Karoq	2018	NU	03 Brakes 1	Specia Functions	
Karoq	2018	NU	06 Seat Adjustment Passenger Side	Read Fault Codes	
Karoq	2018	NU	06 Seat Adjustment Passenger Side	Clear Fault Codes	
Karoq	2018	NU	06 Seat Adjustment Passenger Side	Measuring Blocks	
Karoq	2018	NU	06 Seat Adjustment Passenger Side	Output Tests	
Karoq	2018	NU	06 Seat Adjustment Passenger Side	Specia Functions	
Karoq	2018	NU	08 Air Conditioning	Read Fault Codes	
Karoq	2018	NU	08 Air Conditioning	Clear Fault Codes	
Karoq	2018	NU	08 Air Conditioning	Measuring Blocks	
Karoq	2018	NU	08 Air Conditioning	Output Tests	
Karoq	2018	NU	08 Air Conditioning	Specia Functions	
Karoq	2018	NU	09 Central Electrics	Read Fault Codes	
Karoq	2018	NU	09 Central Electrics	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Karoq	2018	NU	09 Central Electrics	Measuring Blocks	
Karoq	2018	NU	09 Central Electrics	Output Tests	
Karoq	2018	NU	09 Central Electrics	Specia Functions	
Karoq	2018	NU	13 Adaptive Cruise Control	Read Fault Codes	
Karoq	2018	NU	13 Adaptive Cruise Control	Clear Fault Codes	
Karoq	2018	NU	13 Adaptive Cruise Control	Measuring Blocks	
Karoq	2018	NU	13 Adaptive Cruise Control	Output Tests	
Karoq	2018	NU	13 Adaptive Cruise Control	Specia Functions	
Karoq	2018	NU	14 Wheel Dampening Electronics	Read Fault Codes	
Karoq	2018	NU	14 Wheel Dampening Electronics	Clear Fault Codes	
Karoq	2018	NU	14 Wheel Dampening Electronics	Measuring Blocks	
Karoq	2018	NU	14 Wheel Dampening Electronics	Output Tests	
Karoq	2018	NU	14 Wheel Dampening Electronics	Specia Functions	
Karoq	2018	NU	15 Airbag	Read Fault Codes	
Karoq	2018	NU	15 Airbag	Clear Fault Codes	
Karoq	2018	NU	15 Airbag	Measuring Blocks	
Karoq	2018	NU	15 Airbag	Output Tests	
Karoq	2018	NU	15 Airbag	Specia Functions	
Karoq	2018	NU	16 Steering Column Electronics	Read Fault Codes	
Karoq	2018	NU	16 Steering Column Electronics	Clear Fault Codes	
Karoq	2018	NU	16 Steering Column Electronics	Measuring Blocks	
Karoq	2018	NU	16 Steering Column Electronics	Output Tests	
Karoq	2018	NU	16 Steering Column Electronics	Specia Functions	
Karoq	2018	NU	17 Dash Board	Read Fault Codes	
Karoq	2018	NU	17 Dash Board	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Karoq	2018	NU	17 Dash Board	Measuring Blocks	
Karoq	2018	NU	17 Dash Board	Output Tests	
Karoq	2018	NU	17 Dash Board	Specia Functions	
Karoq	2018	NU	18 Auxiliary Parking Heater	Read Fault Codes	
Karoq	2018	NU	18 Auxiliary Parking Heater	Clear Fault Codes	
Karoq	2018	NU	18 Auxiliary Parking Heater	Measuring Blocks	
Karoq	2018	NU	18 Auxiliary Parking Heater	Output Tests	
Karoq	2018	NU	18 Auxiliary Parking Heater	Specia Functions	
Karoq	2018	NU	19 Gateway	Read Fault Codes	
Karoq	2018	NU	19 Gateway	Clear Fault Codes	
Karoq	2018	NU	19 Gateway	Measuring Blocks	
Karoq	2018	NU	19 Gateway	Output Tests	
Karoq	2018	NU	19 Gateway	Specia Functions	
Karoq	2018	NU	20 High Beam Assistance	Read Fault Codes	
Karoq	2018	NU	20 High Beam Assistance	Clear Fault Codes	
Karoq	2018	NU	20 High Beam Assistance	Measuring Blocks	
Karoq	2018	NU	20 High Beam Assistance	Output Tests	
Karoq	2018	NU	20 High Beam Assistance	Specia Functions	
Karoq	2018	NU	22 All Wheel Control	Read Fault Codes	
Karoq	2018	NU	22 All Wheel Control	Clear Fault Codes	
Karoq	2018	NU	22 All Wheel Control	Measuring Blocks	
Karoq	2018	NU	22 All Wheel Control	Output Tests	
Karoq	2018	NU	22 All Wheel Control	Specia Functions	
Karoq	2018	NU	28 Climate Control Unit Rear	Read Fault Codes	
Karoq	2018	NU	28 Climate Control Unit Rear	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Karoq	2018	NU	28 Climate Control Unit Rear	Measuring Blocks	
Karoq	2018	NU	28 Climate Control Unit Rear	Output Tests	
Karoq	2018	NU	28 Climate Control Unit Rear	Specia Functions	
Karoq	2018	NU	2B Steering Column Locking	Read Fault Codes	
Karoq	2018	NU	2B Steering Column Locking	Clear Fault Codes	
Karoq	2018	NU	2B Steering Column Locking	Measuring Blocks	
Karoq	2018	NU	2B Steering Column Locking	Output Tests	
Karoq	2018	NU	2B Steering Column Locking	Specia Functions	
Karoq	2018	NU	32 Lock Electronics	Read Fault Codes	
Karoq	2018	NU	32 Lock Electronics	Clear Fault Codes	
Karoq	2018	NU	32 Lock Electronics	Measuring Blocks	
Karoq	2018	NU	32 Lock Electronics	Output Tests	
Karoq	2018	NU	32 Lock Electronics	Specia Functions	
Karoq	2018	NU	36 Seat Adjustment Driver Side	Read Fault Codes	
Karoq	2018	NU	36 Seat Adjustment Driver Side	Clear Fault Codes	
Karoq	2018	NU	36 Seat Adjustment Driver Side	Measuring Blocks	
Karoq	2018	NU	36 Seat Adjustment Driver Side	Output Tests	
Karoq	2018	NU	36 Seat Adjustment Driver Side	Specia Functions	
Karoq	2018	NU	39 Light Control Right	Read Fault Codes	
Karoq	2018	NU	39 Light Control Right	Clear Fault Codes	
Karoq	2018	NU	39 Light Control Right	Measuring Blocks	
Karoq	2018	NU	39 Light Control Right	Output Tests	
Karoq	2018	NU	39 Light Control Right	Specia Functions	
Karoq	2018	NU	3C Lane Change Assistant	Read Fault Codes	
Karoq	2018	NU	3C Lane Change Assistant	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Karoq	2018	NU	3C Lane Change Assistant	Measuring Blocks	
Karoq	2018	NU	3C Lane Change Assistant	Output Tests	
Karoq	2018	NU	3C Lane Change Assistant	Specia Functions	
Karoq	2018	NU	3D Special Function	Read Fault Codes	
Karoq	2018	NU	3D Special Function	Clear Fault Codes	
Karoq	2018	NU	3D Special Function	Measuring Blocks	
Karoq	2018	NU	3D Special Function	Output Tests	
Karoq	2018	NU	3D Special Function	Specia Functions	
Karoq	2018	NU	42 Door Electronics Driver Side	Read Fault Codes	
Karoq	2018	NU	42 Door Electronics Driver Side	Clear Fault Codes	
Karoq	2018	NU	42 Door Electronics Driver Side	Measuring Blocks	
Karoq	2018	NU	42 Door Electronics Driver Side	Output Tests	
Karoq	2018	NU	42 Door Electronics Driver Side	Specia Functions	
Karoq	2018	NU	44 Steering Assistance	Read Fault Codes	
Karoq	2018	NU	44 Steering Assistance	Clear Fault Codes	
Karoq	2018	NU	44 Steering Assistance	Measuring Blocks	
Karoq	2018	NU	44 Steering Assistance	Output Tests	
Karoq	2018	NU	44 Steering Assistance	Specia Functions	
Karoq	2018	NU	47 Sound System	Read Fault Codes	
Karoq	2018	NU	47 Sound System	Clear Fault Codes	
Karoq	2018	NU	47 Sound System	Measuring Blocks	
Karoq	2018	NU	47 Sound System	Output Tests	
Karoq	2018	NU	47 Sound System	Specia Functions	
Karoq	2018	NU	4B Multifunction Module	Read Fault Codes	
Karoq	2018	NU	4B Multifunction Module	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Karoq	2018	NU	4B Multifunction Module	Measuring Blocks	
Karoq	2018	NU	4B Multifunction Module	Output Tests	
Karoq	2018	NU	4B Multifunction Module	Specia Functions	
Karoq	2018	NU	52 Door Electronics Passenger Side	Read Fault Codes	
Karoq	2018	NU	52 Door Electronics Passenger Side	Clear Fault Codes	
Karoq	2018	NU	52 Door Electronics Passenger Side	Measuring Blocks	
Karoq	2018	NU	52 Door Electronics Passenger Side	Output Tests	
Karoq	2018	NU	52 Door Electronics Passenger Side	Specia Functions	
Karoq	2018	NU	55 Headlight Regulation	Read Fault Codes	
Karoq	2018	NU	55 Headlight Regulation	Clear Fault Codes	
Karoq	2018	NU	55 Headlight Regulation	Measuring Blocks	
Karoq	2018	NU	55 Headlight Regulation	Output Tests	
Karoq	2018	NU	55 Headlight Regulation	Specia Functions	
Karoq	2018	NU	57 TV Tuner	Read Fault Codes	
Karoq	2018	NU	57 TV Tuner	Clear Fault Codes	
Karoq	2018	NU	57 TV Tuner	Measuring Blocks	
Karoq	2018	NU	57 TV Tuner	Output Tests	
Karoq	2018	NU	57 TV Tuner	Specia Functions	
Karoq	2018	NU	5F Information Control Unit 1	Read Fault Codes	
Karoq	2018	NU	5F Information Control Unit 1	Clear Fault Codes	
Karoq	2018	NU	5F Information Control Unit 1	Measuring Blocks	
Karoq	2018	NU	5F Information Control Unit 1	Output Tests	
Karoq	2018	NU	5F Information Control Unit 1	Specia Functions	
Karoq	2018	NU	65 Tire Pressure Monitoring 1	Read Fault Codes	
Karoq	2018	NU	65 Tire Pressure Monitoring 1	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Karoq	2018	NU	65 Tire Pressure Monitoring 1	Measuring Blocks	
Karoq	2018	NU	65 Tire Pressure Monitoring 1	Output Tests	
Karoq	2018	NU	65 Tire Pressure Monitoring 1	Specia Functions	
Karoq	2018	NU	69 Trailer Function	Read Fault Codes	
Karoq	2018	NU	69 Trailer Function	Clear Fault Codes	
Karoq	2018	NU	69 Trailer Function	Measuring Blocks	
Karoq	2018	NU	69 Trailer Function	Output Tests	
Karoq	2018	NU	69 Trailer Function	Specia Functions	
Karoq	2018	NU	6C Camera System Rear View	Read Fault Codes	
Karoq	2018	NU	6C Camera System Rear View	Clear Fault Codes	
Karoq	2018	NU	6C Camera System Rear View	Measuring Blocks	
Karoq	2018	NU	6C Camera System Rear View	Output Tests	
Karoq	2018	NU	6C Camera System Rear View	Specia Functions	
Karoq	2018	NU	6D Deck Lid Control Unit	Read Fault Codes	
Karoq	2018	NU	6D Deck Lid Control Unit	Clear Fault Codes	
Karoq	2018	NU	6D Deck Lid Control Unit	Measuring Blocks	
Karoq	2018	NU	6D Deck Lid Control Unit	Output Tests	
Karoq	2018	NU	6D Deck Lid Control Unit	Specia Functions	
Karoq	2018	NU	75 Telematics Communication Unit	Read Fault Codes	
Karoq	2018	NU	75 Telematics Communication Unit	Clear Fault Codes	
Karoq	2018	NU	75 Telematics Communication Unit	Measuring Blocks	
Karoq	2018	NU	75 Telematics Communication Unit	Output Tests	
Karoq	2018	NU	75 Telematics Communication Unit	Specia Functions	
Karoq	2018	NU	76 Parking Assistance	Read Fault Codes	
Karoq	2018	NU	76 Parking Assistance	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Karoq	2018	NU	76 Parking Assistance	Measuring Blocks	
Karoq	2018	NU	76 Parking Assistance	Output Tests	
Karoq	2018	NU	76 Parking Assistance	Specia Functions	
Karoq	2018	NU	A5 Front Sensors Driver Assistance System	Read Fault Codes	
Karoq	2018	NU	A5 Front Sensors Driver Assistance System	Clear Fault Codes	
Karoq	2018	NU	A5 Front Sensors Driver Assistance System	Measuring Blocks	
Karoq	2018	NU	A5 Front Sensors Driver Assistance System	Output Tests	
Karoq	2018	NU	A5 Front Sensors Driver Assistance System	Specia Functions	
Karoq	2018	NU	A9 Actuator For Structure-Borne Sound	Read Fault Codes	
Karoq	2018	NU	A9 Actuator For Structure-Borne Sound	Clear Fault Codes	
Karoq	2018	NU	A9 Actuator For Structure-Borne Sound	Measuring Blocks	
Karoq	2018	NU	A9 Actuator For Structure-Borne Sound	Output Tests	
Karoq	2018	NU	A9 Actuator For Structure-Borne Sound	Specia Functions	
Karoq	2018	NU	B7 Access Startsystem Interface	Read Fault Codes	
Karoq	2018	NU	B7 Access Startsystem Interface	Clear Fault Codes	
Karoq	2018	NU	B7 Access Startsystem Interface	Measuring Blocks	
Karoq	2018	NU	B7 Access Startsystem Interface	Output Tests	
Karoq	2018	NU	B7 Access Startsystem Interface	Specia Functions	
Karoq	2018	NU	BB Door Electronics Rear Driver Side	Read Fault Codes	
Karoq	2018	NU	BB Door Electronics Rear Driver Side	Clear Fault Codes	
Karoq	2018	NU	BB Door Electronics Rear Driver Side	Measuring Blocks	
Karoq	2018	NU	BB Door Electronics Rear Driver Side	Output Tests	
Karoq	2018	NU	BB Door Electronics Rear Driver Side	Specia Functions	
Karoq	2018	NU	BC Door Electronics Rear Passenger Side	Read Fault Codes	
Karoq	2018	NU	BC Door Electronics Rear Passenger Side	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Karoq	2018	NU	BC Door Electronics Rear Passenger Side	Measuring Blocks	
Karoq	2018	NU	BC Door Electronics Rear Passenger Side	Output Tests	
Karoq	2018	NU	BC Door Electronics Rear Passenger Side	Specia Functions	
Karoq	2018	NU	C0 Actuator For Exterior Noise	Read Fault Codes	
Karoq	2018	NU	C0 Actuator For Exterior Noise	Clear Fault Codes	
Karoq	2018	NU	C0 Actuator For Exterior Noise	Measuring Blocks	
Karoq	2018	NU	C0 Actuator For Exterior Noise	Output Tests	
Karoq	2018	NU	C0 Actuator For Exterior Noise	Specia Functions	
Karoq	2018	NU	CA Control Module For Sunroof	Read Fault Codes	
Karoq	2018	NU	CA Control Module For Sunroof	Clear Fault Codes	
Karoq	2018	NU	CA Control Module For Sunroof	Measuring Blocks	
Karoq	2018	NU	CA Control Module For Sunroof	Output Tests	
Karoq	2018	NU	CA Control Module For Sunroof	Specia Functions	
Karoq	2018	NU	D6 Light Control Left 2	Read Fault Codes	
Karoq	2018	NU	D6 Light Control Left 2	Clear Fault Codes	
Karoq	2018	NU	D6 Light Control Left 2	Measuring Blocks	
Karoq	2018	NU	D6 Light Control Left 2	Output Tests	
Karoq	2018	NU	D6 Light Control Left 2	Specia Functions	
Karoq	2018	NU	D7 Light Control Right 2	Read Fault Codes	
Karoq	2018	NU	D7 Light Control Right 2	Clear Fault Codes	
Karoq	2018	NU	D7 Light Control Right 2	Measuring Blocks	
Karoq	2018	NU	D7 Light Control Right 2	Output Tests	
Karoq	2018	NU	D7 Light Control Right 2	Specia Functions	
Karoq	2018	NU	DD Control Module 2 For Sunroof	Read Fault Codes	
Karoq	2018	NU	DD Control Module 2 For Sunroof	Clear Fault Codes	

model	year	chassis	system	function	subfunction
Karoq	2018	NU	DD Control Module 2 For Sunroof	Measuring Blocks	
Karoq	2018	NU	DD Control Module 2 For Sunroof	Output Tests	
Karoq	2018	NU	DD Control Module 2 For Sunroof	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	01 Engine Control Module 1	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	01 Engine Control Module 1	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	01 Engine Control Module 1	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	01 Engine Control Module 1	Output Tests	
SAIC-VW Karoq	2017-2018	0X	01 Engine Control Module 1	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	02 Transmission Control Module	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	02 Transmission Control Module	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	02 Transmission Control Module	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	02 Transmission Control Module	Output Tests	
SAIC-VW Karoq	2017-2018	0X	02 Transmission Control Module	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	03 Brakes 1	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	03 Brakes 1	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	03 Brakes 1	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	03 Brakes 1	Output Tests	
SAIC-VW Karoq	2017-2018	0X	03 Brakes 1	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	06 Seat Adjustment Passenger Side	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	06 Seat Adjustment Passenger Side	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	06 Seat Adjustment Passenger Side	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	06 Seat Adjustment Passenger Side	Output Tests	
SAIC-VW Karoq	2017-2018	0X	06 Seat Adjustment Passenger Side	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	08 Air Conditioning	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	08 Air Conditioning	Clear Fault Codes	

model	year	chassis	system	function	subfunction
SAIC-VW Karoq	2017-2018	0X	08 Air Conditioning	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	08 Air Conditioning	Output Tests	
SAIC-VW Karoq	2017-2018	0X	08 Air Conditioning	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	09 Central Electrics	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	09 Central Electrics	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	09 Central Electrics	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	09 Central Electrics	Output Tests	
SAIC-VW Karoq	2017-2018	0X	09 Central Electrics	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	13 Adaptive Cruise Control	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	13 Adaptive Cruise Control	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	13 Adaptive Cruise Control	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	13 Adaptive Cruise Control	Output Tests	
SAIC-VW Karoq	2017-2018	0X	13 Adaptive Cruise Control	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	15 Airbag	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	15 Airbag	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	15 Airbag	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	15 Airbag	Output Tests	
SAIC-VW Karoq	2017-2018	0X	15 Airbag	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	16 Steering Column Electronics	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	16 Steering Column Electronics	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	16 Steering Column Electronics	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	16 Steering Column Electronics	Output Tests	
SAIC-VW Karoq	2017-2018	0X	16 Steering Column Electronics	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	17 Dash Board	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	17 Dash Board	Clear Fault Codes	

model	year	chassis	system	function	subfunction
SAIC-VW Karoq	2017-2018	0X	17 Dash Board	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	17 Dash Board	Output Tests	
SAIC-VW Karoq	2017-2018	0X	17 Dash Board	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	19 Gateway	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	19 Gateway	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	19 Gateway	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	19 Gateway	Output Tests	
SAIC-VW Karoq	2017-2018	0X	19 Gateway	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	20 High Beam Assistance	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	20 High Beam Assistance	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	20 High Beam Assistance	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	20 High Beam Assistance	Output Tests	
SAIC-VW Karoq	2017-2018	0X	20 High Beam Assistance	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	22 All Wheel Control	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	22 All Wheel Control	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	22 All Wheel Control	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	22 All Wheel Control	Output Tests	
SAIC-VW Karoq	2017-2018	0X	22 All Wheel Control	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	23 Brake Boost	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	23 Brake Boost	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	23 Brake Boost	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	23 Brake Boost	Output Tests	
SAIC-VW Karoq	2017-2018	0X	23 Brake Boost	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	2B Steering Column Locking	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	2B Steering Column Locking	Clear Fault Codes	

model	year	chassis	system	function	subfunction
SAIC-VW Karoq	2017-2018	0X	2B Steering Column Locking	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	2B Steering Column Locking	Output Tests	
SAIC-VW Karoq	2017-2018	0X	2B Steering Column Locking	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	36 Seat Adjustment Driver Side	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	36 Seat Adjustment Driver Side	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	36 Seat Adjustment Driver Side	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	36 Seat Adjustment Driver Side	Output Tests	
SAIC-VW Karoq	2017-2018	0X	36 Seat Adjustment Driver Side	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	3C Lane Change Assistant	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	3C Lane Change Assistant	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	3C Lane Change Assistant	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	3C Lane Change Assistant	Output Tests	
SAIC-VW Karoq	2017-2018	0X	3C Lane Change Assistant	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	42 Door Electronics Driver Side	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	42 Door Electronics Driver Side	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	42 Door Electronics Driver Side	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	42 Door Electronics Driver Side	Output Tests	
SAIC-VW Karoq	2017-2018	0X	42 Door Electronics Driver Side	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	44 Steering Assistance	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	44 Steering Assistance	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	44 Steering Assistance	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	44 Steering Assistance	Output Tests	
SAIC-VW Karoq	2017-2018	0X	44 Steering Assistance	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	4B Multifunction Module	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	4B Multifunction Module	Clear Fault Codes	

model	year	chassis	system	function	subfunction
SAIC-VW Karoq	2017-2018	0X	4B Multifunction Module	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	4B Multifunction Module	Output Tests	
SAIC-VW Karoq	2017-2018	0X	4B Multifunction Module	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	52 Door Electronics Passenger Side	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	52 Door Electronics Passenger Side	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	52 Door Electronics Passenger Side	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	52 Door Electronics Passenger Side	Output Tests	
SAIC-VW Karoq	2017-2018	0X	52 Door Electronics Passenger Side	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	55 Headlight Regulation	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	55 Headlight Regulation	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	55 Headlight Regulation	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	55 Headlight Regulation	Output Tests	
SAIC-VW Karoq	2017-2018	0X	55 Headlight Regulation	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	5F Information Control Unit 1	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	5F Information Control Unit 1	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	5F Information Control Unit 1	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	5F Information Control Unit 1	Output Tests	
SAIC-VW Karoq	2017-2018	0X	5F Information Control Unit 1	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	6D Deck Lid Control Unit	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	6D Deck Lid Control Unit	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	6D Deck Lid Control Unit	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	6D Deck Lid Control Unit	Output Tests	
SAIC-VW Karoq	2017-2018	0X	6D Deck Lid Control Unit	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	76 Parking Assistance	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	76 Parking Assistance	Clear Fault Codes	

model	year	chassis	system	function	subfunction
SAIC-VW Karoq	2017-2018	0X	76 Parking Assistance	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	76 Parking Assistance	Output Tests	
SAIC-VW Karoq	2017-2018	0X	76 Parking Assistance	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	A5 Front Sensors Driver Assistance System	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	A5 Front Sensors Driver Assistance System	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	A5 Front Sensors Driver Assistance System	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	A5 Front Sensors Driver Assistance System	Output Tests	
SAIC-VW Karoq	2017-2018	0X	A5 Front Sensors Driver Assistance System	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	B7 Access Startsystem Interface	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	B7 Access Startsystem Interface	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	B7 Access Startsystem Interface	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	B7 Access Startsystem Interface	Output Tests	
SAIC-VW Karoq	2017-2018	0X	B7 Access Startsystem Interface	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	CA Control Module For Sunroof	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	CA Control Module For Sunroof	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	CA Control Module For Sunroof	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	CA Control Module For Sunroof	Output Tests	
SAIC-VW Karoq	2017-2018	0X	CA Control Module For Sunroof	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	D6 Light Control Left 2	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	D6 Light Control Left 2	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	D6 Light Control Left 2	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	D6 Light Control Left 2	Output Tests	
SAIC-VW Karoq	2017-2018	0X	D6 Light Control Left 2	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	D7 Light Control Right 2	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	D7 Light Control Right 2	Clear Fault Codes	

model	year	chassis	system	function	subfunction
SAIC-VW Karoq	2017-2018	0X	D7 Light Control Right 2	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	D7 Light Control Right 2	Output Tests	
SAIC-VW Karoq	2017-2018	0X	D7 Light Control Right 2	Specia Functions	
SAIC-VW Karoq	2017-2018	0X	DD Control Module 2 For Sunroof	Read Fault Codes	
SAIC-VW Karoq	2017-2018	0X	DD Control Module 2 For Sunroof	Clear Fault Codes	
SAIC-VW Karoq	2017-2018	0X	DD Control Module 2 For Sunroof	Measuring Blocks	
SAIC-VW Karoq	2017-2018	0X	DD Control Module 2 For Sunroof	Output Tests	
SAIC-VW Karoq	2017-2018	0X	DD Control Module 2 For Sunroof	Specia Functions	
CUV	2017-2018	0N	01 Engine Control Module 1	Read Fault Codes	
CUV	2017-2018	0N	01 Engine Control Module 1	Clear Fault Codes	
CUV	2017-2018	0N	01 Engine Control Module 1	Measuring Blocks	
CUV	2017-2018	0N	01 Engine Control Module 1	Output Tests	
CUV	2017-2018	0N	01 Engine Control Module 1	Specia Functions	
CUV	2017-2018	0N	02 Transmission Control Module	Read Fault Codes	
CUV	2017-2018	0N	02 Transmission Control Module	Clear Fault Codes	
CUV	2017-2018	0N	02 Transmission Control Module	Measuring Blocks	
CUV	2017-2018	0N	02 Transmission Control Module	Output Tests	
CUV	2017-2018	0N	02 Transmission Control Module	Specia Functions	
CUV	2017-2018	0N	03 Brakes 1	Read Fault Codes	
CUV	2017-2018	0N	03 Brakes 1	Clear Fault Codes	
CUV	2017-2018	0N	03 Brakes 1	Measuring Blocks	
CUV	2017-2018	0N	03 Brakes 1	Output Tests	
CUV	2017-2018	0N	03 Brakes 1	Specia Functions	
CUV	2017-2018	0N	05 Kessy	Read Fault Codes	
CUV	2017-2018	0N	05 Kessy	Clear Fault Codes	

model	year	chassis	system	function	subfunction
CUV	2017-2018	0N	05 Kessy	Measuring Blocks	
CUV	2017-2018	0N	05 Kessy	Output Tests	
CUV	2017-2018	0N	05 Kessy	Specia Functions	
CUV	2017-2018	0N	08 Air Conditioning	Read Fault Codes	
CUV	2017-2018	0N	08 Air Conditioning	Clear Fault Codes	
CUV	2017-2018	0N	08 Air Conditioning	Measuring Blocks	
CUV	2017-2018	0N	08 Air Conditioning	Output Tests	
CUV	2017-2018	0N	08 Air Conditioning	Specia Functions	
CUV	2017-2018	0N	09 Central Electrics	Read Fault Codes	
CUV	2017-2018	0N	09 Central Electrics	Clear Fault Codes	
CUV	2017-2018	0N	09 Central Electrics	Measuring Blocks	
CUV	2017-2018	0N	09 Central Electrics	Output Tests	
CUV	2017-2018	0N	09 Central Electrics	Specia Functions	
CUV	2017-2018	0N	15 Airbag	Read Fault Codes	
CUV	2017-2018	0N	15 Airbag	Clear Fault Codes	
CUV	2017-2018	0N	15 Airbag	Measuring Blocks	
CUV	2017-2018	0N	15 Airbag	Output Tests	
CUV	2017-2018	0N	15 Airbag	Specia Functions	
CUV	2017-2018	0N	17 Dash Board	Read Fault Codes	
CUV	2017-2018	0N	17 Dash Board	Clear Fault Codes	
CUV	2017-2018	0N	17 Dash Board	Measuring Blocks	
CUV	2017-2018	0N	17 Dash Board	Output Tests	
CUV	2017-2018	0N	17 Dash Board	Specia Functions	
CUV	2017-2018	0N	19 Gateway	Read Fault Codes	
CUV	2017-2018	0N	19 Gateway	Clear Fault Codes	

model	year	chassis	system	function	subfunction
CUV	2017-2018	0N	19 Gateway	Measuring Blocks	
CUV	2017-2018	0N	19 Gateway	Output Tests	
CUV	2017-2018	0N	19 Gateway	Specia Functions	
CUV	2017-2018	0N	25 Immobilizer	Read Fault Codes	
CUV	2017-2018	0N	25 Immobilizer	Clear Fault Codes	
CUV	2017-2018	0N	25 Immobilizer	Measuring Blocks	
CUV	2017-2018	0N	25 Immobilizer	Output Tests	
CUV	2017-2018	0N	25 Immobilizer	Specia Functions	
CUV	2017-2018	0N	2B Steering Column Locking	Read Fault Codes	
CUV	2017-2018	0N	2B Steering Column Locking	Clear Fault Codes	
CUV	2017-2018	0N	2B Steering Column Locking	Measuring Blocks	
CUV	2017-2018	0N	2B Steering Column Locking	Output Tests	
CUV	2017-2018	0N	2B Steering Column Locking	Specia Functions	
CUV	2017-2018	0N	44 Steering Assistance	Read Fault Codes	
CUV	2017-2018	0N	44 Steering Assistance	Clear Fault Codes	
CUV	2017-2018	0N	44 Steering Assistance	Measuring Blocks	
CUV	2017-2018	0N	44 Steering Assistance	Output Tests	
CUV	2017-2018	0N	44 Steering Assistance	Specia Functions	
CUV	2017-2018	0N	5F Information Control Unit 1	Read Fault Codes	
CUV	2017-2018	0N	5F Information Control Unit 1	Clear Fault Codes	
CUV	2017-2018	0N	5F Information Control Unit 1	Measuring Blocks	
CUV	2017-2018	0N	5F Information Control Unit 1	Output Tests	
CUV	2017-2018	0N	5F Information Control Unit 1	Specia Functions	
CUV	2017-2018	0N	61 Battery Regulation	Read Fault Codes	
CUV	2017-2018	0N	61 Battery Regulation	Clear Fault Codes	

model	year	chassis	system	function	subfunction
CUV	2017-2018	0N	61 Battery Regulation	Measuring Blocks	
CUV	2017-2018	0N	61 Battery Regulation	Output Tests	
CUV	2017-2018	0N	61 Battery Regulation	Specia Functions	